 

MULTI ROASTER

USER MANUAL

CFR-331R
CFR-331G

CUCKOO

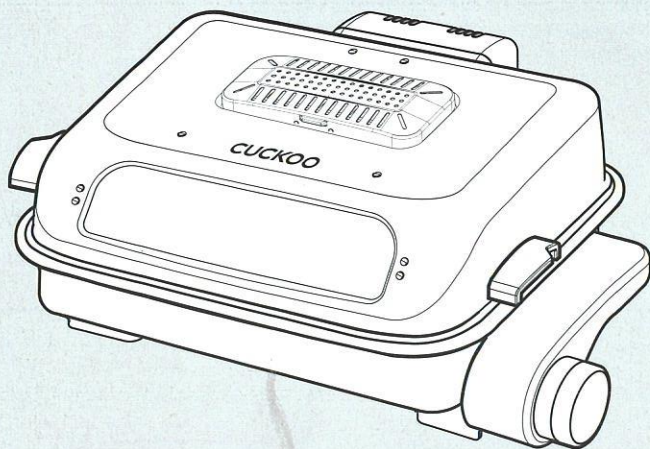

CUCKOO

HOW TO USE EXTENSION CORD / COMMENT UTILISER UNE RALLONGE

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- B. Extension cord should be used properly.
- C. Extension cord usage for the Multi roaster :
 - (1) The correct rated voltage should be used for the fish roaster.
 - (2) If the appliance is set on the ground, the extension cord should also be set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

Remarque :

- A. Un cordon d'alimentation court (ou câble) est fourni pour réduire les dangers d'emmêlement causés par un cordon plus long.
- B. La rallonge doit être utilisée correctement.
- C. L'utilisation de la rallonge pour le poisson torréfacteur :
 - (1) La tension nominale correcte doit être utilisée pour le poisson torréfacteur.
 - (2) Si l'appareil est installé sur le sol, la rallonge doit aussi être installée sur le sol.
 - (3) Les câbles et la rallonge doivent toujours être disposés dans le but d'éviter les dangers pour les enfants.

Cet appareil dispose d'une fiche polarisée : (une broche est plus large que l'autre).

Par mesure de sécurité, cette fiche ne peut s'enfoncer dans une prise polarisée que dans un seul sens.

 
Si la fiche ne s'enfonce pas correctement dans la prise, retournez-la.

Si elle ne s'enfonce toujours pas, contactez un électricien qualifié.

Veuillez respecter cette mesure de sécurité.

Dear customers,

Thank you for purchasing CUCKOO Multi Roaster. Please retain this manual for future reference. This manual will be of great help should you have any questions or when the functions do not work properly.

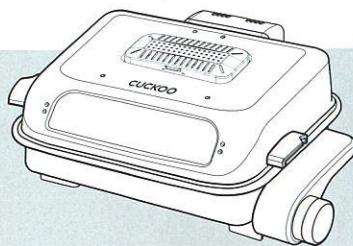

Product Benefits

- **Non-stick Grill Wire Rack (Grill Wire Rack)**
A layer of fluorocarbon polymer coating prevents food from sticking to the rack during cooking.
- **Easy to Clean - 3 Separable Parts**
The main body, lid and drip tray can be easily separated and reassembled, facilitating easy cleaning.
- **Viewing Window**
The viewing window allows easy monitoring of the cooking progress.
- **Built-in Lamp**
Helps view cooking process more clearly.
- **Top & Bottom Double Heating**
The top & bottom double heating eliminates the need for repeated flips.
- **Ceramic Filter**
The ceramic filter works effectively in getting rid of the odor and smoke from cooking.
- **Oil Adsorption Filter**
Removes odor and oil residue in the smoke once again that has been through a ceramic filter.
- **Auto Timer**
The convenient auto timer allows you to set the desired cooking time up to 30 minutes.
- **Cooking Finish Alarm**
It is convenient that the alarm bell sounds at the end of the cooking time.
- **Adjustable Grill Wire Rack & Wire Mesh**
The reversible grill wire rack and wire mesh allows cooking a wider range of thin and thick meat and vegetables.
- **Triple Safety Device**
The triple safety device with temperature overshoot protection, abnormal overheating protection and automatic timing system allows safer use of the appliance.
- **Grill Wire Rack & Wire Mesh**
The use of the wire rack and mesh gives you great versatility when cooking.

Do not use this appliance for any purpose other than specified in this manual as it is designed for home use only.

- Do not use this appliance for any unusual purpose including commercial purposes other than its intended use.
- It may cause fire or electric shock, possibly resulting in serious injury.

The usual manual includes the product warranty. Please read the user manual before use for correct use.

 
Be sure to read this manual thoroughly and keep the manual in easy-to-reach place for easy access.

※Caution: Please read the user manual for long-lasting use without defects

가족 여러분!

저희 쿠쿠 양면 멀티 그릴을 이용해 주셔서 감사합니다.

이 사용설명서(보증서 포함)는 잘 보관하여 주십시오.
사용 중에 모르는 사항이 있을 때나 기능이 제대로 발휘되지 않을 때 많은 도움이 될 것입니다.

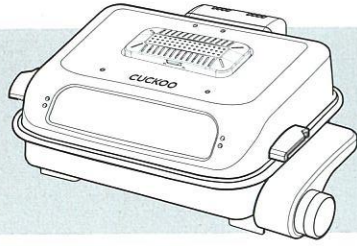

이런 점이 좋습니다.

- 조리중 음식물이 눌러 붙지 않습니다.(석쇠망)
석쇠망에 불화탄소수지 코팅을 적용하여 조리중 음식물이 눌러 붙지 않습니다.
- 3단 분리형으로 세척이 용이
뚜껑, 물받이, 본체의 3단으로 분리 및 조립이 용이하여 세척이 간편합니다.
- 조리 확인창 채용
조리 확인창이 있어 조리중 음식물의 조리 상태 확인이 가능하여 편리합니다.
CFR-331R/G 모델의 조리 확인창은 더욱 넓고 커져 음식물 조리상태를 더욱 명확히 볼 수 있습니다.
- 조리확인 램프 채용(CFR-331R/G)
조리확인 램프로 내부 조리상태를 더욱 명확히 볼 수 있습니다.
- 상·하 히터 동시 가열
상·하 히터를 동시에 가열시켜 음식물을 뒤집을 필요 없이 한 번에 조리가 가능합니다.
- 세라믹 필터 채용
세라믹 필터를 채용하여 조리중 발생하는 냄새 및 연기를 제거해 줍니다.
- 유분흡착필터 채용(CFR-331R/G)
CFR-331R/G 모델은 세라믹 필터에 더하여 유분흡착필터를 지원합니다. 세라믹 필터가 조리 중 발생하는 냄새를 1차적으로 제거하고난 후, 유분흡착필터가 냄새를 한번 더 제거하고 연기속의 기름기까지 잡아줍니다.
- 자동 타이머 기능
0~30분까지 원하는 조리시간 설정이 가능하여 편리합니다.
- 조리 완료 알람 채용
조리가 완료되면 알람벨이 울려 조리 완료를 알려주어 편리합니다.
- 석쇠망·그물망 높이 조절 가능
석쇠망, 그물망을 앞, 뒤로 뒤집으면 높이 조절이 가능하여 두꺼운 재료에서 얇은 재료까지 보다 다양한 요리가 가능합니다.
- 3중 안전장치
온도과승 방지 장치, 이상 과열 방지 장치, 자동 시간 맞춤장치 등의 3중 안전장치 채용으로 보다 안전하게 사용 가능합니다.
- 석쇠망, 그물망 채용
석쇠망과 그물망을 채용하여 제품한대로 다양한 요리가 가능합니다.

본 제품은 가정용이므로 사용설명서 내용 이외의 용도로 사용하지 마십시오.

- 매장용·업소용 등의 본 제품이 의도하지 않는 비정상적인 목적에는 사용을 하지 마십시오.
- 화재, 감전, 상처(상해)의 원인이 됩니다.

사용설명서에 제품보증서가 포함되어 있습니다. 사용전에 "사용설명서"를 반드시 읽고 정확하게 사용하여 주십시오.
읽고 난 뒤에는 제품을 사용하는 사람이 항상 볼 수 있는 곳에 보관하여 주십시오.

※ 주의 : 제품을 고정 없이 오래 사용하시려면 사용설명서를 꼭 읽어주십시오.

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
 2. Do not touch hot surfaces. Use handles or knobs.
 3. To protect against fire, electric shock or injury to persons do not immerse cord, plugs, or the appliance in water or any other liquid.
 4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
 5. Unplug cord from outlet when not in use and before cleaning.
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
 6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
 8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
 9. Do not use outdoors.
 10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
 11. Do not place on or near a hot gas, electric burner, or in a heated oven.
 12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
 13. Do not use this appliance for other than its intended use.
 14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
 15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
 16. Fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
 17. This appliance cooks under pressure. Improper use may result in scalding injury.
- ※ Do not place on or near a hot gas or electric burner, in a heated oven.
 - ※ This appliance has a polarized plug(one blade is wider than the other.) To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not attempt to modify the plug in any way.
 - ※ A short power-supply cord(or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - ※ Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - ※ If a longer detachable power-supply cord or extension cord is used.
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS

IMPORTANTES MESURES DE PROTECTION

1. Lisez toutes les instructions avant d'utiliser cet appareil.
2. Ne touchez pas les surfaces chaudes. Utilisez les poignées ou les boutons.
3. Pour prévenir les risques d'incendie, les chocs électriques et/ou les blessures, ne plongez pas le cordon, les prises ou le appareil dans l'eau ou tout autre liquide.
4. Une surveillance étroite est nécessaire quand cet appareil est utilisé par des enfants ou qu'il se situe à leur portée. Cet appareil n'est pas prévu pour être utilisé par de jeunes enfants sans surveillance.
5. Débranchez le cordon de la prise lorsque vous ne vous servez pas de l'appareil et avant de le nettoyer.
Laissez l'appareil refroidir avant de remettre en place ou de retirer des pièces, et avant de le nettoyer.
6. N'utilisez aucun appareil si le cordon ou la fiche est endommagé, s'il ne fonctionne pas correctement ou s'il est endommagé de quelque façon que ce soit. Renvoyez l'appareil à un centre technique agréé le plus proche pour le faire examiner, réparer ou régler.
7. L'utilisation d'accessoires non recommandés par le fabricant peut causer un incendie, un choc électrique et/ou des blessures.
8. Si le cordon d'alimentation est endommagé, il doit être remplacé par un cordon ou ensemble prévu à cet effet, disponible auprès du fabricant ou de réparateurs agréés.
9. N'utilisez pas l'appareil à l'extérieur.
10. Ne laissez pas le cordon pendre d'une table ou d'un comptoir. Ne le laissez pas non plus en contact avec une surface chaude.
11. Ne placez pas l'appareil au-dessus ou près d'un brûleur à gaz, sur une plaque électrique ou dans un four chaud.
12. Branchez toujours la fiche sur l'appareil en premier, puis branchez le cordon dans la prise murale. Pour débrancher, ou désactiver toutes les commandes, retirez la fiche de la prise murale.
13. N'utilisez pas cet appareil à des fins autres que celles pour lesquelles il a été conçu.
14. Une prudence extrême est requise lorsque vous déplacez l'appareil contenant de l'huile chaude ou tout autre liquide chaud.
15. Des denrées alimentaires de taille excessive, les emballages sous feuille métallique, ou les ustensiles ne doivent pas être insérés dans l'appareil car ils constituent un risque d'incendie ou de choc électrique.
16. Un incendie peut se déclarer si l'appareil est couvert ou en contact avec des matériaux inflammables, y compris des rideaux ou des draperies, des murs, etc durant son fonctionnement.
17. Afin de réduire le risque de choc électrique, faites cuire uniquement dans le récipient amovible fourni.
18. Cet appareil cuit sous pression. Un mauvais usage peut entraîner des brûlures. Avant d'utiliser l'appareil, mettez l'appareil bien en place et fermez-le. Reportez-vous à la section « Instructions d'utilisation

CONSERVEZ CES INSTRUCTIONS

CONTENTS

Before Use	● Before Use How to use extension cord	2
	Product Benefits	3
	Important safeguards	5~6
	Instructions for Oil Adsorption Filter	9
	Warnings for Safe Use	10~15
	Cautions for Safe Use	16~19
	Structure and names of Parts of Product	20~21
	How to disassemble	22
	How to assemble	23
During Use	● How to Use	24~25
	Cooking Guide	26~28
	Care and Cleaning/Storage	29~30
Before Asking for Support	● Please check before asking for Support.	31
Service Guide	● Product Specifications	46

CONTENTS

사용하기전에	● 흡착필터 사용안내	32
	안전상의 경고	33
	안전상의 주의	34
	CFR-331R/G의 구조 및 명칭 / 부속품 / 기능조작부	35~36
	분리방법	37~38
	조립방법	39~40
사용할때	● 사용방법	41~42
	청소방법	43
	보관방법	44
고장신고전에	● 고장신고전에 확인하십시오.	45

Instructions for Oil Adsorption Filter

What is an oil adsorption filter?

- An oil adsorption filter removes odor and oil residue in the smoke once again that has been through a ceramic filter.

Instructions for Oil Adsorption Filter

- Please insert an oil adsorption filter before using the product.
- Oil adsorption filters are consumable. Discard used oil adsorption filters.
- Oil adsorption filters cannot be washed and reused.
- The oil adsorption filter must be kept away from heat sources and out of direct light.
- It is recommended that the oil adsorption filter be replaced after single use. Replace the oil adsorption filter if discolored, damaged or contaminated.
- If the unit has been left unused for a while, replace the oil adsorption filter before you start using it again.

Oil adsorption filters suppliers

- Please contact with customer service center to purchase extra oil adsorption filter.

Warnings for Safe Use

- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- 'Warning' and 'Caution' are different as follows.


Warning	This means that the action it describes may result in death or severe injury.
Caution	This means that the action it describes may result in injury or property damage.

- This sign is intended to remind and alert that something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.
- Indicates a prohibition
- Indicates an instruction

Warning Prohibited

Please use the product only with a Power Outlet exclusively for 120V with at least a rating of 15A and when properly grounded. Do not plug multiple devices into the same Power Outlet simultaneously.

 - If you use it with a lot of products, it may cause a fire or an electric shock.
- Please check the power outlet regularly.
- If it is not properly grounded, it may cause electric shock due to short circuit.
- If there is a foreign substance or moisture on the Power Plug, wipe it thoroughly before use.

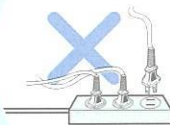


Stop using the product if the Power Cord or the Power Plug is damaged or is shaking, and contact our Customer Service Center.

- If the sheath of the Power Cord is peeled off or chopped during use due to negligence, it may cause fire or electric shock. Thus, please check the status of the Power Cord, Power Plug, and Power Outlet frequently.
- To prevent dangerous situations arising from the damage of the Power Cord or the Power Plug, please contact the manufacturer, distributor or certified technician (servicemen) for replacement.
- We strongly recommend that the damaged parts be repaired at a designated service center



Do not bend, tie or pull the Power Cord by force.

 - It may cause an electric shock or fire.

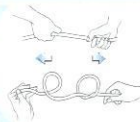

When there is dust on the Power Plug, wipe it off with a dry cloth.

- It may cause an electric shock or fire.



Warning Instruction

When putting in or pulling out the Power Plug, first remove moisture on your hands and then put in or pull out the Power Plug by holding the Power Plug.

- If you do not do so, it may cause an electric shock.



Do not place heavy objects on the power cord or let it trapped under the unit.

- It may cause a fire or electric shock.

Prevent the power plug or the power cord from being damaged by a pet or a sharp metallic object such as a nail.

- Damaged power cord may cause short circuit, electric shocks or fire. Check the power cord and plug regularly for any damage.



Warnings for Safe Use

Warning Prohibited

Do not immerse the unit in a sink with water or any other liquids.

- It may cause electric shocks or fire.



Do not move the unit while in use.

- Its hot surfaces or oil may cause burns.



Use well away from direct sunlight, any gas flame, lighter, heat-generating device or inflammable element.

- It may cause distortion and discoloration, electric leakage, electric shocks or fire.



Do not touch the viewing window before/after and while cooking.

- It may cause a fire or electric shock.



While or shortly after cooking, avoid contact with hot surfaces except the handle, including the heater, lid, reflecting plate and drip tray.

- They may be still hot and can cause burns.

 Allow it to cool before cleaning.



Do not operate it with the lid on without food on the grill.

- Heating the unit with no food is very dangerous and may cause discoloration and breakdown of the parts.
- Always turn the timer to OFF and unplug the power cord when not in use.



Do not disassemble or remodel the product.

- It may cause a fire or electric shock.
- Do not allow anyone other than authorized service technicians to disassemble or repair the product.
- Please contact our Customer Service for any enquiry on repair or breakdown.



 
Do not heat up sealed tins or bottles, inflammable fuels or metal objects such as knives and forks.

- They may burst causing injury or burns.



Do not look directly at the lamp when it is turned on while cooking.

- It may damage your eyes or cause other injuries.

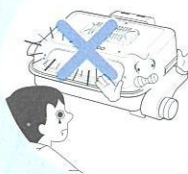

This Product is not intended for use by people (including children) who lack physical or mental abilities, or lack experience and knowledge to be able to use the product safely without supervision or instruction.

- Do not let children play with the device.
- It may cause electric shock or injury.



Warnings for Safe Use

Warning Prohibited

 
Do not leave the lid open while cooking. All cooking operations must take place with the lid closed.

- It may cause burns or electric shock.



Do not plug in the power or heat the unit without either the lid or drip tray.

- It may cause burns or accidents.

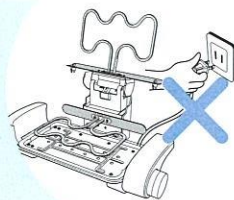

Turn the timer to OFF position and remove the power plug when not in use.

- Otherwise, it may self-heat and self-ignite, possible resulting in fire.



 
Do not use in a sink or bath where the appliance may have contact with water or chemical substance.

- There is a risk of electric leakage and shock.



Always operate on level surface but not on a pad, cushion or electric blanket.

- Otherwise, it may cause fire.

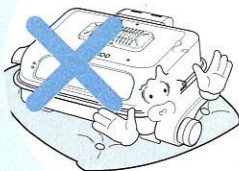







Never use for any purpose other than cooking food.

- It may cause a malfunction of the product or accidents.



Avertissements pour une utilisation sécuritaire


- Veuillez respecter les < avertissements pour une utilisation sécuritaire > afin d'assurer une utilisation sécuritaire et appropriée de l'appareil et prévenir les accidents et les situations dangereuses.
- La section < Avertissements pour une utilisation sécuritaire > est divisée en sous-sections < Avertissements > et < Mises en garde > définies comme suit :

<p> Avertissement</p>	<p>Situation potentiellement dangereuse pouvant causer de sérieuses blessures ou la mort si non évitée.</p>	<p> • Ce symbole indique une situation potentiellement dangereuse dans des circonstances particulières qui requièrent votre attention.</p>
<p> Mise en garde</p>	<p>Situation potentiellement dangereuse pouvant causer des blessures mineures si non évitée.</p>	<p> • Veuillez lire attentivement les détails et suivre les instructions pour éviter les situations dangereuses.</p> <p> • Ce symbole indique qu'il faut < interdire > une certaine action.</p> <p> • Ce symbole indique qu'il faut < introduire > une certaine action.</p>

Avertissement Interdiction

Veuillez utiliser l'appareil seulement avec les prises de courant de 120 V exclusivement avec au moins un classement de 15A et une mise à la terre.

 Ne pas brancher plusieurs appareils dans la même prise de courant simultanément.

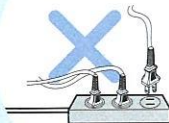

- Si vous l'utilisez avec plusieurs produits, cela peut causer un incendie ou un choc électrique. Veuillez vérifier régulièrement la prise de courant.
- S'il n'est pas correctement mis à la terre, il peut y avoir un risque de choc électrique ou d'incendie.
- S'il y a présence d'une substance étrangère ou de moisissure sur la fiche d'alimentation, nettoyez la surface avant utilisation.

Ne pas plier, serrer ou tirer le cordon d'alimentation en appliquant une force.



- Cela peut provoquer un choc électrique ou un incendie.

Arrêtez d'utiliser l'appareil si le cordon d'alimentation ou la fiche d'alimentation est endommagé ou que la prise de courant est instable et communiquez avec le service à la clientèle.



- Si la gaine du cordon d'alimentation est décollée ou coupée suite à une utilisation abusive, cela peut provoquer un incendie ou un choc électrique. Veuillez vérifier le cordon d'alimentation, la fiche d'alimentation ainsi que la prise de courant fréquemment.
- Pour éviter toute situation dangereuse provenant d'un cordon d'alimentation ou d'une fiche d'alimentation endommagée, veuillez communiquer avec le fabricant, le distributeur ou un technicien certifié (réparateur) pour un remplacement.
- Nous vous recommandons fortement de réparer les pièces endommagées dans un centre de service désigné.

Lorsque la fiche d'alimentation est poussiéreuse, essuyez-la à l'aide d'un chiffon sec.



Avertissement Instructions

Lorsque vous insérez ou retirez la fiche d'alimentation, veuillez tout d'abord assécher vos mains et par la suite, insérer ou retirer la fiche d'alimentation en la tenant fermement.



- Si vous ne respectez pas cette consigne, il peut y avoir risque de choc électronique.

Ne posez pas d'objets lourds sur le cordon d'alimentation et ne le laissez pas se coincer sous l'appareil.

- Cela peut provoquer un incendie ou un choc électrique.

Éloigner tout animal ou objet coupant et métallique comme un clou pour ne pas endommager la fiche et le cordon d'alimentation.



 
- Un cordon d'alimentation endommagé peut provoquer un court-circuit, des chocs électriques ou un incendie. Vérifier régulièrement le cordon d'alimentation et la prise de courant pour détecter tout dommage.

Avertissements pour une utilisation sécuritaire

⚠ Avertissement ❌ Interdiction

Ne pas immerger l'appareil dans un évier avec de l'eau ou tout autre liquide.

- Cela peut provoquer un choc électrique ou un incendie.

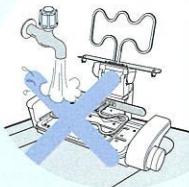


Ne déplacer pas l'appareil lorsqu'il est en marche.

- Ses surfaces chaudes ou son huile peuvent provoquer des brûlures.




Utiliser à distance de la lumière directe du soleil, de toute flamme de gaz, de tout briquet, de tout appareil générateur de chaleur ou de tout élément inflammable.

 - Cela peut provoquer des déformations et des décolorations, des fuites ou des chocs électriques ou un incendie.

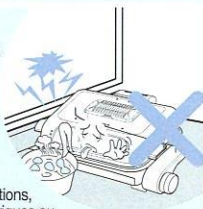

Ne pas toucher la fenêtre de visualisation avant/après et pendant la cuisson.

 - Cela peut provoquer un incendie ou un choc électrique.

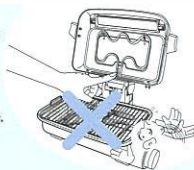

Pendant ou peu après la cuisson, évitez tout contact avec les surfaces chaudes, à l'exception de la poignée, y compris le chauffage, le couvercle, la plaque réfléchissante et le bac d'égouttage.

- Elles peuvent être encore chaudes et peuvent causer des brûlures.

⚠ Laisser refroidir avant de nettoyer.



Ne pas utiliser le gril avec le couvercle sans nourriture.

- Il est très dangereux de chauffer l'appareil sans nourriture, car cela peut entraîner une décoloration et une dégradation des pièces.
- Régler toujours la minuterie en mode ARRÊT et débrancher le cordon d'alimentation lorsque vous n'utilisez pas l'appareil.



Ne pas désassembler ou démonter l'appareil.

- Cela peut provoquer un incendie ou un choc électrique.
- Ne laissez personne d'autre que les fournisseurs de service autorisés démonter ou réparer l'appareil.
- Veuillez communiquer avec notre service à la clientèle pour toute demande de réparation ou en cas de panne.



Ne pas chauffer les boîtes ou les bouteilles scellées, les combustibles inflammables ou les objets métalliques comme les couteaux et les fourchettes.

- Elles peuvent éclater et causer des blessures ou des brûlures.



Ne pas regarder directement la lampe lorsqu'elle est allumée pendant la cuisson.

- Elle peut endommager vos yeux ou causer d'autres blessures.



Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques ou mentales sont déficientes ou qui manquent d'expérience ou de connaissances pour pouvoir utiliser l'appareil en toute sécurité sans supervision ou instructions.

- Ne laissez pas les enfants jouer avec l'appareil.
- Cela peut provoquer un choc électrique ou des blessures.



Avertissements pour une utilisation sécuritaire

⚠ Avertissement

Assurez-vous que la trappe soit bien fermée pendant la cuisson.

 
- Vous risqueriez une brûlure et un accident.



⊘ Interdiction


Ne branchez pas et ne faites pas fonctionner l'appareil sans la trappe et la lèchefrite.

- Vous risqueriez une brûlure et un accident.

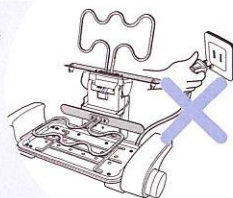

Mettez la minuterie en position « OFF » et débranchez l'appareil après chaque utilisation.

 - Dans le cas contraire, cela pourrait surchauffer, enflammer l'appareil et causer un incendie.

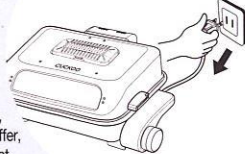

Veillez à ce que l'appareil ne soit pas à proximité de l'évier ou de matières chimiques pendant l'utilisation.

- Vous risqueriez un court-circuit et un choc électrique.



 
Ne posez jamais l'appareil sur un sol instable et recouvert de moquette ou sur un matelas chauffant.

- Cela pourrait provoquer un incendie.





N'utilisez l'appareil qu'à des fins de cuisson.

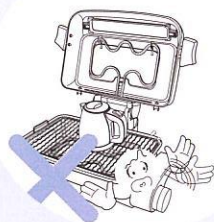- Si vous l'utilisez à d'autres fins, cela pourrait provoquer des pannes de l'appareil et des accidents.



Cautions for Safe Use

 **Caution**

 **Prohibited**

Do not immerse the lid, drip tray, grill wire rack or wire mesh in water to cool it quickly when still hot.

- It may cause deformation of the parts.



Do not use the wire rack and mesh for any other purpose or on a direct gas flame or fire.

- It may cause distortion of or damage to the wire rack and mesh



 
Do not store in a wet place.

- It may cause corrosion or malfunction of the product.



Do not use on a slope or uneven surface.

- It may cause burns or malfunction of the product.

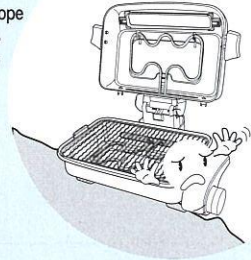


Do not scratch it with a sharp object.

- A metal spatula or any sharp object may damage the coated surfaces, shortening its lifespan.



Do not move while in use, and do not give severe impact on the product or drop the product.

 - It may cause burns as well as a breakdown or safety issue.

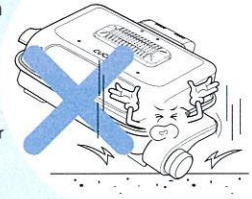


Cautions for Safe Use

! Caution ❌ Prohibited


Use well away from walls and furniture.

 - The steam or heat may cause distortion, discoloration or damage on the walls and furniture.

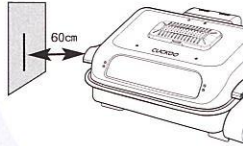


Do not use metallic sponges or sharp scrapers when cleaning the coated parts such as the lid, drip tray, grill wire rack and reflecting plate.

 - It may cause damage to the coating.
- Use a mild detergent and a kitchen sponge.
- The coating on the grill rack may peel off after a long period of use.

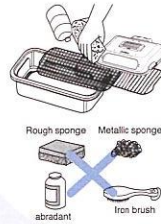


Do not operate with any object like a cloth or towel resting on the lid.

 - It may cause distortion or discoloration of the parts as well as fire.

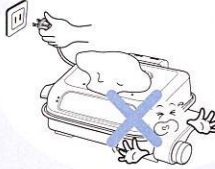

Make sure to completely remove all packaging before use.

 
- Otherwise, it may cause smoke and fire.

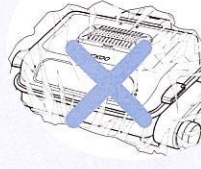

! Caution ! Instruction


Pour appropriate amount of water (about 500 cc) in the drip tray before use.

 - Otherwise, it may cause smoke during cooking, and the power may be cut off by the safety device.

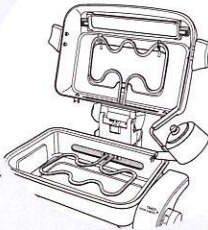

Turn the timer OFF and allow the appliance to cool when filling up water in the drip tray. Pour water slowly not to wet the heater.

 - It may cause fire or burns

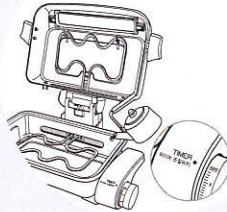

When unplugging the product, hold the Power Plug, not the Power Cord.

- Applying force to the Power Cord may cause electric shock or fire.



Clean the parts and store after cooking.

- Otherwise, stuffy odor may be caused by food bacteria and rotting.
- Wipe the grease off the heater with a soft sponge moistened with kitchen neutral detergent and dry it out with a dry cloth before storage.
- Otherwise, it may cause smoke when reused.



When turned on for the first time, the heater may produce some smoke and odor. This is due to the burning foreign debris on the heater, and it will disappear once the appliance is preheated for 5minutes. Or the smoke may be caused by the food being cooked.



Use the coated grill wire rack for cooking fish with thin skin or meat.

- If you use the wire mesh the skin will stick to it, making it difficult to clean.

MESURES DE SÉCURITÉ

⚠ Mise en garde

Ne plongez pas l'appareil dans l'eau pour le refroidir rapidement lorsque la trappe, la lèche-frite, la grille de cuisson et le grill sont toujours chauds.

- Cela déformera une partie de l'appareil.



⊘ Interdiction

Évitez d'utiliser l'appareil à d'autres fins et sur le gaz ou directement sur le feu.

- Cela pourrait déformer et endommager le revêtement du grill et de la grille de cuisson.



 
Ne rangez pas l'appareil en présence de moisissures et d'humidité.

- Cela entraînera une corrosion et des pannes de l'appareil.



N'utilisez pas l'appareil sur un sol en pente ou en relief.

- Cela présente des risques de brûlure et de pannes de l'appareil.

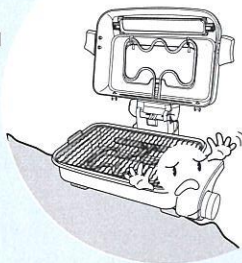

N'utilisez pas de grattoir affûté.

- Cela pourrait rayer la surface, ce qui pourrait réduire la durée de vie de l'appareil.



Ne déplacez pas et ne laissez pas tomber l'appareil sur le sol lors de l'utilisation.

- Cela présente des risques de brûlure et de pannes de l'appareil.



 
MESURES DE SÉCURITÉ

⚠ Mise en garde

🚫 Interdiction

Assurez-vous que l'appareil ne soit pas trop proche d'un mur ou des meubles.

- La vapeur ou la chaleur peut déformer, changer la couleur ou endommager le mur ou les meubles.

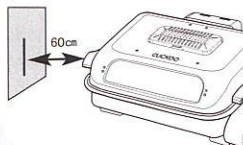

Évitez d'utiliser une éponge rêche ou métallique lors du nettoyage des composants équipés de revêtement tels que la trappe, la lèchefrite, le grill et la plaque réfléchissante.

- Cela pourrait endommager le revêtement.
- Utilisez un détergent non abrasif et une éponge.
- L'utilisation prolongée peut enlever le revêtement du grill.



 
Ne couvrez pas l'appareil avec des serviettes ou d'autres textiles similaires lors du fonctionnement.

- Cela présente des risques de déformation, changement de couleur et incendie.



Assurez-vous d'avoir retiré l'emballage avant la première utilisation de l'appareil.

- Dans le cas contraire, cela pourrait provoquer un incendie.

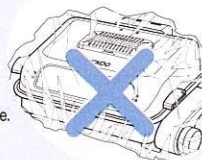

⚠ Mise en garde

📘 Instructions

 
Assurez-vous d'avoir rempli la lèchefrite d'eau (500ml) avant l'utilisation.

- Dans le cas contraire, cela pourrait générer de la fumée et déclencher le dispositif de protection, ce qui éteint l'appareil.



Mettez la minuterie en position « OFF » et attendez que l'appareil ait refroidi avant de mettre l'eau dans la lèchefrite.

- Dans le cas contraire, cela pourrait causer un incendie et des brûlures.

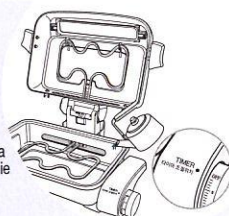

Ne tirez pas sur le cordon d'alimentation mais sur la fiche pour débrancher l'appareil.

- Le choc sur le cordon peut provoquer un choc électrique et un incendie.



Nettoyez l'appareil après chaque utilisation.

- La décomposition des aliments restants peut causer la prolifération de bactéries et dégager une odeur désagréable.
- Enlevez les taches grasses en ayant recours à un détergent non abrasif et à une éponge douce, puis essuyez avec un chiffon sec. Les taches restantes pourraient dégager une fumée lors de la prochaine utilisation.



Lors de la première utilisation, la résistance peut dégager une fumée et une odeur d'agent adhésif mais celles-ci disparaîtront après la préchauffe de 5 minutes. Certains aliments peuvent également dégager une fumée.

 


L'utilisation d'un grill avec revêtement est privilégiée pour cuire les poissons à peau grille et les viandes.

- La peau de poisson collée à une grille de cuisson sans revêtement est difficile à éliminer.

Structure and names of Parts of Product

Description

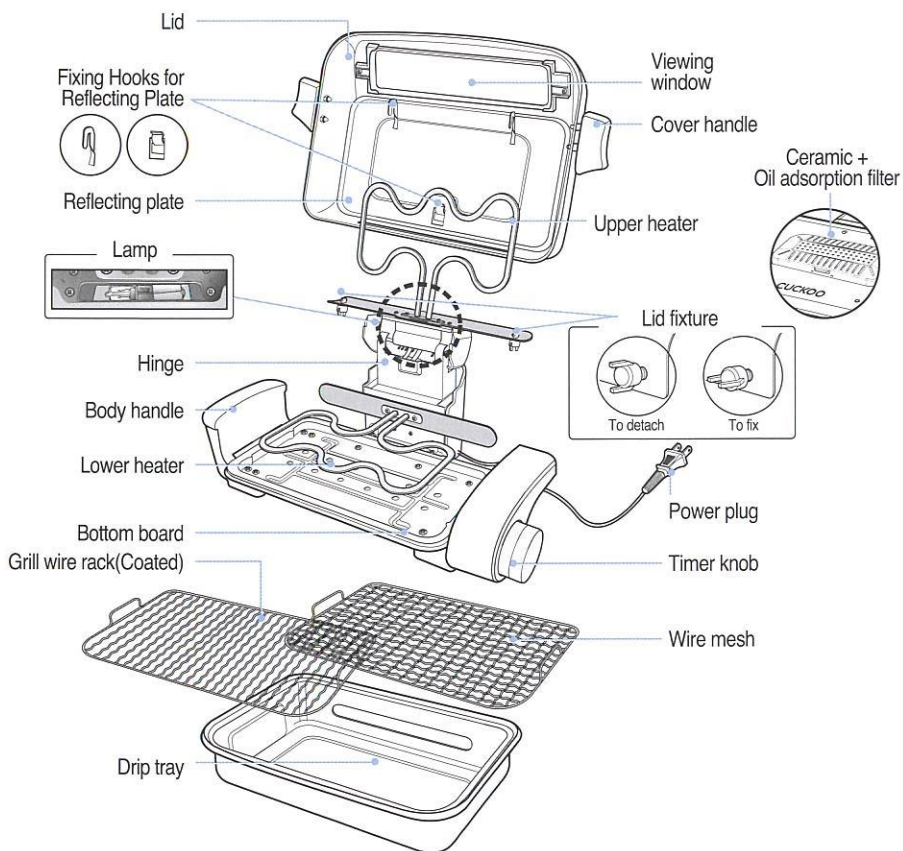

Accessories



USER MANUAL



Silicon Packing

 
Control Panel (Timer)



- The timer allows cooking time settings up to 30 minutes and sound a bell at the end of the set time.
- The timer "clicks" when turned on.
- This means the timer is in operation. Then, it will sound a "Ding" bell when the cooking is finished and makes no more clicks.

Structure and names of Parts of Product


Oil adsorption filter case

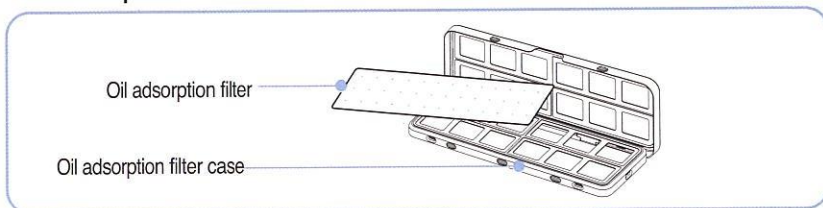

Caution

• Please use this product after inserting adsorption oil filter into the case

 
Ceramic filter + Oil adsorption filter

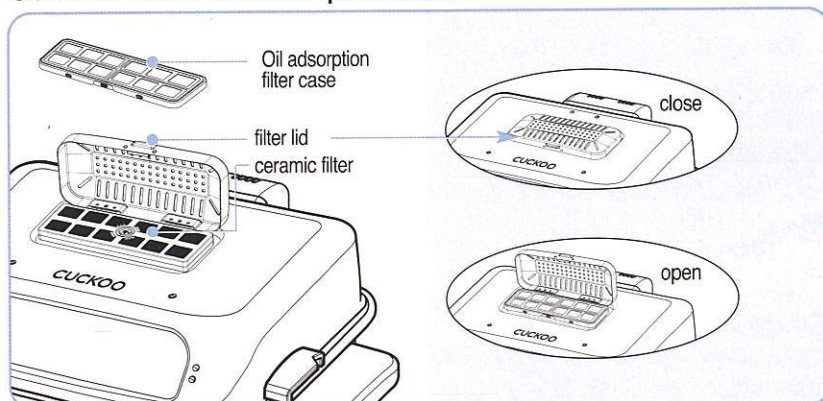

Oil adsorption filter

- When you first purchase the product, the product includes five oil adsorption filters.
- Oil adsorption filter is consumable. Please contact with customer service center to purchase extra oil adsorption filter

 How to Insert Silicon Packaging

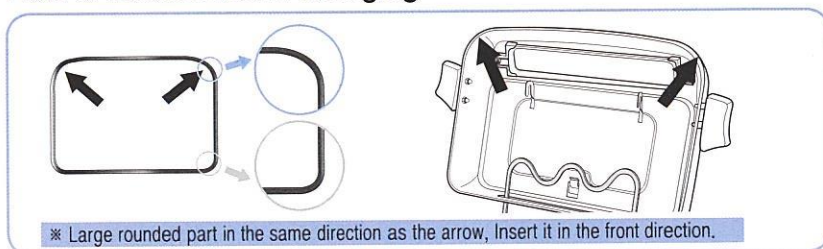

How to disassemble

 
How to disassemble

When disassembling or assembling parts, make sure that the timer is off and unplug the power plug from the outlet

⚠ Caution • After the body has cooled down completely, remove and assemble the parts.


1 Disassemble oil adsorption filter case

- Open the filter lid and pull the oil adsorption filter case in the direction of the arrow, separate it from the ceramic filter.
- Do not remove the ceramic filter because it is fixed to the cover.

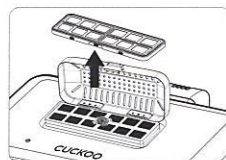


2 Disassemble oil adsorption filter

 - Open the oil adsorption filter case in the direction of the arrow and pull out and disassemble the oil adsorption filter.

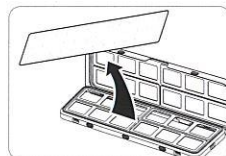


3 Disassemble silicon packing

 - ① Open the lid, ② pull out silicon packing and disassemble

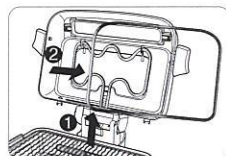

4 Disassemble lid

 - Turn the cover holder in the direction of the arrow to release the Cover fixing bolt on the back of the cover.
- Hold the handle of the lid and pull it straight up to prevent twisting

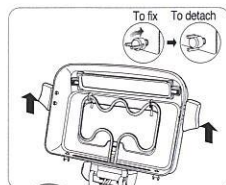


5 Disassemble Reflecting plate

- Do not pull out lid because the filter is fixed on the lid
- Push and detach reflector in direction of the arrow



6 Disassemble drip tray

 
- Pull the drain dish forward to prevent damage to the heater.
- Please be careful, coating of drip tray will be damaged if given an impact.

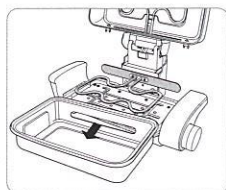

How to assemble

1 Assemble drip tray

 - Insert the drip tray with the lower heater passing between the grooves in the drip tray. At this time, be careful not to damage the lower heater.

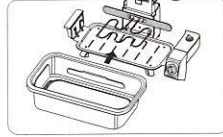


2 Assemble the Reflecting plate

- Assemble the Reflecting plate in reverse order of removing the Reflecting plate.
- When using the Reflecting plate, be sure to attach the Reflecting plate. When assembling the Reflecting plate, make sure that the Reflecting plate is correctly aligned with the reflector fixing groove.




3 Assemble the lid

 - Assemble the lid in reverse order of removing the lid.
- Take care not to damage the Upper heater wire. When assembling the lid
- Push the lid loop straight into the fixing hole and push it in straight, Turn the hook to secure
- Please be careful not to damage the lamp glass when assembling the lid.

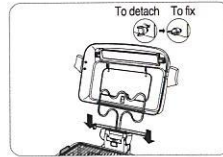


4 Insert Silicon packing

 - Insert the Silicon packing in the reverse order of removing the Silicon packing. Close the lid in the direction of the arrow
- Be sure to insert the Silicon packing before using the product.

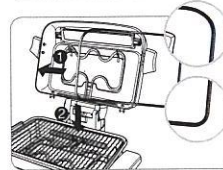


5 Insert oil adsorption filter

 - Insert the oil adsorption filter in the reverse order of the oil adsorption filter separation method.
- Make sure to insert the oil adsorption filter before using the product.
- Oil adsorption filters are consumables
- Replace the oil adsorption filter when it is contaminated.

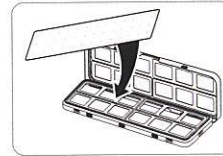


6 Assemble oil adsorption filter case

 - Assemble the reflector in reverse order of disassembling the reflector.
- Assemble in reverse order of oil adsorption filter separation method.
- When assembling the oil adsorption filter case, make sure that the oil adsorption filter case is fixed on the ceramic filter fixed to the lid.

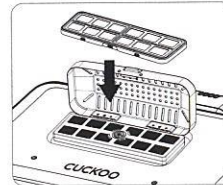

Warning

 Ensure that the upper heater is correctly secured in the fixing hooks the reflecting plate when assembling the lid.



How to use

How to use

5 Close the lid and set the timer to [5] to preheat the grill for 5 minutes.

 
- ※ If setting the time to less than 5 minutes, turn the timer to over 10 minutes and then back to 5.
- ※ The lamp lights up when the timer is on and is turned off when the timer goes off.

⚠ Caution

- The heater may "crackle" during use.
- This is due to the heater being expanded by the heat. It is not a breakdown of the appliance: the noise will disappear once it is preheated.
- The timer "clicks" when turned on.
- This means the timer is in operation. Then, it will sound a "Ding" bell when the cooking is finished and makes no more clicks.

6 Place the food to bake or grill.

- Open the lid and place the food on the grill.
- Close the lid and set the timer.
- Monitor the progress of cooking through the viewing window.
- Turn the timer to OFF position to cease the grilling process.

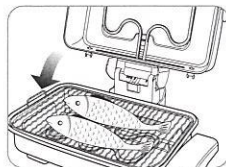


⚠ Caution

- Adjust the time setting depending on the size and amount of the food to be cooked.

7 Finish cooking.

 - When the grilling is finished, open the lid, check how the food is cooked and take it out.
- Make sure to unplug the power cord after use.
- Tip out the water in the drip tray once the Bottom board is cooled.

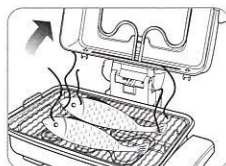

⚠ Caution

- Do not touch the heater when opening the lid. It may be very hot.(It can cause burns.)
- Use the lid handles to close the lid as it may still be hot after cooking.
- Use heat-proof gloves to remove the grill rack and mesh.
- Otherwise, it may cause burns.

Precautions for Cooking

- Chop the food into less than 4 cm pieces.
- Otherwise, the food will touch the upper heater and be burnt before completely cooked.
- For continuous operation over 30 minutes (at least twice), make sure there's enough water in the drip tray. If not, fill it up before use.

How to Use

When turned on for the first time, the heater may produce vapors or odor. This is due to the burning moisture and dust around it. The vapors will disappear once the temperature of the heater is stabilized.
Before first use, please wash Drip tray and Lid, Reflecting plate, Grill wire rack, Wire mesh

1 Check the condition of each part.

- Ensure the lid is securely fixed.
- Ensure the reflecting plate is securely fixed to the lid.
- Ensure the drip tray is seated in place.

⚠ Caution

- Be sure to fill the drip tray with water before use.
- Otherwise, the safety device may operate to cut off the power during heating.
- Do not fast cool the lid, grill wire rack, drip tray or wire mesh when it is still hot.
- It may cause deformation of the parts.

 
2 Add water in the drip tray.

- Add about 500cc of water in the drip tray.
- Be careful not to wet the lower heating wire.





3 Plug the power cord into the power outlet.

- Place the grill rack and mesh.
- Adjust the height of the rack and mesh depending on the ingredients to cook.

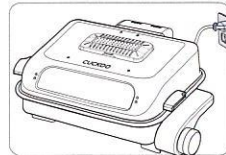

4 Place the grill rack and mesh.

  - Adjust the height of the rack and mesh depending on the ingredients to cook.

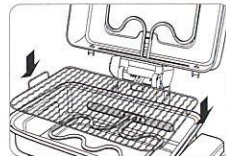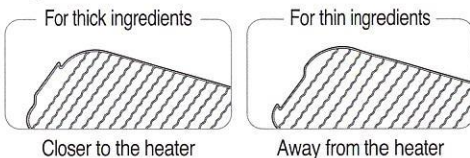

- ▶ Grill wire rack : use this for cooking food with sticky skin including fish (pacific saury, mackerel, etc.), meat (pork, barbecue, steak, etc.), sweet potatoes, potatoes, etc.
- ▶ Grill wire mesh : use this for cooking food with thick skin such as shrimps and clam shells.

⚠ Caution

- Use the coated grill rack for cooking food with thin skin like fish and meat.
- If you use the wire mesh the skin will stick to it, making it difficult to clean.

Cooking Guide

Recipes and Safety Precautions

NO	Category	Cooking	Grill Tray		Main Ingredients	Preheat for 5Mins	Approx. Time(Min)	Note
			Grill Wire Rack	Wire Mesh				
1	Fish, shellfish, shrimp	Grilled mackerel	●		2 fresh raw mackerel (350g ea)	●	18-20 (after preheated)	
2		Grilled pacific saury	●		4 pacific sauries (150g ea)	●	18-20 (after preheated)	
3		Grilled squid tubes	●		2 cuttlefish (350g)	●	8-10 (after preheated)	
4		Grilled shrimps (Prawns)		●	20 shrimps	●	10 (after preheated)	
5		Shellfish (Large clams)		●	4 large clams	●	20 (after preheated)	
6		Shellfish (Razor clams)		●	20 razor clams (300g)	●	10 (after preheated)	
7	Meat	Pork slices	●		500g pork slices	●	12-15 (after preheated)	
8		Steak	●		3 chunks of steak (150g ea)	●	10 (after preheated)	
9	Snack	Sausages	●		6 gourmet sausages (350g)	●	5 (after preheated)	
10		Baked sweet potatoes	●		2-3 sweet potatoes	●	20-30 (after preheated)	
11		Baked potatoes	●		2-3 potatoes	●	25-30 (after preheated)	

Precautions for Cooking

- Do not touch or grab the hot wire rack or mesh by any part other than the handles, and wear heat-proof gloves when moving the wire rack or mesh after cooking.
- Beware of burns while moving the wire rack or mesh.
- When turned on for the first time, the heater may produce vapors. This is due to the burning foreign debris on the heater, and the vapors will disappear after 5 minutes preheating before use.
- Or the smoke may be caused by the food being cooked.
- The cooking time may vary depending on the size and amount of the food and your preference to taste.
- The cooking progress and time may vary depending on the height of the grill wire rack and mesh.
- Use the viewing window to monitor the cooking progress.
- Make sure the drip tray is filled with about 500 cc of water before use.
- Be careful when placing the food on the rack or mesh once the appliance is preheated for 5 minutes. It is very hot.
- (Turn the timer to preheat the appliance for 5 minutes, and when it is turned off, start cooking by setting the desired cooking time.)
- Chop the food into less than 4 cm pieces.
- Otherwise, the top of the ingredient may be burned.
- It is recommended that the ingredient be placed in the center of the wire rack or mesh to cook.
- If too much food is placed, the food on the outer area may not be fully cooked.
- Use the coated grill wire rack for cooking fish with thin skin or meat.
- (If you use the wire mesh, the skin will stick to it, making it difficult to clean)

Cooking Guide

Grilled mackerel

Tray : Grill Wire Rack | Approx. Cooking Time : 18~20 mins | Ingredients : 2 fresh raw mackerel (350g ea) and a pinch of rock salt

How to Cook

- 1 Wash the mackerel thoroughly in running water and remove innards.
- 2 Cut the mackerel in half and flatten it out. Sprinkle salt over it and place on the wire rack.

Grilled pacific saury

Tray : Grill Wire Rack | Approx. Cooking Time : 18~20 mins | Ingredients : 4 pacific sauries (150g ea), half lemon and table salt

How to Cook

- 1 Wash the pacific saury thoroughly in running water and remove innards.
- 2 Make cuts in the saury, sprinkle salt and place it on the wire rack.
- 3 Garnish the grilled saury with lemon squeezed over it.

Grilled squid tubes

Tray : Grill Wire Rack | Approx. Cooking Time : 8~10 mins | Ingredients : 2 cuttlefish (350g)

How to Cook

- 1 Remove innards and wash the cuttlefish thoroughly in salt water.
- 2 Make cuts in the saury and place it on the wire rack.

Grilled shrimps (Prawns)

Tray : Grill Wire Net | Approx. Cooking Time : 10 mins | Ingredients : 20 shrimps

How to Cook

- 1 Wash the shrimps thoroughly in running water.
- 2 Place them on the wire net and cook.

Shellfish (Large clams)

Tray : Grill Wire Net | Approx. Cooking Time : 20 mins | Ingredients : 4 large clams

How to Cook

- 1 Immerse the clams in salt water to get rid of the smell of mud.
- 2 Cut them in half and flatten on the wire mesh.
- 3 You can enjoy more delicious clams by stuffing them with beef or tofu and cooking.

Cooking Guide

Cooking Guide

Shellfish (Razor clams)

Tray : Grill Wire Rack | Approx. Cooking Time : 10 mins | Ingredients : 20 razor clams (300g)

How to Cook

- 1 Immerse the clams in salt water to get rid of the smell of mud.
- 2 Cut them in half and flatten on the wire mesh.
- 3 You can enjoy more delicious clams by stuffing them with beef or tofu and cooking.

Pork slices

Tray : Grill Wire Rack | Approx. Cooking Time : 12~15 mins | Ingredients : 500g pork slices and salt

How to Cook

- 1 Slit the pork, sprinkle salt and place on the wire rack.

Steak

Tray : Grill Wire Rack | Approx. Cooking Time : 10 mins | Ingredients : 3 chunks of steak (150g ea) and steak sauce

How to Cook

- 1 Cut the steak into bite-size pieces and wipe the blood off with paper towel.
- 2 Place on the wire rack for cooking and enjoy with the steak sauce when it is cooked.

Sausages

Tray : Grill Wire Net | Approx. Cooking Time : 5 mins | Ingredients : 6 gourmet sausages (350g)

How to Cook

- 1 Make cuts evenly in the sausages.
- 2 Cook them on the wire rack and enjoy with a sauce.

Baked sweet potatoes

Tray : Grill Wire Net | Approx. Cooking Time : 20~30 mins | Ingredients : 2-3 sweet potatoes

How to Cook

- 1 Cut sweet potatoes into the size of pieces so that they don't touch the upper heater.
- 2 Cook them on the wire rack.

Baked potatoes

Tray : Grill Wire Rack | Approx. Cooking Time : 25~30 mins | Ingredients : 2-3 potatoes

How to Cook

 
- 1 Cut potatoes into the size of pieces so that they don't touch the upper heater.
- 2 Cook them on the wire rack

Care and Cleaning

Ensure the timer is at OFF position before unplugging the power, and clean the unit


1 Main Body and Heater and Lamp Window

- 1) Wipe with a damp cloth with kitchen neutral detergent.
- 2) Dry it off with a dry cloth.
 - Do not wet or immerse the main body or heater in water. It may cause electric shock or corrosion.

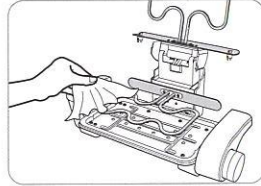

2 Grill Wire Rack and Wire Mesh

 - 1) Clean them with a soft sponge moistened with kitchen neutral detergent and dry them off with a soft cloth. The wire rack is coated with fluorocarbon resin.
 - Do not use hard scrubbers or metallic sponges that may scratch the coated surfaces.

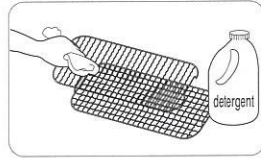

3 Drip Tray

- 1) Clean with a soft damp sponge with kitchen neutral detergent and dry them off with a soft cloth.



 
4 Lid and Reflecting Plate

- 1) Clean with a soft damp sponge with kitchen neutral detergent and dry them off with a soft cloth.



5 Silicon packing

- 1) Clean with a soft damp sponge with kitchen neutral detergent and dry them off with a soft cloth
- 2) Completely dry the silicone gasket before placing it back on.

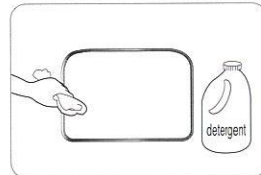


Caution

- Make sure it is aligned in the right position. (Refer to "How to insert silicone gasket" on page 21.)

Care and Cleaning / Storage

6 Oil Adsorption Filter Case

 - 1) Clean the oil adsorption filter case with a soft sponge soaked in a mild detergent and dry it off with a soft cloth.
 - ※ Oil adsorption filters are consumable. Discard used oil adsorption filters. Oil adsorption filters cannot be washed.
 - ※ To purchase oil adsorption filters, please refer to Instructions for Oil Adsorption Filter (on page 21).

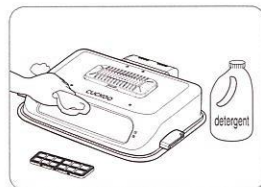

⚠ Caution

- Do not allow any residue in the appliance. It may cause unpleasant odor by rotten residue and bacteria. Make sure to clean thoroughly before storage.

 
Storage

1 Clean the appliance before storage.

Clean the appliance (refer to Care and Cleaning on page 29~30) and completely dry it out.


⚠ Caution

- Do not allow any residue in the appliance. It may cause unpleasant odor by rotten residue and bacteria. Make sure to clean thoroughly before storage.

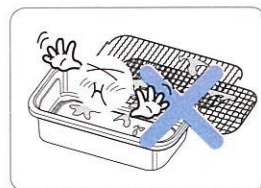


2 Store in a cool place.

 Do not store outside. Store in a dry and cool place.

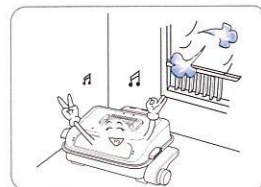

3 Assemble all the parts for storage.

 Otherwise, it may cause distortion or loss of the parts.

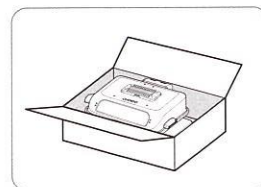

Please check before asking for Support.

- ▼ When the product is not used properly in compliance with the User Manual, the product may not work properly even if it is not out of order.
- ▼ Please take the following measures accordingly if there is a problem with the product. If there is still a problem, please contact our Customer Service Center.

Problems	Checklist	Recommendation
Heater is not working	<ul style="list-style-type: none"> • Is the power cord plugged into the power outlet? • Did the electricity go out? • Is the timer at OFF position? • Is the covering of the power cord peeled or cut off? 	<ul style="list-style-type: none"> • Plug the power cord into the power outlet. • Check if there wasn't a blackout, and plug the power cord into the power outlet. • Turn the timer control to the desired time setting. • Please contact our Customer Service.
Heater is not working (Long cooking time)	<ul style="list-style-type: none"> • Is the power in use AC 120V? 	<ul style="list-style-type: none"> • Make sure to use it on AC 120V.
Unpleasant odor or smoke	<ul style="list-style-type: none"> • Is there any foreign material on the heater? • Have you turned it on for the first time? 	<ul style="list-style-type: none"> • Remove or wipe any foreign material from the heater. • When turned on for the first time, the heater may produce vapors or odor. This is due to the burning moisture and dust around it. The vapors will disappear once the temperature of the heater is stabilized.
The heater makes noise.	<ul style="list-style-type: none"> • Did it happen within 15 minutes after you started using it? 	<ul style="list-style-type: none"> • The heater may "crackle" during use. This is due to the heater being expanded by the heat. It will no longer make the noise once it reaches over a certain point of temperature.
The lamp does not light up.	<ul style="list-style-type: none"> • Is the unit plugged in the power outlet? • Wasn't there a power outage? • Is the timer in the OFF position? 	<ul style="list-style-type: none"> • Plug the unit into the power outlet. • Check for power outage and plug the unit into the power outlet. • Set the timer for the desired time.

유분흡착필터 사용안내

유분흡착필터는..?

- CFR-331R/G 모델은 세라믹필터에 더하여 유분흡착필터를 지원합니다.
- 세라믹필터가 조리중 발생하는 냄새를 1차적으로 제거하고난 후, 유분흡착필터가 냄새를 한번 더 제거하고 연기 속의 기름기까지 잡아줍니다.

유분흡착필터 사용안내

- 제품을 사용하기 전에 유분흡착필터를 반드시 삽입하여 사용하십시오.
- 유분흡착필터는 소모품입니다. 사용하신 유분흡착필터는 버려주십시오.
- 유분흡착필터는 세척하여 다시 사용할 수 없습니다.
- 유분흡착필터는 화기, 직사광선, 고온다습한 곳으로부터 떨어져 보관해야 합니다.
- 1회 사용한 유분흡착필터는 교체하여 사용하는 것이 좋습니다. 사용 후 변색, 균열, 굽힘등의 파손으로 오염되었을 경우, 새 유분흡착필터로 교체하여 주십시오.
- 제품 사용 후 오랜시간 방치하시거나, 제품을 사용하지 않았지만 장기간 보관하신 후 다시 사용하실 경우, 새 유분흡착필터로 교체하여 주십시오.

유분흡착필터 구입처

- 유분흡착필터의 추가구매를 원하실 경우, 서비스센터를 통해 별도 구매하실 수 있습니다.

안전상의 경고

- '안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- '안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.

경고 피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황

- 이 기호는 특정조건에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기 시키는 표시입니다.
- 위험 발생을 피하기 위해 주의깊게 읽고 지시에 따라 사용하십시오.

주의 피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황

- 이 기호는 어떤 행위를 금지하는 표시입니다.
- 이 기호는 어떤 행위를 '지시'하는 표시입니다.

경고 (금지)

반드시 접지가 되는 정격 15A 이상의 교류 120V(전용 콘센트에서만 사용)해 주시고 한 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오.

- 여러 제품과 함께 사용하거나 다른 기구에 사용 발열 및 발화, 감전의 원인이 됩니다.
- 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오.
- 연장코드도 15A 이상의 것을 사용하여 주십시오.

전원코드를 무리하게 구부러거나 묶거나 잡아당기지 마십시오.

- 감전이나 쇼트로 인해 화재의 원인이 될 수 있습니다.

전원코드나 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고, 고객상담실로 문의 바랍니다.

- 여전원코드나 전원플러그가 파손된 경우에는 위험이 생기기 않도록 하기 위하여 제조사나 판매점 또는 유자격 기술자(서비스 기사)에 의해 코드 교환을 하십시오.
- 반드시 지정된 서비스센터에서 수리하십시오.
- 감전 및 누전화재의 원인이 됩니다.

전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.

- 감전, 쇼크, 발화 원인이 될 수 있습니다.

경고 (지시)

전원플러그를 콘센트에서 켜거나 열매는 손의 물기를 반드시 제거한 후 전원플러그를 잡고 꽂거나 뽑아 주십시오.

- 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다.
- 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.

전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품 바닥에 눌러지지 않도록 주의해 주십시오.

- 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오.

플러그 및 전원 코드부를 번들링용이 들어맞거나 못과 같이 날카로운 금속 물체로부터 충격받지 않도록 주의하여 주십시오.

- 충격으로 인한 파손은 합선, 감전, 화재 등의 원인이 됩니다.
- 수시로 전원코드와 전원 플러그 상태를 꼭 확인하십시오.

경고 (금지)

본체를 싱크대에 넣고 닦거나 닦거나 본체 내부에 물 등의 기타 액체를 넣지마십시오.

- 감전 및 화재의 원인이 됩니다.

제품에 직사광선이 쬐는 곳, 가스레인지, 라이터, 열기구 및 기타 휘발성 물질가끼에서 사용하지 마십시오.

- 가누전 및 감전, 변형 변색 및 화재의 원인이 됩니다.

사용 중이나 사용 직후는 뜨거우므로 손잡이 이외에 허터, 뚜껑, 반사판, 물받이 등의 고온부를 절대 만지지 마십시오.

- 고온에 의한 화상을 입을 수 있습니다.

☞ 손질은 식은 후에 하십시오.

제품을 분해하거나 개조하지 마십시오.

- 화재 및 감전의 원인이 됩니다.
- 서비스기사 이외의 사람이 분해하거나 수리하지 마십시오.
- 수리 및 고장 상담은 고객상담실로 문의하여 주십시오.

사용 중 조리확인 램프가 켜진 상태에서 조리확인 램프를 직접 쳐다보지 마십시오.(CFR-331R/G)

- 눈에 안좋은 영향 또는 안전사고의 원인이 될 수 있습니다.

뚜껑을 열어서 조리하지 마시고, 조리중에는 반드시 뚜껑을 닫고 조리하십시오.

- 화상 및 안전사고의 원인이 됩니다.

사용시 이외에는 타이머를 OFF 위치에 두고 전원플러그를 뽑아주십시오.

- 발열, 발화 및 화재의 원인이 됩니다.

불안정한 전압이나 제품 일체 결함, 변색, 전기 장판 등을 놓고 사용하지 마십시오.

- 화재의 원인이 될 수 있습니다.

제품 사용 중에는 이동하지 마십시오.

- 뜨거운 몸체나 기름에 의한 화상의 원인이 됩니다.

조리 전, 후, 조리 중에는 램프창을 손으로 만지지 마십시오.(CFR-331R/G)

- 화재 및 감전의 원인이 됩니다.

내용물이 없는 상태에서 뚜껑을 닫고 동작시키지 마십시오.

- 내용물이 없는 상태에서 가열시키면 위험하고 코팅변색등 고장의 원인이 됩니다.
- 제품을 사용하지 않을 경우 및 외출시에는 타이머를 OFF 위치에 두고 전원코드를 반드시 뽑아주십시오.

밀폐된 통조림이나 병조림 및 가연성 연료 및 금속제(나이프, 포크)를 넣고 가열하지 마십시오.

- 폭발되어 다치거나 화상을 입을 수 있습니다.

이 기기는 신체, 감각, 정신능력이 결여되어 있거나 경향과 자식이 부족하여 감독이나 지시 없이 안전하게 기기를 사용할수 없는 사람(어린이 포함)이 사용하도록 만들어지지 않았습니다.

- 어린이가 기기를 가지고 놀지 않도록 주의하세요.
- 감전이나 부상의 원인이 됩니다.

뚜껑 및 물받이가 없는 상태에서 전원플러그를 켜거나 가열하지 마십시오.

- 화상 및 안전사고의 원인이 됩니다.

싱크대, 욕목탕 등 제품에 물이 들어 갈 수 있는 곳이나 화학적 물질이 있는 곳에서는 사용하지 마십시오.

- 전기누전 및 감전의 위험이 있습니다.

제품을 음식물 조리 이외의 용도로는 절대 사용하지 마십시오.

- 제품고장 및 안전사고의 원인이 됩니다.

세척을 위해, 반사판을 분리/조립시 안전을 위해 고무장갑 등을 끼고 분리하고, 반사판 고정고리 등을 맨손으로 만지지 마십시오.

- 금속성 재질 등에 상해 및 안전사고가 발생 할 수 있으므로 주의하십시오.

안전상의 주의



주의



(금지)

제품 사용 후 뚜껑, 물받이, 석쇠망, 그물망 등이 뜨거울 때 바로 물에 담그어 급랭시키지 마십시오.

- 부품 변형의 원인이 됩니다.

습기 및 물기가 많은 곳에 제품을 보관하지 마십시오.

- 제품 부식 및 고장의 원인이 됩니다.

끝이 뾰족한 물건으로 긁지 마십시오.

- 금속제의 주걱이나 끝이 뾰족한 것으로 긁으면 금속 코팅면이 상하게 되므로 수명이 단축됩니다.

석쇠망 및 그물망을 다른 용도로 사용하거나 가스불이나 기타 직화에서 사용하지 마십시오.

- 석쇠망 및 그물망의 변형 및 코팅 손상이 발생 할 수 있습니다.

경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.

- 화상 및 제품 고장의 원인이 됩니다.

사용중에 제품을 이동하거나 제품에 심한 충격을 주거나 떨어뜨리지 마십시오.

- 화상의 위험과 제품고장 및 안전상의 문제가 발생할 수 있습니다.



주의



(금지)

벽이나 가구 가까이에서는 사용하지 마십시오.

- 증기 또는 열로 인하여 벽이나 가구가 변형, 변색 또는 손상될 수 있습니다.

천, 수건 등의 기타 물건을 뚜껑위에 올려 제품을 동작시키지 마십시오.

- 변형, 변색 및 화재의 원인이 됩니다.

뚜껑, 물받이, 석쇠망 반사판 등 코팅이 되어있는 부품을 세척시 거친 수세미나 금속성 수세미로 씻지 마십시오.

- 코팅 손상의 원인이 됩니다.
- 주방용 중성세제의 스폰지를 사용하십시오.
- ※석쇠망은 장기간 사용할 경우 코팅이 벗겨질 수 있습니다.

제품 사용전 반드시 제품 포장물을 제거후 사용하십시오.

- 최초 사용 전 석쇠망, 그물망, 뚜껑, 반사판, 물받이를 꼭 세척 후 사용하십시오.
- 제품의 포장물을 완전히 제거하지 않고 사용시 연기 발생 및 화재의 원인이 될 수 있습니다.



주의



(지시)

사용하기 전에 반드시 물받이에 적당량(500cc)의 물을 붓고 사용하십시오.

- 물을 붓지 않고 조리시 연기가 발생할 수 있으며, 안전 장치가 작동하여 전원이 차단 될 수 있습니다

전원플러그를 뽑을때는 전원코드를 잡지 마시고 꼭 전원 플러그를 잡고 뽑아주십시오.

- 전원코드에 충격이 가하면 감전 및 화재의 원인이 될 수 있습니다.

최초 사용시에는 히터에 연기가 냄새가 날 수도 있으나, 이는 히터에 묻은 이물질이 타는 것으로 사용전 5분간 예열을 하면 없어집니다. 또한 사용 재료에 따라 연기가 발생하는 경우도 있습니다.

물받이에 물을 보충시에는 타이머를 OFF로 두어 전원을 끄고 제품이 식은 후 히터에 물이 닿지 않도록 하여 물을 천천히 보충해 주십시오.

- 화재 및 화상의 원인이 됩니다.

조리 완료 후 보관시에는 구성품들을 세정 후 보관 하십시오.

 
- 세균 번식 및 음식물 부패로 인한 악취 발생의 원인이 됩니다.
- 히터 등에 묻은 기름때는 부드러운 스폰지에 주방용 중성세제를 적신 행주로 닦고 물기가 없는 행주로 물기를 제거 후 보관 하십시오. 재사용시 연기 발생의 원인이 됩니다.

껍질이 얇은 생선류 및 육류등을 요리시에는 코팅이 되어 있는 석쇠망을 이용하십시오.

- 그물망을 이용시 껍질이 달라붙어 잘 떨어지지 않습니다.

CFR-331R/G의 구조 및 명칭 / 부속품 / 기능조작부

각 부분의 이름

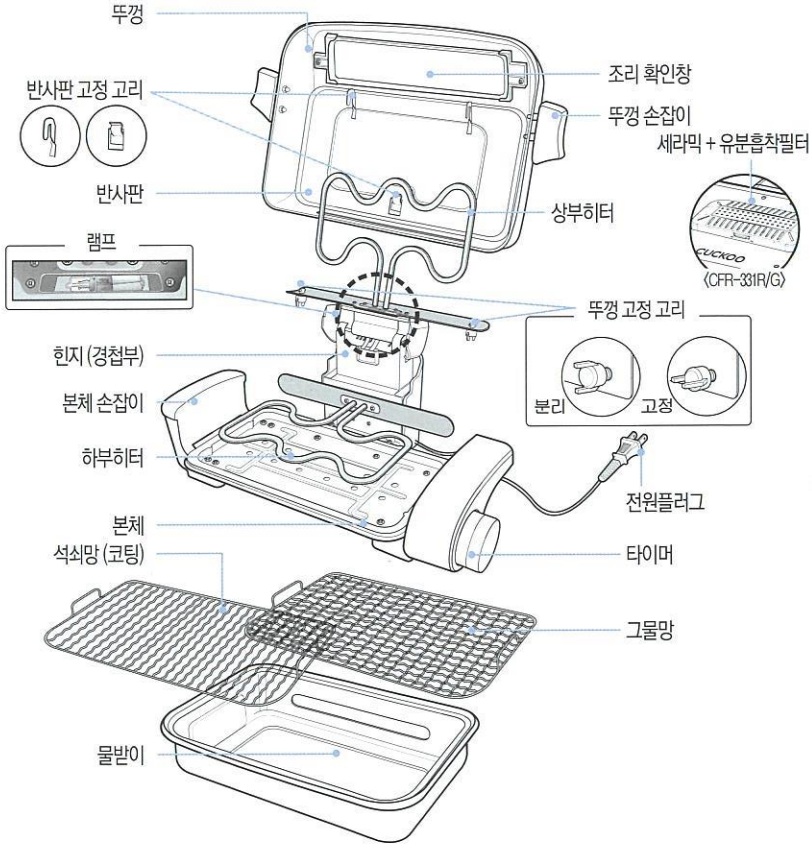

부속품 안내

 


기능조작부(타이머)



- 0~30분까지 조리시간을 자유롭게 선택 가능하며 조리 완료시 타이머벨이 울려 조리완료를 알려줍니다.
- 타이머를 동작시키면, 타이머가 회전하는 "딸깍 딸깍" 소리가 납니다. 이는 타이머가 회전하고 있다는 소리로, 타이머의 설정 시간이 완료되면 "땡" 하고 조리 완료 알람벨이 울리면서 소리가 나지 않습니다.


유분흡착필터케이스

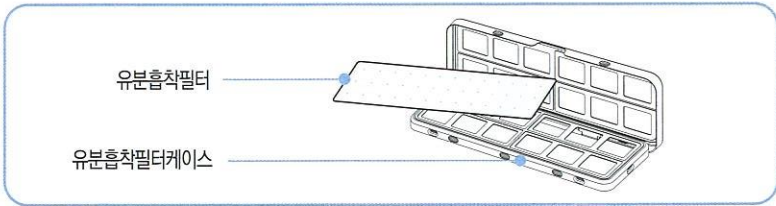

주의

- 반드시 유분흡착필터를 유분흡착필터 케이스에 삽입한 후에 제품을 동작하여 주십시오.

 세라믹필터 + 유분흡착필터

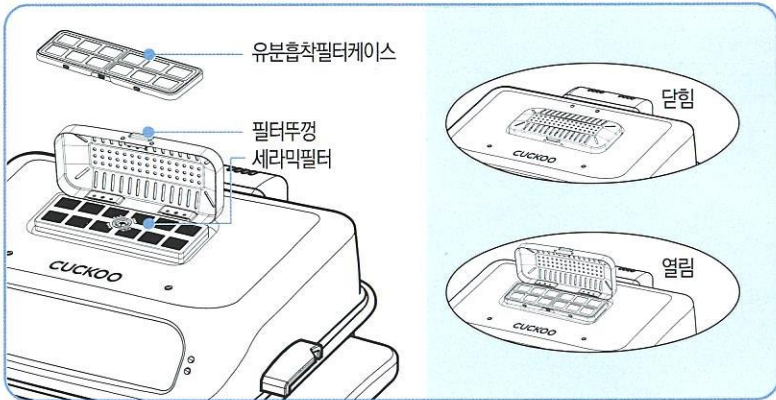

유분흡착필터 5매

제품 최초 구입시, 유분흡착필터 5매가 제품에 포함되어 있습니다.
유분흡착필터는 소모품이므로, 동봉된 5매를 모두 사용하신 후에는
서비스센터를 통해 별도 구매하실 수 있습니다

실리콘 패킹 삽입 방법



분리방법

 
부품을 분리하거나 조립할 때에는 반드시 타이머가 OFF 위치에 있는지 확인 후 콘센트에서 전원 플러그를 빼주십시오.

주의

· 본체가 완전히 식은 다음 부품을 분리, 조립해 주십시오.

1 유분흡착필터케이스를 분리하십시오.
(CFR-331R/G에만 해당)

- 필터 뚜껑을 열고 유분흡착필터케이스를 화살표 방향으로 뽑아 내 세라믹 필터로부터 분리하십시오.
- 세라믹필터는 뚜껑에 고정되어 있으므로 분리하지 마십시오.

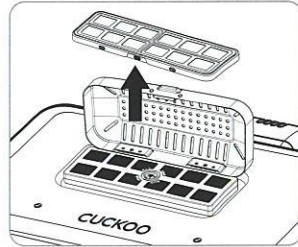


2 유분흡착필터를 분리하십시오.
(CFR-331R/G에만 해당)

- 유분흡착필터케이스를 화살표 방향으로 열고, 유분흡착필터를 뽑아내 분리하십시오
- 유분흡착필터는 소모품입니다. 사용후 오염된 유분흡착필터는 버려주십시오.




3 실리콘 패킹을 분리하십시오.
(CFR-331R/G에만 해당)

 - ① 뚜껑을 화살표 방향으로 열고, ② 실리콘 패킹을 뽑아내 분리하십시오.
- ※ 실리콘 패킹이 늘어짐/끊어짐 등 외관상 문제 발생시 고객센터상담실로 문의 하십시오.

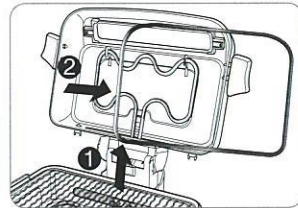

4 뚜껑을 분리하십시오.

 - 뚜껑의 뒷부분에 있는 뚜껑 고정 고리를 화살표 방향으로 돌려 뚜껑고정을 해제 합니다.
- 뚜껑의 손잡이를 잡고 비틀리지 않도록 똑바로 당겨 올려 주십시오.
- 필터 및 히터 등 다른 부품에 손상이 가지 않도록 천천히 분리합니다.

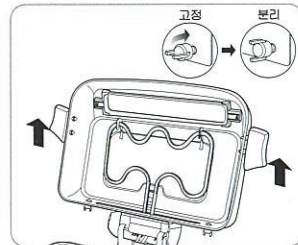

분리방법

분리방법

 
5 반사판을 분리하십시오.

- 필터는 뚜껑에 고정되어 있으므로 분리하지 마십시오.
- 반사판을 확실표 방향으로 밀어 분리하십시오.



6 물받이를 분리하십시오.

- 히터가 있으므로 히터에 손상이 가지 않도록 물받이를 앞으로 당겨 주십시오.
- 물받이는 코팅처리 되어 있어 충격을 주면 코팅이 손상되므로 주의하십시오.

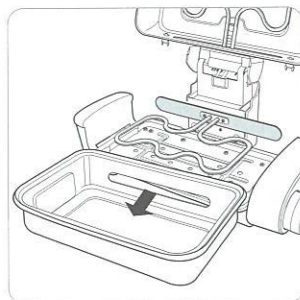

! 안전상의 경고

7 세척을 위해, 반사판을 분리/조립 시 안전을 위해 고무장갑 등을 끼고 분리하시고, 반사판 고정고리 등을 맨손으로 만지지 마십시오.

- 금속성 재질 등에 상해 및 안전사고가 발생 할 수 있으므로 주의하십시오.

※ 반사판을 '조립' 시 확실표 방향으로 여기를 밀어서 조립하십시오.

 


※ 반사판을 '분리' 시 확실표 방향으로 여기를 밀어서 분리하십시오.

조립방법


1 물받이를 조립하십시오.

- 물받이에 있는 홈사이로 하부 히터선이 지나가도록하여 물받이를 밀어 넣어 주십시오. 이때, 히터선에 손상이 가지 않도록 주의 하십시오.

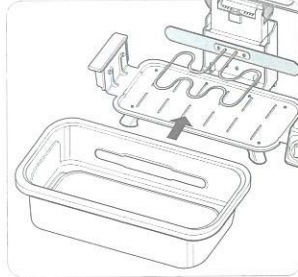


2 반사판을 조립하십시오.

 - 반사판 분리방법의 역순으로 반사판을 조립하십시오.
- 사용시에는 반드시 반사판을 부착하여 사용하시고, 반사판 조립시에는 반사판이 반사판 고정홈에 정확히 꽂혔는지 확인하십시오.

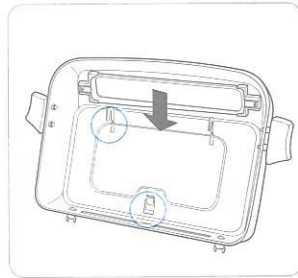

3 뚜껑을 조립하십시오.

 - 뚜껑 분리방법의 역순으로 뚜껑을 조립하십시오.
- 뚜껑 조립시에는 히터선에 손상이 가지 않도록 주의 하십시오.
- 뚜껑 고정고리가 고정 구멍에 들어 갈 수 있도록 일자로하여 밀어 넣은 다음 고정 고리를 돌려 확실히 고정시켜 주십시오.
- 뚜껑 조립시 램프의 유리 파손에 주의하여 주십시오.
(CFR-331R/G 모델에만 해당)

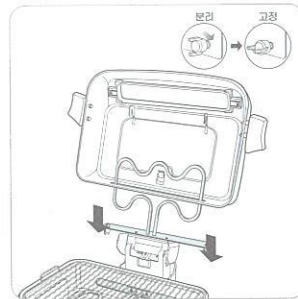


조립방법

조립방법

4 실리콘 패킹을 삽입하십시오.(CFR-331R/G에만 해당)

 - 실리콘 패킹 분리방법의 역순으로 ❶ 실리콘 패킹을 삽입하고, ❷ 뚜껑을 확실표 방향으로 닫아주십시오.
- 제품을 사용하기 전에 실리콘 패킹을 반드시 삽입하여 사용하십시오.
- ※ 실리콘 패킹이 늘어짐/끊어짐 등 외관상 문제 발생시 고객상담실로 문의 하십시오.

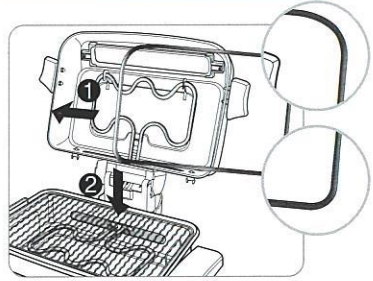


주의

- 실리콘 패킹 삽입시 방향을 반드시 확인하고 삽입하여 주십시오. (36페이지 '실리콘 패킹 삽입 방법' 참고)


5 유분흡착필터를 삽입하십시오.(CFR-331R/G에만 해당)

 - 유분흡착필터 분리방법의 역순으로 유분흡착필터를 삽입하십시오.
- 제품을 사용하기 전에 유분흡착필터를 반드시 삽입하여 사용하십시오.
- 유분흡착필터는 소모품입니다.
유분흡착필터가 오염 되었을때는 교체하여 사용하십시오.

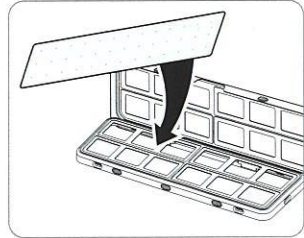


6 유분흡착필터케이스를 조립하십시오. (CFR-331R/G에만 해당)

 - 반사판 분리방법의 역순으로 반사판을 조립하십시오.
- 유분흡착필터케이스 분리방법의 역순으로 조립하십시오.
- 유분흡착필터케이스 조립시에는 유분흡착필터케이스가 뚜껑에 고정되어있는 세라믹필터위에 꽂혔는지 확인하십시오.

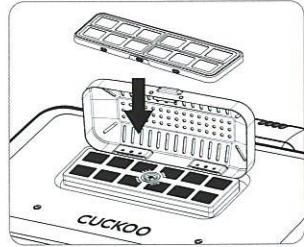

주의

 - 뚜껑을 체결시 히터의 열선이 반사판 고정고리에 있는 히터 고정 홈에 정확히 꽂혔는지 확인하십시오.



사용방법

최초 사용하실 때는 히터 부위에서 연기나 냄새가 날 수 있습니다.
 그것은 히터 주변의 습기나 먼지가 타면서 나는 것으로 온도가 안정되면 연기가 발생하지 않습니다.
 최초 사용 전 석쇠망, 그물망, 뚜껑, 반사판, 물받이를 꼭 세척 후 사용하십시오.

1 각부의 상태를 확인하십시오.

- 뚜껑이 확실히 고정되었는지 확인하십시오.
- 반사판이 뚜껑에 확실히 고정되었는지 확인하십시오.
- 물받이가 정위치에 안착되었는지 확인하십시오.

2 물받이에 물을 넣어 주십시오.

 
- 물받이에 물을 500cc 정도 넣어 주십시오.
- 하부 히터선에 물이 닿지 않도록 물을 넣어 주십시오.



주의

- 반드시 물을 넣고 사용하십시오. 물을 넣지 않으면 가열 중에 안전장치가 작동되어 전원이 차단 될 수도 있습니다.
- 뚜껑, 석쇠망, 물받이, 그물망 등이 뜨거울 때는 급랭시키지 마십시오. 변형의 원인이 됩니다.

3 전원플러그를 콘센트에 꽂아 주십시오.

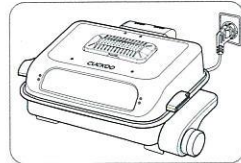

4 석쇠망 및 그물망을 고정시켜 주십시오.

- 조리 재료에 따라 석쇠망 및 그물망의 높이를 조절하여 사용하십시오.



 
두꺼운 음식 사용시

히터와의 거리가 가까워집니다.



얇은 음식 사용시

히터와의 거리가 멀어집니다.

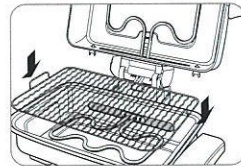

- ▶ 석쇠망: 생선구이(공치, 고등어 등), 육류구이(삼겹살, 바비큐, 스테이크 등), 고구마, 감자 등의 껍질이 잘 달라붙는 재료 조리 시 선택하십시오.
- ▶ 그물망: 새우, 조개 등 껍질이 두꺼운 재료 조리 시 선택하십시오.

주의

- 껍질이 얇은 생선류 및 육류 등을 조리시에는 코팅이 되어 있는 석쇠망을 이용하십시오.
- 그물망을 이용시 껍질이 달라붙어 잘 떨어지지 않습니다.

사용방법

사용방법

5 뚜껑을 닫고 타이머를 [5]에 맞춰 5분간 예열합니다.

 
- ※ 5분 이하로 맞추실 때에는 10분 이상 돌리고 나서 다시 5분으로 돌려 시간을 맞추십시오.
- ※ 램프는 조리 준비 후 타이머 동작시 점등되며, 타이머의 설정시간이 완료되어 조리 완료 알람벨이 울리면 램프는 꺼집니다. (CFR-331R/G 모델에만 해당)

주의

- 제품 사용중에 히터에서 '딱딱' 소리가 나는 경우가 있습니다. 이는 히터가 열로 인해 팽창하면서 나는 소리로 예열이 완료되면 소리가 발생하지 않으므로 고장이 아닙니다.
- 타이머를 동작시키면, 타이머가 회전하는 "딸깍 딸깍" 소리가 납니다. 이는 타이머가 회전하고 있다는 소리로, 타이머의 설정 시간이 완료되면 "땡" 하고 조리 완료 알람벨이 울리면서 소리가 나지 않습니다.

6 재료를 넣어 조리하십시오.

- 뚜껑을 열고 구이망 위에 재료를 놓습니다.
- 뚜껑을 닫고 타이머를 원하는 시간에 맞추십시오.
- 조리중에는 중간중간에 조리 확인창을 통해 재료의 조리상태를 확인 하면서 조리하십시오.
- 구이를 도중에 멈출 경우에는 타이머를 OFF 위치까지 돌려주십시오.

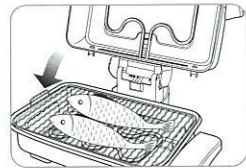


주의

- 재료의 크기, 양에 따라 구워지는 정도가 다르므로 설정시간을 적절히 조절하면서 사용하십시오.

7 재료를 꺼내 주십시오.

 - 구이가 완성되면 뚜껑을 열고 구워진 정도를 확인하고 꺼냅니다.
- 사용 후에는 반드시 전원플러그를 뽑아주십시오.
- 본체가 식은 후에는 물받이의 물을 버려주십시오.

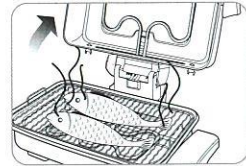

주의

- 뚜껑을 열었을 때 히터가 뜨거우므로 손대지 마십시오. (화상을 입을 수 있음)
- 조리 완료 후 뚜껑이 뜨거우니 뚜껑 손잡이를 이용하여 여닫습니다.
- 조리 후 석쇠망 및 그물망은 반드시 완전히 식힌 후 꺼내십시오.

조리시 주의사항

 
- 조리 재료의 크기는 4cm 이내로 잘라서 사용하십시오. 이보다 큰 재료를 사용하면 재료가 상부 히터선에 닿아 조리 완료전 타는 수가 있습니다.
- 30분 이상(2회 이상)으로 연속하여 사용하고자 할 때에는 반드시 물받이에 물이 있는지 확인하고 물을 수위선까지 보충한 다음에 사용하십시오.

청소방법

손질할 때에는 타이머가 OFF 위치에 있는지 확인 후, 반드시 전원 플러그를 콘센트에서 빼고 본체가 완전히 식은 상태에서 손질을 해 주십시오.


1 본체, 히터, 램프창

- 1) 주방용 중성세제를 적신 행주를 잘 짜서 닦아 주십시오.
- 2) 물기가 없는 천으로 물기를 잘 닦아 주십시오.
 - 본체 및 히터에는 물을 뿌리거나 물에 담그지 마십시오.
 - 감전이나 부식의 원인이 됩니다.

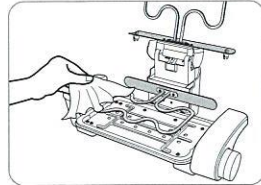

2 석쇠망 및 그물망

 - 1) 주방용 중성세제를 적신 부드러운 스폰지로 닦고 물로 행군 후 부드러운 천으로 잘 닦아 주십시오.
 - 석쇠망에는 불화탄소수지코팅이 되어 있습니다. 가공면에 손상이 생기므로 딱딱한 솔이나 금속성 수세미로 긁지 마십시오.

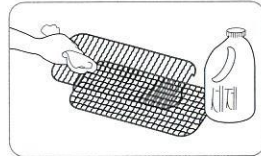


3 물받이

- 1) 주방용 중성세제를 적신 부드러운 스폰지로 닦고 물로 행군 후 부드러운 천으로 잘 닦아 주십시오.




4 뚜껑, 반사판

 - 1) 뚜껑 및 반사판은 주방용 중성세제를 적신 부드러운 스폰지로 닦고 물로 행군 후 부드러운 천으로 잘 닦아 주십시오.

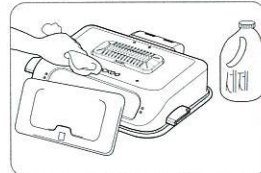

5 실리콘 패킹

 - 1) 주방용 중성세제를 적신 부드러운 스폰지로 닦고 물로 행군 후 부드러운 천으로 잘 닦아 주십시오.
- 2) 물기가 남아있지 않은 상태에서 실리콘 패킹을 삽입하여 주십시오.

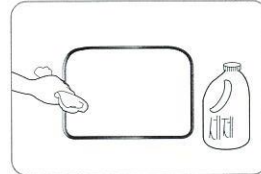


주의

· 실리콘 패킹 삽입시 방향을 반드시 확인하고 삽입하여 주십시오. (36페이지 '실리콘 패킹 삽입 방법' 참고)

보관방법

6 유분흡착필터케이스(CFR-331R/G 모델에만 해당)

 - 1) 유분흡착필터케이스는 주방용 중성세제를 적신 부드러운 스폰지로 닦고 물로 헹군 후 부드러운 천으로 잘 닦아 주십시오.
 - ※ 유분흡착필터는 소모품입니다. 사용하신 유분흡착필터는 버려주십시오. 유분흡착필터는 세척할 수 없습니다.
 - ※ 유분흡착필터의 추가구매를 원하실 경우 유분흡착필터 사용안내 (36페이지)를 참조하십시오.

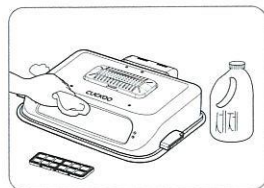

주의

- 신나, 벤젠, 치약, 딱딱한 솔 등은 사용하지 마십시오.
- 본체, 열선은 물 세척을 하지 마십시오.
- 락스 또는 염소성분이 첨가된 세제로 세척하거나 닦지 마십시오

보관방법

1 제품을 깨끗이 손질 후 보관하십시오.

청소방법(43페이지)을 참조하여 제품을 손질 후 완전히 건조시켜 주십시오.

주의

- 제품에 이물질이 묻어있는 상태로 보관시 이물질이 부패하여 냄새 및 곰팡이 등의 세균 발생의 원인이 됩니다. 반드시 깨끗이 손질 후 보관하십시오.



 
2 서늘한 장소에 보관하십시오.

실외에 보관하지 마시고, 습기가 없고 서늘한 장소에 보관하십시오.



3 구성품들을 모두 조립한 다음 보관하십시오.

분리하여 보관시 구성품의 변형 및 본질의 원인이 됩니다.

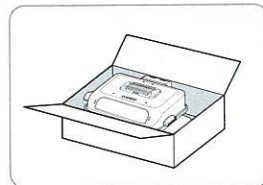

고장신고 전에 확인하십시오

▼ 사용방법 대로 올바르게 사용하지 않았을 경우에는 고장이 아니더라도 제품이 제대로 작동하지 않을 수가 있습니다. 제품 기능에 이상이 있으면 아래의 점검표대로 점검해 보고 그래도 이상이 있으면 고객상담실로 문의하여 주십시오.

증 상	확인사항	조치사항
히터가 가열 되지 않을 때	<ul style="list-style-type: none"> 전원플러그가 콘센트에 꽂혀 있습니까? 정전되지는 않았습니까? 타이머가 'OFF' 위치에 있지 않습니까? 전원 코드의 피복이 벗겨지거나 끊어지지 않았습니까? 	<ul style="list-style-type: none"> 전원플러그를 콘센트에 꽂아주십시오. 정전여부를 확인한 다음 전원플러그를 콘센트에 꽂아주십시오. 타이머를 설정시간에 맞게 돌려 주십시오. 고객 상담실로 문의 하십시오.
히터의 열이 약할 때 (조리 시간이 오래 걸릴 때)	<ul style="list-style-type: none"> 사용전압이 교류 120V 인니까? 	<ul style="list-style-type: none"> 반드시 교류 120V를 사용하십시오.
냄새나 연기가 날때	<ul style="list-style-type: none"> 히터에 이물질이 있지 않습니까? 처음사용하지 않았습니까? 	<ul style="list-style-type: none"> 히터에 묻은 이물질을 제거하여 주십시오. 최초 사용시에는 히터 부위에서 연기나 냄새가 날 수 있습니다. 히터 주변의 습기나 작은 먼지가 타면서 나오는 것으로 온도가 안정되면 연기가 나오지 않습니다.
히터에서 소리가 날때	<ul style="list-style-type: none"> 사용한지 15분 이내 인니까? 	<ul style="list-style-type: none"> 제품 사용중에 히터에서 '딱딱' 소리가 나는 경우가 있습니다. 이는 히터가 열로인해 팽창하면서 나는 소리로 일정 온도이상 히터가 가열되면 소리가 나지 않습니다.
램프가 동작하지 않을 때	<ul style="list-style-type: none"> 전원플러그가 콘센트에 꽂혀 있습니까? 정전되지는 않았습니까? 타이머가 'OFF' 위치에 있지 않습니까? 	<ul style="list-style-type: none"> 전원플러그를 콘센트에 꽂아 주십시오. 정전여부를 확인한 다음 전원플러그를 콘센트에 꽂아 주십시오. 타이머를 설정시간에 맞게 돌려 주십시오. 고객 상담실로 문의 하십시오.

Product Specifications

Model Name	CFR-331R / CFR-331G
Rating	AC 120V, 60Hz
Power Consumption	1000W
Timer Settings	0~30minutes
Surface Treatment (Coating)	Fluorocarbon Polymer (Grill Wire Rack)
Length of Power Cord	1.4m
Dimensions of Grill Trays (mm)	Grill Wire Rack 321mmX212mm, Wire Mesh 321mmX212mm
Appliance Dimensions (mm)	293mm X 212mm X 440mm
Weight(kg)	4.7kg
Grill Trays	Grill Wire Rack & Wire Mesh

※ The product design and specifications may be changed without prior notice for improving product performance

CUCKOO MULTI ROASTER LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. P&K USA TRADING CORP. covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

MODEL#	#LABOR	PARTS	WARRANTY PERIOD
CFR-331R	1YEAR	1YEAR	HOW SERVICE IS HANDLED
CFR-331G			The East and the Central Districts Call : 718 888 9144 Address : 5-48 46th Road, Long Island City, NY 11101 The West and the Central Districts. Call : 323 780 8808 Address : 1137 E. 1st Street, L.A, CA 90033, USA Canada (TORONTO) Call : 647 625 1004 Address : #8-2150 Steeles Ave W, Vaughan, O.N. L4K 2Y7 Canada (VANCOUVER) Call : 604 540 1004 Address : 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

To damages problems which result from delivery or improper installation.

- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove warranty Coverage : ► **Retain your Sales Receipt to prove date of purchase**
 ► **Copy of your Sales Receipt must submitted at the time warranty service is provided.**

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

The East and the Central Districts

Call : 718 888 9144

Address : 5-48 46th Road, Long Island
City, NY 11101

The West and the Central Districts.

Call : 323 780 8808

Address : 1137 E. 1st Street, L.A,
CA 90033, USA

Canada (Toronto)

Call : 647 625 1004

Address : #8-2150 Steeles Ave W,
Vaughan, O.N. L4K 2Y7

Canada (Vancouver)

Call : 604 540 1004

Address : 945 Lougheed Hwy
Coquitlam BC Canada
V3K 3T4

CUCKOO

www.cuckooamerica.com

The East and the Central Districts
Call : 718 888 9144
Address : 5-48 46th Road, Long Island
City, NY 11101

The West and the Central Districts.
Call : 323 780 8808
Address : 1137 E. 1st Street, L.A.,
CA 90033, USA

Canada (Toronto)
Call : 647 625 1004
Address : #8-2150 Steeles Ave W,
Vaughan, O.N. L4K 2Y7

Canada (Vancouver)
Call : 604 540 1004
Address : 945 Lougheed Hwy
Coquitlam BC Canada
V3K 3T4

We provide satisfying consultation and services concerning your complaints, suggestions, and recommendations upon receiving your troubled product model name, status, and contact information.

- After reading this manual, keep it in a place easily accessible to the user for future reference.
- This manual includes the warranty.
- Caution : Please read this manual carefully to ensure safety and a longer product lifespan.