

CUCKOO

CUCKOO ELECTRIC KETTLE

전기주전자

Operating Instructions

사용설명서

CK-171W



design

love



Intertek
3077828

CUCKOO ELECTRONICS CO., LTD.

Thank you very much for purchasing
"CUCKOO" Electric Kettle.

"CUCKOO" Electric Kettle.
Read all instructions before use.
Save these instructions for future reference.

저희 쿠쿠 전기주전자를 애용해
주셔서 감사합니다.

이 사용설명서는 잘 보관하여 주십시오.
사용 중에 모르는 사항이 있을 때나 기능이
제대로 발휘되지 않을 때 많은 도움이 될 것입니다.

CONTENTS

Before using the appliance ●

Warnings for safety	4~6
Caution for safety	7
Name of each part / Components Guide	8

When using the appliance ●

How to use	9~10
Cleaning(removing water filth)method with vinegar	11
Cleaning(removing water filth)method with citric acid	12
How to clean / How to insert a filter	13

Before calling customer service ●

Check before asking for service	14
Specifications	15
Limited Warranty	

사용하기전에 ●

안전상의 경고	16~18
안전상의 주의	19
각 부분의 이름 / 부속품 안내	20

사용할때 ●

사용방법	21~22
식초를 사용하는 경우 청소(물때 제거)방법	23
구연산을 사용하는 경우 청소(물때 제거)방법	24
손질방법 및 거름망 끼우는 방법	25

고장신고전에 ●

고장신고전에 확인하십시오	26
제품규격	27
Limited Warranty	

IMPORTANT SAFEGUARDS

- This appliance is designed for domestic use only and for commercial applications. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
- Please keep these instructions for future reference. If the appliance is passed to another person, This instruction manual should accompany it .
- Before inserting the main plug into the socket, check the main supply voltage and current rating corresponds with the power supply details shown on the appliance model label.
- Never allow the heating base or the kettle to make contact with or be immersed in water. However, should this happen, have the unit examined by a qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to our customer service department.
- Do not operate the appliance when the appliance or power cord has any signs of damage.
- Always remove the plug from the wall socket after use, before cleaning and malfunction.
- When removing the plug from the wall socket, never pull on the power cord.
- Children do not recognize the dangers that may occur when operating electrical appliances; Therefore keep children away from such appliances.
- Do not attempt to remove any parts of the housing nor insert any metal objects into the interior of the appliance.
- To prevent damage to the power cord, do not let it pass over sharp corners or edges.
- Do not expose the appliance to rain or moisture and do not operate the appliance outdoors or with wet hands.
- Use only clean cold water, and let the water run for approx two minutes before filling.
- The appliance operates at very high temperatures, Caution: there is danger of scalding from escaping water or steam.
Do not touch any part of the kettle except the handle (when the appliance is in use and ensure that the lid is properly screwed. This appliance is designed for heating water only. Never put any other liquid into the kettle.



Warnings for safety

- The following must be observed to use the product safely and correctly to prevent accident and dangerous situations.
- 'Warning' and 'Caution' are different as follows.



Warning

This means that the action it describes may result in death or severe injury.



Caution

This means that the action it describes may result in injury or property damage.



- This sign is for reminding something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.



Warning

Please use the power cord for the socket of over 16A and AC 120V and do not try to put several power cords into the socket.

- When putting several cords into the socket, it will cause electric hazard and fire.
- Try to put clean power cords into the socket.
- For extension cord, please use it for 16A.

If there is damaged power cord for the appliance, please call CS for the support.

- Ask for replace or fix damaged the good to Customer service center.
- Please contact registered branch for the service.
- It may cause an electric hazard and fire.

Do not try to bend or tie the power cord.

- It may cause an electric hazard and fire.

Please always dry and clean the power cord with cloth.

- It may cause an electric hazard and fire.

Do not use on a rice chest or a shelf.

- Do not press the power code between furniture. It can cause an electric shock resulting in fire.
- When using on furniture, automatic steam releasing can cause damage, fire and an electric shock.

Use product at the flat place. Do not use on the cushion. Please avoid using it on an unstable location easy to be fallen down.

- It can cause a transformation or a fire.

Warnings for safety



Warning

Don't touch or go near to the steaming part while boiling water.

- You may get burnt by steam. Specially keep the children away from it.
- The steam which comes out is really hot while the pot is being operated, so, don't make your hands or face near to it.

Do not place the appliance on or near a hot gas flame, an electric element or on a heated oven.

- It will cause an electric hazard and fire.
- Do not place the appliance near any heated appliance.

Do not put it in the place where children can use it by themselves or children can touch it.

- You may get burnt by heat or get electrical shock.

Do not use the appliance on tilted surface.

- It will cause damage to the appliance.
- Be careful to install the power cord which does not disturb to pass.

Do not alter, disassemble or repair the humidifier.

- It can cause fire, electric shock or injury.
- For repairs, contact dealer or service center.

Do not use it on the places where are wet and contain chemical substance.

- There is danger of electrical leakage and electrical shock.
- Don't use it in a dusty place or a place where contains chemical substance.
- If water went into it, be sure to contact the customer center

Do not immerse the appliance in water or any other liquid or chemicals unless recommended.

- It may cause an electric hazard and fire.
- Use the appliance in clean environment.
- If the appliance is contacted with water, please call customer service.

Do not put water above the line of Max and under the line of Min and use it.

- If you put water more than the maximum capacity, hot water may leak out through the upper part of the lid, so be very careful of getting burnt.
- If you put water less than minimum capacity, water may vapor and dry because of heat.



Warnings for safety

Warning

Don't open the lid while water is boiling.

- It is very hot while it is being operated, so don't touch the body part or the lid.

Do not place any heavy objects or sharp objects on the power cord.

- It will cause an electric hazard due to damaged power cord and plug

Don't operate it if there isn't any water.

Unplug the cord from the socket with dry hand.

- It will cause an electric hazard & damage the appliance.

Use the base of the product for the body part, do not use any other base.

- If you don't do it, it can cause electrical leakage, fire and disorder.

Don't put any foreign substance like a metal stick inside of the product and the base. (Specially children should be watched out)

- If you don't do it, it can cause electrical leakage and fire.

Don't hold any part except the handle while using it.

- If you don't do it, it can cause fire because of heat.

Unplug the cord when not in use.

- It will cause electric hazard & fire.

If you move the kettle with holding the handle, be sure to check the power switch off, remove the base and use it.

Do not use the body part for other purposes or on a gas fire or other grills, use the body part with the base only.

- If you don't do it, it causes fire or disorder.

Caution for safety



Caution

Do not use the product when a cloth, a cover or any object is on it.

- If you don't do it, it causes the change of the shape and the color of the body part.

Please contact dealer or service center when strange smell or smoke is occurred.

- First pull out the power cord.

Unplug the power plug from the socket safely.

- It will cause an electric hazard & damage the appliance.

Do not drop the appliance.

- It will cause an electric hazard & damage the appliance.

Use it only for boiling water.

- If you boil milk, coffee, green tea, wheat tea or ice in it, it causes disorder.


When using it, you must insert a filter.

- If you don't do it, it may not work properly and it causes disorder.
- If you lose a filter contact the customer center without dialing your local code.



Name of each part / Components Guide

Name of each part

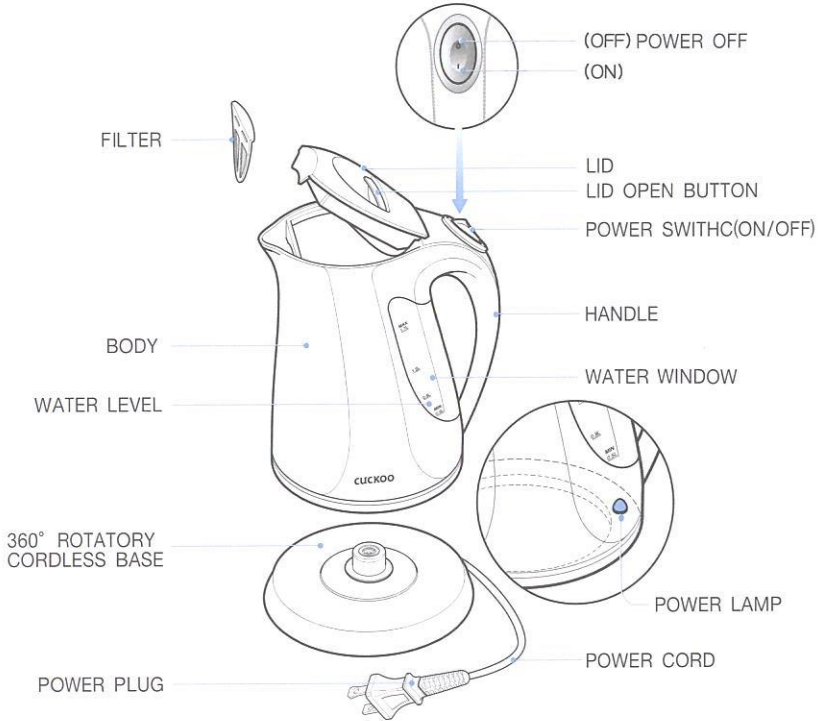

Adjust the length

- Adjust the length with winding the power wire in the home of the pot prop.
- Take the power cord towards the home next to the prop and fix it.

Components Guide



Manual




Filter



How to use

- 1 Place the base in an even place where isn't any fire nearby and connect the power plug to an outlet.
 - The base is only possible to be used in an original Cuckoo electrical kettle (CK-171W).

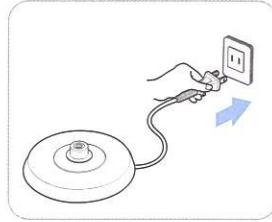

- 2 Open the lid and fill water.
 - While the kettle is on the base, don't pour water.
 - Don't put water more than MAX or less than MIN. If you put water more than MAX, water might come out through the upper part of the lid, so be very careful.
 - When pouring water, pull the lid backwards until it doesn't open to fix the lid. And then you can pour water easily.




How to open the lid

① Press the lid open button.



② Pull the lid upwards slightly.

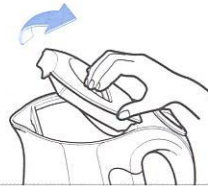



How to use

How to use

3 Close the lid.

- If you don't close it, you may get burnt by steam or boiling water.



4 Put the kettle on the base and turn on the power.

- If you turn on the power, the power signal light is on and water starts to boil.
- After boiling water, the power will be off automatically.



5 When the kettle stops operating completely, take the kettle out of the base.

- After using it, don't leave any water in the kettle.
- After using it, let the power cord unplugged.



- When using it for the first time, there might be some smell in the kettle. When using it for the first time, pour water and boil it 2 or 3 times and then use it.

Warning

- Don't operate it if there isn't any water.
- When using it for the first time, smoke might occur from the bottom of the pot. It is made from foreign substance in the heater after the substance gets burnt. But, the smoke will disappear within 30 seconds, so, don't worry if it is out of order or not.

Cleaning (removing water filth) method



Cleaning (removing water filth) method with using vinegar



- 1 Fill water up to 3/4ths of the maximum capacity of the kettle and boil it.



- 2 Turn off the power and add vinegar in the water up to the maximum capacity of the kettle.




- 3 Leave the liquid in the kettle over night.



- 4 Empty the kettle and wash the inside of it thoroughly.



- 5 Pour clean water in the kettle and boil it.

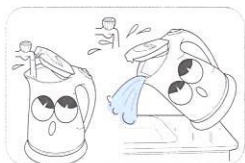

- 6 Empty the kettle and rinse it with clean water.
 - In case anything is left, do the process above again and again.
 - Also, it is good to rinse it with water filth washing liquid.

Remove water filth regularly.

■ You must do it at least once a month, but in case of using strong water, do it more often.




Cleaning (removing water filth) method

Cleaning(removing water filth) method with using citric acid



- 1 Fill water up to the maximum in the kettle.

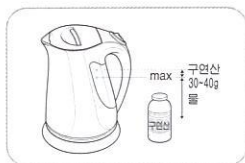


- 2 Pour the citric acid washing liquid into the kettle which contains 30~40g of water.



- 3 Turn on the power of the kettle.



- 4 After it is heated once and the power goes off, open the lid and cool it down.

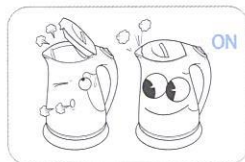

- 5 After it's cooled down, close the lid and turn on the power again.



- 6 After doing that 2 or 3 times over and over, remove the used water, pour clean water in it, reoperate it and rinse it.


Remove water filth regularly.

■ You must do it at least once a month, but in case of using strong water, do it more often.




How to clean

- 1 Unplugged the power cord.

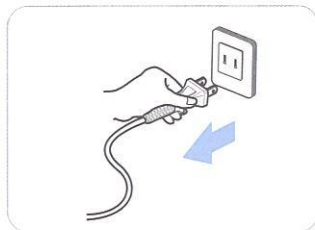


- 2 Soak a soft cloth in a warm water and wipe the body part.
 - Separate the base from the kettle before washed , wait until it cools down completely and wipe it with wet sponge.
 - Don't wipe it with thinner, benzens and combustibles.

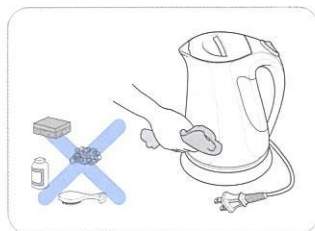

- Never put the body part or the base in the water because the part contacting electricity or switches mustn't get any water.
- Don't wipe the outside of the kettle with abrasive.

How to insert a filter

- Insert a filter into a groove in the filter cap and use it.
(If you hold the filter and press it downwards slightly, you can take the filter in and out.)
- When you wash it, separate the Filter and wash the kettle. And insert it back and use it..
- When you use it, make sure insert a filter and use it.
(When it is used without a filter it may not operate and it can cause it out of work.)
- When it is lost, contact the closest service center or the customer service center.

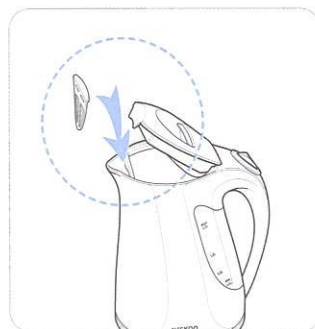

Check before asking for service

▼ Read the below carefully. When the appliance does not function properly, please check the below list to make sure whether the appliance is broken or not.

Case	Checkpoint	Do the following
When it is not working or not boiling	<ul style="list-style-type: none">• Check if the power cord is plugged.• Check if there is block out.• Check if the power cord is damaged.• Check if it is for 120V~(AC)• Check if it is power switch on.• Check if the base is Original base.	<ul style="list-style-type: none">• Plug the cord into the socket.• Wait until the electricity is back on.• Call customer service.• Use only 120V~(AC)• push the power switch.• Use Original base.
When it is some smell in the water	<ul style="list-style-type: none">• Check if it is used for the first time.• Check if it use the kettle for other purpose.	<ul style="list-style-type: none">• When it is used for the first time, there might be some smell in the kettle. When using it for the first time, pour water and boil it 2 ~ 3 times and then use it.• Only use the kettle for boiling water.

Specification

Product name	CUCKOO ELECTRIC KETTLE
Model name	CK-171W
Voltage	120V~(A.C) / 60Hz
Power	1,500W
Capacity	1.7ℓ
Weight	1.0kg
Length of power cord	0.7m
Size	165(W) × 207(L) × 220(H) mm
Parts	Instruction manual, Filter

※ Details in the manual can be changed or modified to increase product quality.



안전상의 경고

- '안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- '안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.

! 경고 피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황

! 주의 피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황



- 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다.
- 위험 발생을 피하기 위해 주의깊게 읽고 지시에 따라 사용하십시오.

! 경고

반드시 접지가 되는 정격 16A 이상의 교류120V 전용 콘센트에서만 사용해 주시고 하나의 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오.

- 여러 제품과 함께 사용하거나 다른 가구에 사용하면 발열 및 발화, 감전의 원인이 됩니다.
- 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오.
- 연장코드도 16A 이상의 것을 사용하여 주십시오.

전원코드나 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고, 고객센터로 문의 바랍니다.

- 전원코드나 전원플러그가 파손된 경우에는 위험이 생기지 않도록 하기 위하여 제조사나 그 판매점 또는 유자격 기술자(서비스 기사)에 의해 코드 교환을 하십시오.
- 반드시 지정된 서비스 센터에서 수리하시기 바랍니다.
- 감전 및 누전 화재의 원인이 됩니다.

전원 코드를 무리하게 구부리거나, 묶거나 잡아당기지 마십시오.

- 감전이나 쇼트가 생길 수 있어 화재의 원인이 될 수 있습니다.

전원 플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.

- 감전, 쇼크 발화의 원인이 될 수 있습니다.

쌀통 및 다용도 선반 등에 제품을 놓고 사용하지 마십시오.

- 전원코드가 틈새에 눌러져 화재 및 감전의 원인이 됩니다.
- 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

제품 밑에 깔판, 방석, 전기 장판 등을 놓고 사용하지 마십시오.

- 화재 및 변형의 원인이 됩니다.



안전상의 경고

! 경고

물 끓일시 증기가 나오는 부분을 만지거나 접근하지 마십시오.

- 증기에 의한 화상의 우려가 있습니다. 특히, 어린이의 접근을 막아 주십시오.
- 주전자 작동 중에 나오는 증기는 매우 뜨거우므로 손이나 얼굴을 가까이 하지마십시오.

제품을 분해하거나 개조하지 마십시오.

- 화재 및 감전의 원인이 됩니다.
- 서비스기사 이외의 사람이 분해하거나 수리하지 마십시오.
- 수리 및 고장상당은 고객상담실로 문의하여 주십시오.

제품에 직사광선이 쬐는 곳, 가스레인지, 전열기구 가까이에서 사용하지 마십시오.

- 전기누전 및 감전 변형, 변색의 원인이 됩니다.
- 전원코드를 열기구 가까이 두지 마십시오.
코드피복이 녹아 화재, 감전의 원인이 됩니다.

싱크대, 목욕탕 등 제품에 물이 들어 갈 수 있는 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오.

- 전기 누전 및 감전의 위험이 있습니다.
- 먼지가 많은 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오.
- 제품에 물이 들어갔을 경우에는 고객상담실로 꼭 문의하십시오.

어린이 혼자 사용하거나 어린이가 만질 수 있는 장소에 제품을 두지 마십시오.

- 고열에 화상을 입거나 감전 될 수 있습니다.

제품을 싱크대에 넣고 닦거나, 제품 바닥부가 물에 닿지 않도록 하십시오.

- 전기 누전 및 감전, 화재의 원인이 됩니다.

경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.

- 화상 및 제품고장의 원인이 됩니다.
- 전원 코드에 손이나 발, 기타 물체가 걸려 제품이 떨어지지 않도록 주의 하십시오.

최대 용량(MAX) 이상, 최소 용량(MIN) 표시 눈금 밑으로 물을 넣고 사용하지 마십시오.

- 최대용량(MAX)이상으로 물을 넣을 경우, 뚜껑의 윗 부분을 통하여 뜨거운 물이 흘러 나올 수 있으므로 특히 화상에 주의 하십시오.
- 최소 용량 (MIN)이하로 물을 넣을 경우 열로인해 물이 증발되어 말라버릴 위험이 있습니다.



안전상의 경고

! 경고

물이 끓고 있을 때 뚜껑을 열지 마십시오.

- 제품이 동작중일 때에는 뜨거운 제품의 본체나 뚜껑에 손을 대지 마십시오.

전원플러그를 콘센트에 꽂거나 뺄 때는 손의 물기를 반드시 제거한 후 전원 플러그를 잡고 꽂거나 빼어 주십시오.

- 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다.
- 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.

절대 물이 없는 상태에서 동작하지 마십시오.

전원코드가 무거운 것에 눌리거나 날카로운 부위에 닿지 않도록 하십시오.

- 코드손상으로 인한 감전이나 화재의 원인이 됩니다.

본체는 본제품 전용 받침대를 사용하고 절대 전용 받침대가 아닌 다른 받침대를 사용하지 마십시오.

- 감전, 화재, 제품고장의 원인이 됩니다.

제품 내부 및 받침대에 금속막대기 등 이물질은 절대 넣지 마십시오.
(특히, 어린이 주의)

- 감전 및 화재의 원인이 됩니다.

손잡이 이외의 곳을 잡고사용하지 마십시오.

- 고열로 인한 화상의 원인이 됩니다.

사용 시 이외에는, 전원 플러그를 콘센트에서 빼주십시오.

- 절연 열화에 의한 감전, 누전, 화재의 원인이 됩니다.

주전자의 손잡이를 잡고 이동할 경우 전원 스위치가 반드시 꺼져 있는지 확인 후 받침대를 제거하고 사용하십시오.

본체를 다른 용도로 사용하거나 가스불이나 기타 직화에서 절대 사용하지 마시고 본체는 반드시 전용 받침대와 함께 사용하십시오.

- 화재 및 제품 고장의 원인이 됩니다.



⚠ 주의

증기구를 행주나 장식용 덮개, 기타 물건을 올린 채 사용하지 마십시오.

- 본체의 변형, 변색 및 고장의 원인이 됩니다.

사용 중에 이상한 소리, 냄새, 연기가 나면 즉시 전원플러그를 뽑고 고객상담실로 문의해 주십시오.

전원플러그를 뽑을 때는 전원코드를 잡지 마시고 꼭 전원플러그를 잡고 뽑아주십시오.

- 전원코드에 충격이 가면 감전 및 화재의 원인이 될 수 있습니다.

제품에 심한 충격을 주거나 떨어뜨리지 마십시오.

- 제품고장 및 안전상의 문제가 발생할 수 있습니다.
- 제품에 무리하게 힘을 가하거나 떨어뜨리지 마십시오.

본 제품은 항상 물을 끓이는 용도로만 사용하십시오.

- 우유, 커피, 녹차, 보리차, 얼음 등을 넣고 끓이면 고장의 원인이 됩니다.

사용시에는 반드시 거름망을 끼워서 사용하십시오.

- 거름망을 끼우지 않고 사용시정상적으로 동작되지 않을 수 있으며 제품고장의 원인이 됩니다.
거름망을 분실하였을 경우에는 고객상담실로 문의하십시오.



각 부분의 이름 / 부속품 안내

각 부분의 이름



전원코드 길이조절

- 주전자 받침대 안쪽홀에 전원전선을 감아 길이를 조절하십시오.
- 전원코드를 받침대 옆에 있는 홈으로 빼내어 고정시켜 주십시오.

부속품 안내



사용설명서




거름망



사용방법


- 1 무선주전자의 받침대를 화기가 없는 평평한 곳에 놓고, 전원 플러그를 콘센트에 연결하십시오.

• 받침대는 정품 쿠쿠전기주전자(CK-171W)만 사용 가능합니다.

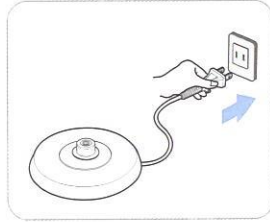

- 2 무선주전자의 뚜껑을 열고 물을 채워 주십시오.

- 주전자가 받침대 위에 올려져 있는 상태에서 절대로 물을 넣지 마십시오.
- 최대표시(max)이상이나 최소표시(min)이하로 물을 넣지 마십시오. 물을 최대 표시 이상으로 넣을 경우 뚜껑의 윗부분을 통해 끓는 물이 넘칠 수가 있으므로 특히 주의하십시오.
- 물을 채워 넣을 때는 뚜껑을 뚜껑이 더이상 열리지 않을때 까지 뒤로 당겨주시면 뚜껑이 고정되어 손쉽게 물을 넣을 수 있습니다.

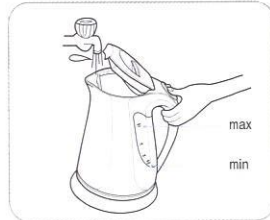

뚜껑 여는 방법

- ① 뚜껑 열림 버튼을 눌러 주십시오.



- ② 뚜껑을 위로 가볍게 당겨 주십시오.





사용방법

사용방법

3 뚜껑을 닫아 주십시오.

- 뚜껑을 닫지 않으면 스팀이나 끓는물에 의해 화상을 입을 수 있습니다




4 제품을 받침대 위에 올리고 전원스위치를 눌러 주십시오.

- 전원스위치를 누르면 전원표시등에 불이 들어오고 물이 끓기 시작합니다.
- 물이 끓고 난 후에는 전원스위치가 자동으로 꺼집니다.



5 무선주전자가 작동을 완전히 멈추면, 주전자를 받침대에서 내려 놓으십시오.

- 사용 후에는 주전자 안에 물을 남기지 마십시오.
- 사용이 끝나면 전원플러그를 뽑아 주십시오.
- 처음사용시 주전자의 냄새가 나는 경우가 있습니다. 처음사용시에는 물을 넣고 끓이는 동작을 2~3회정도 반복 후 사용하십시오.

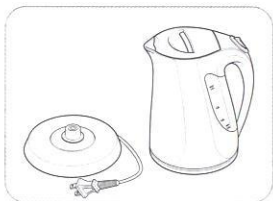


주 의

- 절대 물이 없는 상태에서 동작하지 마십시오.
- 처음 사용시에는 제품 바닥에서 연기가 발생할 수 있습니다. 이것은 히터에 묻은 이물질이 타면서 나는 연기로 30초 이내에 없어지므로 고장이 아닙니다.



식초를 사용하는 경우 청소(물때 제거)방법

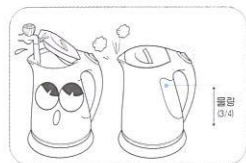

1 주전자에 MAX 용량의 4분의 3까지 물을 채워 끓이십시오.



2 전원스위치를 끄고, 채워진 물에 식초를 MAX 수위까지 첨가하여 주십시오.



3 하룻밤 동안 주전자 속의 용액을 그대로 두십시오.



4 주전자를 비우고 내부를 철저히 헹구십시오.



5 주전자 속에 깨끗한 물을 넣고 끓이십시오.



6 주전자를 비우고, 다시 깨끗한 물로 헹구십시오.

■만일 잔여물이 남아 있는 경우, 위의 과정을 반복하십시오.

■또한 물 때 제거용 세제를 사용하시어 헹구셔도 좋습니다.

정기적으로 물때를 제거해 주십시오

■적어도 한 달에 한 번, 단, 센물을 사용하는 경우에는 더욱 자주 해주십시오.



청소(물때 제거)방법

구연산을 사용하는 경우 청소(물때 제거)방법



- 1 주전자에 물을 MAX까지 채워 주십시오.




- 2 구연산 세정제 30~40g을 물이 채워진 주전자에 넣어 주십시오.



- 3 주전자의 전원을 ON시켜 주십시오.



- 4 1회 가열된 후, 주전자의 전원이 OFF되면 뚜껑을 열고 식혀 주십시오.

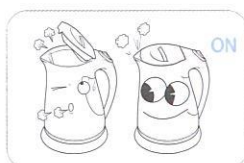

- 5 식힌 후 뚜껑을 닫고, 전원을 재 ON시켜 주십시오.



- 6 4, 5번의 동작을 2~3회 반복 후, 세정한 물을 버리고 맑은 물로 재충전하여 행귀주십시오.


정기적으로 물때를 제거해 주십시오

■ 적어도 한 달에 한 번, 단, 센물을 사용하는 경우에는 더욱 자주 해 주십시오.




손질방법

- 1 주전자의 전원코드를 빼십시오.

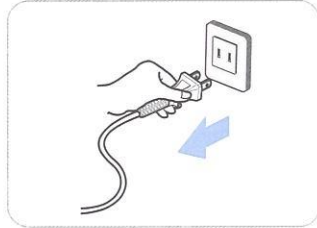

- 2 미지근한 물에 부드러운 천을 적셔 본체를 닦아주십시오.

- 주전자를 세척전에 받침대를 분리하여 제품이 안전히 식을 때까지 기다린 후 젖은 스펀지로 닦아 주십시오.
- 신나, 벤젠, 가연성 물질등으로 닦지 마십시오.

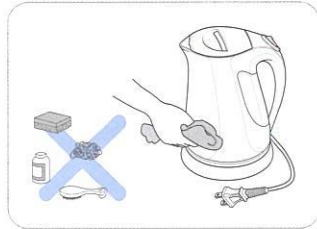

- 전기가 접속되는 부분이나 스위치에 물기가 묻으면 안되므로 주전자 본체나 받침대 부분을 절대로 물에 담그지 마십시오.
- 연마제로 주전자 외부를 닦지 마십시오.

거름망 끼우는 방법

- 거름망은 주입구 안쪽 홈에 꼭 끼워 사용해 주십시오. (거름망을 잡고 아래로 살짝 누르면 거름망을 빼고 꽃을 수 있습니다.)
- 세척시에는 분리하여 세척한 다음 다시 끼워 사용하십시오.
- 사용시에는 반드시 거름망을 끼워서 사용하십시오. (거름망을 끼우지 않고 사용시 정상적으로 동작되지 않을 수 있으며 제품고장의 원인이 됩니다.)
- 분실하셨을 때는 가까운 서비스센터로 문의하십시오.



고장신고 전에 확인하십시오

▼ 사용방법 대로 올바르게 사용하지 않았을 경우에는 고장이 아니더라도 제품이 제대로 작동하지 않을 수가 있습니다. 제품 기능에 이상이 있으면 아래의 점검표대로 점검해 보고 그래도 이상이 있으면 서비스센터로 문의하여 주십시오.

증 상	확인사항	조치사항
제품이 동작하지 않거나, 가열되지 않는다.	<ul style="list-style-type: none"> • 전원플러그가 빠지지 않았습니까? • 정전되지 않았습니까? • 전원코드의 피복이 손상되지 않았습니까? • 사용전압이 120V 입니까? • 전원스위치가 켜져 있습니까? • 전용 받침대를 사용하셨습니까? 	<ul style="list-style-type: none"> • 전원플러그를 꽂은 후 다시 사용하십시오. • 전기가 들어오면 다시 사용하십시오. • 서비스센터에 연락하시어 서비스를 받으십시오. • 반드시 교류 120V를 사용하십시오. • 전원스위치를 켜 주십시오. • 전용 받침대를 사용하십시오.
물에서 냄새가 날때.	<ul style="list-style-type: none"> • 제품을 처음 사용하지는 않았습니까? • 물이외의 다른용도로 사용하지는 않았습니까? 	<ul style="list-style-type: none"> • 처음 사용시에는 냄새가 날 수 있습니다. 사용전에 물을 몇번 끓여서 버린 후 사용하십시오. • 물이외의 다른 용도로는 사용하지 마십시오.

제품규격

품 명	전기주전자
모 델 명	CK-171W
정 격 전 압	120V~(A.C) / 60Hz
정 격 소 비 전 력	1,500W
정 격 용 량	1.7ℓ
본 체 중 량	1.0kg
전 원 코 드 길 이	0.7m
본 체 크 기	165(W) × 207(L) × 220(H) mm
부 속 품	사용설명서, 거름망

※ 본 사용설명서에 표시된 내용(외관, 디자인 및 규격)은 제품의 품질 향상을 위해 예고없이 변경되는 수가 있습니다.

CUCKOO ELECTRIC KETTLE LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada. will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. P&K USA TRADING CORP covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

WARRANTY PERIOD

MODEL#	#LABOR	PARTS	HOW SERVICE IS HANDLED
CK-171W	1YEAR	1YEAR	<p>The East and the Central Districts Call : 718 888 9144 Address : 5-48 46th Rd. Long Island City, NY 11101, USA The West and the Central Districts. Call : 323 780 8808 Toll Free : 877 481 9828 Address : 1137 E. 1st St Los Angeles CA 90033, USA Canada (TORONTO) Call : 416 878 4561 / 905 707 8224 Address : #D8-7398 Yonge Street Thornhill Ontario Canada L4J 8J2 Canada (VANCOUVER) Call : 604 540 1004 / 604 523 1004 Address : 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4</p>

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- * To damages problems which result from delivery or improper installation.
- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove warranty Coverage : ► Retain your Sales Receipt to prove date of purchase
 ► Copy of your Sales Receipt must submitted at the time warranty service is provided.

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

<p>The East and the Central Districts Call : 718 888 9144 Address : 5-48 46th Rd. Long Island City, NY 11101</p>	<p>The West and the Central Districts. Call : 323 780 8808 Toll Free : 877 481 9828 Address : 1137 E. 1st St Los Angeles CA 90033</p>	<p>Canada (Toronto) Call : 416 878 4561 / 905 707 8224 Address : #D8-7398 Yonge Street Thornhill Ontario Canada L4J 8J2</p>	<p>Canada (Vancouver) Call : 604 415 9858/604 524 8282 Address : 103-4501 North Road Burnaby BC Canada V3R 4R7</p>
---	---	---	--