

사용설명서 Operating Instructions

CRP-CH10 Fuzzy Series

1.8L(2~10Persons) / 1.8L(2~10인분)

CUCKOO

always new

happiness

NO.1 CUCKOO

CUCKOO IH PRESSURE JAR COOKER



love

design

emotion

CUCKOO ELECTRONICS CO., LTD.

CONTENTS

Thank you very much for purchasing “CUCKOO”
Electric Rice cooker/warmer

Read the following instruction manual before use. Save this instruction manual for future reference. This manual will be useful if you have any questions or have problems operating the rice cooker.

CONTENTS

BEFORE USING

Important safeguards	3
Specifications	4
Safety precautions	5~8
Name of each part	9
How to clean	10~11
Function operating part	12
Error code and possible cause	12

WHEN USING

How to set current time	13
How to set or cancel voice guide function	13
Night voice volume reduction / voice setting function	14
Before cooking rice	15
For the best taste of rice	16
How to cook	17~18
MY MODE (Cuckoo Customized Taste Function) ...	19~20
How to use “GABA Rice (Brown rice)”	21~22
How to cook the MULTI-COOK	23
How to cook using fermentation bread baking	24~25
How to preset timer for cooking	26~27
How to use Preset Reheating Function	28~29
To keep cooked rice warm and tasty	30~32
How to use power saving screen light mode	33
Display Lighting power saving mode	34
How to lock buttons	34
How to use Remaining Cooking Time Display Mode	34
How to use the NFC Function	35~40

BEFORE ASKING FOR SERVICE

Check before asking for service	41~43
---------------------------------------	-------

저희 쿠쿠 전기압력보온밥솥을 이용해 주셔서 대단히 감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오.
사용 중에 모르는 사항이 있을 때나 기능이 제대로 발휘되지 않을 때 많은 도움이 될 것입니다.

목 차

사용하기전에

Important safeguards	3
제품규격	4
안전상의 경고	44~47
각 부분의 이름	48
제품 손질 방법	49~50
기능 조작부의 이름과 역할	51
기능 표시부의 이상점검 기능	51

사용할 때

현재시각의 설정	52
음성안내 기능의 설정과 해제	52
야간 음성볼륨 줄임 기능 / 음성 설정 기능	53
취사 전 준비사항	54
맛있는 밥을 드시려면	55
취사는 이렇게 하십시오	56~57
자동세척/간편 불림 기능은 이렇게 하십시오	57
쿠쿠 맞춤밥맛 기능은 이렇게 하십시오	58~59
현미발아는 이렇게 하십시오	60~61
멀티콕은 이렇게 하십시오	62
발효빵은 이렇게 하십시오	63~64
예약 취사는 이렇게 하십시오	65~66
예약 재가열은 이렇게 하십시오	67~68
밥을 맛있게 보온하려면	69~71
절전기능/에너지아이 기능은 이렇게 하십시오	72
화면조명 절전기능/버튼 잠금기능/ 취사 잔여시간 표시기능은 이렇게 하십시오	73
NFC 사용방법	74~79

고장 신고 전에

고장신고 전에 확인 하십시오	80~82
-----------------------	-------

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure
4. Close supervision is necessary when this appliance is used by or near children.
This appliance is not intended for use by young children without supervision.
5. Unplug from outlet when not in use and before cleaning.
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the Appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury.
Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods.
These foods tend to foam, froth, and sputter, and may block the pressure releasing device.
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced.
See "Operating Instructions."
22. Do not use this pressure cooker to fry in oil.
23. Be sure that handles are assembled and fastened properly before each use.
Cracked, broken or charred handles should be replaced.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use.
Allow the unit to cool down completely first.

HOW TO USE EXTENSION CORD

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- B. Extension cord should be used properly.
- C. Extension cord usage for the rice cooker:
- (1) The correct rated voltage should be used for the rice cooker.
 - (2) If the appliance is set on the ground, the extension cord should also be set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

SPECIFICATIONS / 제품규격

Model Name(모델명)		CRP-CH10 Fuzzy Series
Power Supply(전원)		AC120V, 60Hz
Power Consumption(소비전력)		1305W
Cooking Capacity (취사용량)	GLUTIN. RICE(백미)	0.36~1.8L (2~10cups)
	HIGH HEAT GLUTIN. RICE(백미고화력)	
	MIXED RICE(잡곡)	
	HIGH HEAT MIXED RICE(잡곡고화력)	0.36~1.44L (2~8cups)
	SUSHI RICE(김초밥)	
	SOFT GLUTIN.(SOFT백미)	
	TURBO GLUTIN. RICE(백미쾌속)	0.36~1.08L (2~6cups)
	TURBO MIXED RICE(잡곡쾌속)	
	GABA RICE(현미발아)	
	BROWN RICE(현미)	
	HIGH HEAT BROWN RICE(현미고화력)	
	NUTRI. RICE(영양밥)	
	HIGH HEAT NUTRI. RICE(영양밥고화력)	
	PORRIDGE(죽)	0.18~0.36L (1~2cups)
Power Cord Length(전원 코드 길이)		1.0m
Pressure(사용압력)		88.2KPa(0.9kgf/cm ²)
Weight(중량)		8.3kg
Dimension(치수)	Width(폭)	30.3cm
	Length(길이)	41.9cm
	Height(높이)	29.0cm

HOW SERVICE IS HANDLED

USA The East and the Central Districts
Tel. No. 718 888 9144
The West and the Central Districts
Tel. No. 323 780 8808

Canada TORONTO
Tel. No. 905 707 8224 / 416 878 4561
VANCOUVER
Tel. No. 604 540 1004 / 604 523 1004

SAFETY PRECAUTIONS



- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- 'Warning' and 'Caution' are different as follows.



Warning

This means that the action it describes may result in death or severe injury.



Caution

This means that the action it describes may result in injury or property damage.



- This sign is intended to remind and alert that something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.



- Indicates a prohibition



- Indicates an instruction



Warning



Do not

Do not cover the automatic steam outlet or pressure weight with your hand or face.

- It can cause burns.
- Especially be careful to keep it out of children's reach.



Do not use the cooker near hot things such as stove, gas stove or direct ray of light.

- It can cause an electric shock, fire, deformation, malfunction or discoloration.
- Please check the power cord and plug frequently.



Do not alter, reassemble, disassemble or repair.

- It can cause fire, electric shock or injury.
- For repair, contact dealer or the service center.



Do not let the cooker contact any water by sprinkling water on the cooker.

- It can cause an electric shock or fire.
- If it contacts water, please separate power cord and contact dealer and service center.

Please pay careful attention against water and chemicals.

- It can cause an electric shock or fire.




Use a single socket with the rated current above 15A.

- Using several lines in one socket can cause overheating or fire. Please check the power cord and plug frequently
- Use an extension cord with the rated current above 15A.



Do not use damaged power cord, plug or loose socket.

- Please check the power cord frequently for damage.
- Serious damage can cause electric shock or fire.
- If the plug is damaged, contact the dealer or a service center.

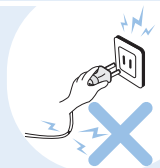



SAFETY PRECAUTIONS



Warning



Do not

Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.

- It can cause deformation or a breakdown.
- It can cause an explosion by pressure.



Do not use pots that are not designed for the cooker.

Do not use abnormal pot and do not use without inner pot.

- It can cause an electric shock or fire.



Do not use it without the inner pot

- It can cause electric shock or malfunction.
- Do not pour rice or water without the inner pot.
- If rice or water gets in then do not turn the product over or shake it please contact to dealer or service center.

Do not turn the Lock/Unlock Handle to "Unlock" during cooking

- The hot steam or any hot content within the cooker can cause burns.
- After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.

Remove external substances on plug with a clean cloth.

- It can cause fire.
- Please check the power cord and plug frequently.

Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.

- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.



Don't spray or put any insecticide and chemicals.

- It can cause an electric shock or fire.
- If cockroaches or any insects get inside the cooker, please call a dealer or a service center.



Do not put any needle, cleaning pin etc in the ventilator or any gap of the cooker.

- Do not insert cleaning pins to other parts except to the valve hole of the pressure weight.
- It can cause an electric shock or fire.

Do not open the top cover during heating and cooking.

- It can cause burns.
- If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam is released, completely turning the pressure weight over.

Do not place heavy things on the power cord.

- It can cause an electric shock or fire.

Do not cover the automatic steam outlet

- It can cause an electric shock or short circuit resulting in fire. Please check the power cord and plug frequently.



Be careful that both the plug and power cord are not to be bit by animals, or pierced by sharp metal materials.

- Damages by impact can cause an electric shock or fire. Please check the power cord and plug frequently.



Keep the cooker out of children's reach.

- It can cause burns, electric shock or injury.


SAFETY PRECAUTIONS



Warning

Do not use on a rice chest or a shelf.

- Do not place the power cord between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- When using on furniture be cautious of steam release As it can cause damage, fire and and/or electric shock.

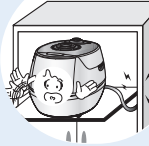

Remember

If you use cardiac pacemakers or electrical medical supporting equipment, consult a doctor before using this unit.

- When this unit is working, it can influence any electrical medical equipment.



Clean any dust or external substances off the temperature sensor and inner pot.

- It can cause a system malfunction or fire. it out of children's reach.



Do not plug or pull the power cord with wet hands.

- It can cause an electric shock.



Caution

Please contact dealer or service center if a strange smell or smoke has occurred.

- It can cause an electric shock.



Do not

Do not use over the maximum capacity.

- It can cause overflow or breakdown.
- Do not cook over capacity stated for cooking of chicken soup and congee.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight during and after the cooking.

Don't use the cooker near a magnetic field.

- It can cause burns or breakdown.



Please pull out the plug when not in use.

- It can cause electric shocks or fire.
- Use AC 120V only.

Use product on a flat surface. Do not use on a cushion. Please avoid using it on an unstable location prone to falling down.

- It can cause malfunction or a fire. Please check.
- the power cord and plug frequently.



Please use the cooker for original purposes.

- It can cause the malfunction or smell.

Don't use for various purposes for inner pot.

- It can cause deformation of the inner pot.
- It can cause to spill the inner coating.

Do not drop the cooker or impact.

- It can cause malfunction.



SAFETY PRECAUTIONS



Warning

Do not place on rough top or tilted top.

- It can cause burns or breakdowns.
- Be careful to install the power cord to pass without disruption.



When the exterior of inner pot is diamond shield plated.

- Use dry kitchen cleaner or sponge to clean the inner pot since rough scrub or metallic ones might cause scratch on the exterior of the plating.
- The friction of the inner pot with sink or other appliances can cause its plating's coming off. (No problem to use it)


Do not hold the cooker by the inner pot handle.

- It can cause problems and danger. There are portable handles on the bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.



Do not

Please call customer service if the inner pot coating peels off.

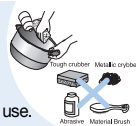

- Oven coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.



- The hot steam or any hot content within the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.



Caution

Be cautious when steam is being released

- It can cause burns.
- Especially be careful to keep it out of children's reach.

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.

- If you inflict impact on power cord, it can cause an electric shock or fire.



Remember

If power fails during rice cooking, automatic steam release may work, leading to dispersion of contents.

- Cook rice with specified amounts of rice and water.
- In particular, water more than specified amount may cause overflowing of contents.
- Cook rice while soft steam cap is mounted.

Do not keep easily spoiled food warm in the product such as red bean rice, mixed food, croquette or gratin. (Except white rice)

Wipe off any excessive water on the cooker after cooking.

- It can cause odor and discoloration.
- Wipe off water that is left behind from dew.

Please clean the body and other parts after cooking.



- After cooking chicken soup or, multi cook dishes, etc., the smell may be absorbed.
- Clean the oven packing, top heater plate and inner pot every time you cook any of those.
- Use dry kitchen cleaner or sponge to clean the inner pot, since rough scrub or metallic ones are abrasive to the coating. (Refer to page 10~11)
- Depending on the using methods or user's circumstances inner pot coating might rise. Please call the customer service for those cases.

Even if power plug is unplugged, turn lid combining hand grip always to ☰ (Lock) location.



- In case My Cauldron is hot or hot cooked rice is left after cooking is completed, close lid and turn lid combining hand grip to ☰ (Lock) direction even after unplugging power plug. Otherwise product deformation or damage may occur by internal pressure.
- Be sure to turn lid combining hand grip to ☰ (Lock) direction during cooking and heat preservation before use.

Maintain more than 30cm of distance from the product while using.

- A magnetic field can be released from electronic goods.

NAME OF EACH PART



Name of each part

Soft Steam Cap



Pressure Weight

Always keep it horizontal. It stabilizes steam inside of the oven. Pressure weight is twisted, it release steam.

Automatic Steam Exhaust Outlet (Solenoid valve)

When finished cooking or during warming, steam is automatically released.

Lock/Unlock Handle (Set the handle to lock when cooking or warming the rice)


The handle has to turn to 'Lock' for operation.

Lid Clamp

Turn handle to 'Unlock', and then press Clamp knob to open.

Control Panel

Name of each part

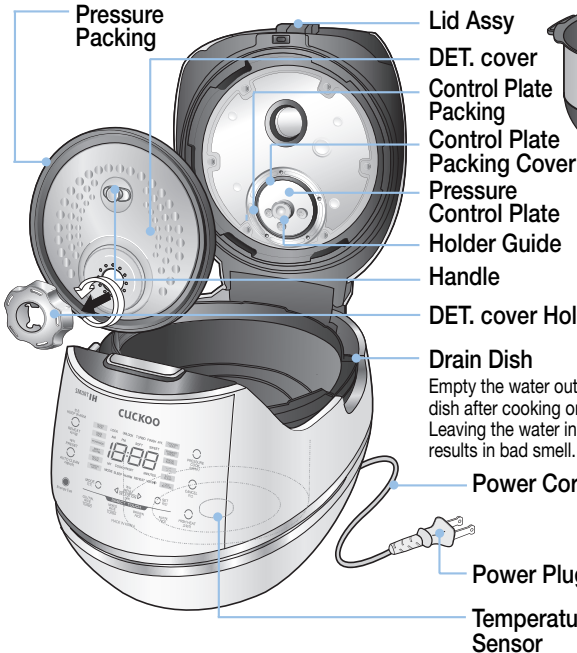

Pressure Packing

Lid Assy

DET. cover

Control Plate

Packing

Control Plate

Packing Cover

Pressure

Control Plate

Holder Guide

Handle

DET. cover Holder


Drain Dish

Empty the water out of a dew dish after cooking or keep warming, Leaving the water in the dew dish results in bad smell.

Power Cord

Power Plug

Temperature Sensor

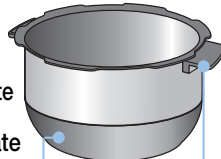

Pot Handle

Inner Pot(Oven)

Place the inner pot into the body property.



Accessories



Manual&Cooking Guide



Rice Scoop



Rice Measuring Cup



Steam Plate



Cleaning Pin (Attached on the bottom of the unit)




HOW TO CLEAN

- To prevent foul odor clean the lid assy after the rice cooker has cooled and the rice cooker is unplugged.
- Clean the body of rice cooker and the cover with a dry towel. Do not use benzene or thinner to clean the rice cooker. The layer of starch, which is the residue from rice cooking, may appear on the detachable cover or inside of rice cooker. This layer does not cause any health risk.
- Do not put materials like screws into holes of detachable cover. Check the back cover and front cover.

Detachable cover & Pressure packing


After cleaning detachable cover, put it back on the lid

Unless detachable cover is mounted, preset cooking cannot be done. (Alarm may sound while keeping warm.)

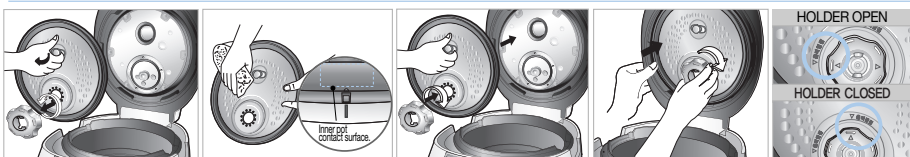

- Turn the holder counter clock wise, and the cover will be easily separated from the cooker and can be washed.
 - Wash the cover with cooking purposes neutral detergent and sponge frequently, and wipe off moisture with handkerchief.
 - Please keep clean the edge of rubber packing, then the rice cooker last's longer.
 - When mounting the cover, grab separate cover handle, attach it to hole, and after adjusting holder on top of packing stop tab, fix it by turning it clockwise.
 - It is easier to attach the cover holder when the power part of the detachable cover is pressed.
- ※ As depicted in the picture, please align holder with arrow mark to open and close.


Please fir a rubber packing into the cover plate completely after washing or replacing the rubber packing.

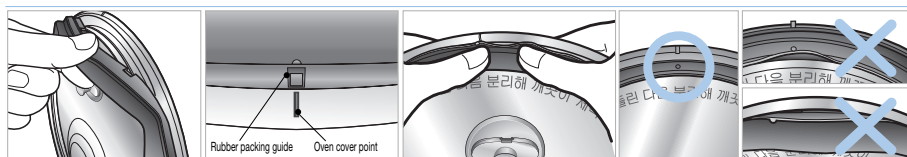

- To separate the rubber packing, please pull it out from the cover plate as shown in the picture.
- To put back the rubber packing, please fit it to each of 6 projections and holes as shown in the picture.
- After fitting 6 projections to the holes, please press the rubber packing around the corner completely as shown in the picture.
- Please check that the rubber packing fits into the cover plate completely. If not, steam may be released from the crack between the packing and the plate.



Steam Vent
Make sure to clean the clean steam vent went after/before use. Do not try to pull out the clean steam vent and safety packing, clean it with care. Make sure the clean steam vent and safety packing are installed completely after/before use. If the steam vent is detached, or not attached completely, please contact customer service.

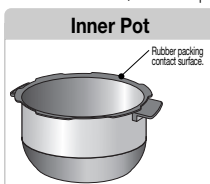


Inner Pot
Wipe the water on the outside and bottom of the Inner Pot. A rough sponge, a brush or an abrasive can cause scratches on the coating. Use a dishwashing liquid and a soft cloth or a sponge.

※ Keeping the contact area of the Inner Pot with the pressure packing always clean, increases the product's durability.



Pressure Packing
Wipe the main unit with a wet cloth that has been extracted out of all water

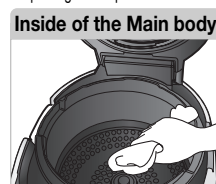

Inside of the Main body
Make sure to clean the steam control vent before and after use.

Detachable cover & Pressure packing

- Handle must be turned to "🔒" (Lock) during Cooking.
When the lamp is turned on it means that it is ready to cook.
 - After cooking, turn the handle from "🔒" (Lock) to "🔓" (Unlock) turn the handle to open. If there is unreleased steam in the Inner pot it might be hard to turn the handle. In this case twist the pressure weight and let the excess steam out. Do not open by force.
- If the lamp does not turn on, it would not operate the "PRESSURE COOK" and "PRESET/AUTO CLEAN" buttons. Make sure the handle is located in "🔒" (Lock).
- Handle must be turned to "🔓" (Unlock) when opening and closing.






How to clean the pressure weight nozzle.

If the valve of the pressure part is clogged, puncture it with the cleaning pin


- The valve hole of the pressure weight allows steam to release. Check regularly to ensure that it not blocked. If the valve hole of the pressure weight is blocked, the hot steam and hot content within the cooker can cause serious injury.
- ※ Do not use the cleaning pin for any other use except to clean the valve hole of the pressure weight.

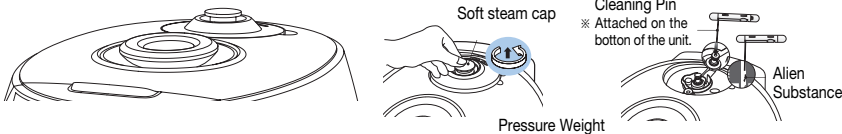

How to disassemble the pressure weight

- ▶ Under the Lock/Unlock handle is locked (located on "Lock") turn the pressure weight counter-clockwise while pulling it up, and pull it out.
- ▶ Puncture the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.


How to use cleaning pin and brush kit

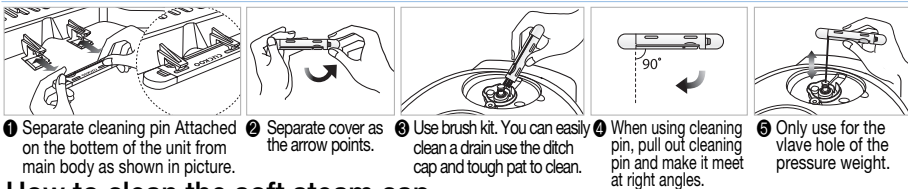

- 1 Separate cleaning pin Attached on the bottom of the unit from main body as shown in picture.
- 2 Separate cover as the arrow points.
- 3 Use brush kit. You can easily clean a drain cap and tough pot to clean.
- 4 When using cleaning pin, pull out cleaning pin and make it meet at right angles.
- 5 Only use for the valve hole of the pressure weight.


How to clean the soft steam cap

- ※ Do not touch the surface of the soft steam cap right after cooking. You can get burned.

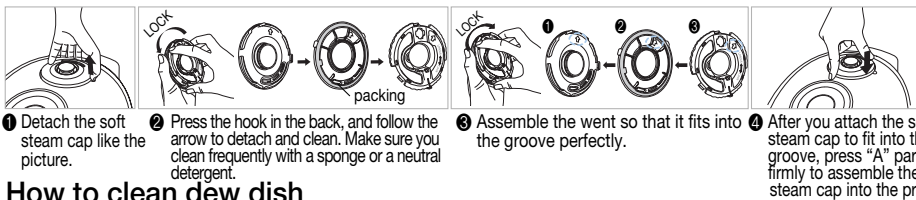

- 1 Detach the soft steam cap like the picture.
- 2 Press the hook in the back, and follow the arrow to detach and clean. Make sure you clean frequently with a sponge or a neutral detergent.
- 3 Assemble the went so that it fits into the groove perfectly.
- 4 After you attach the soft steam cap to fit into the groove, press "A" part firmly to assemble the soft steam cap into the product.

How to clean dew dish

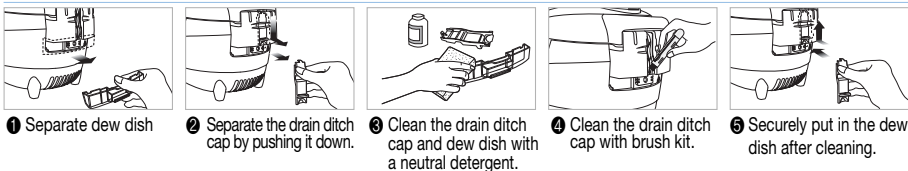

- 1 Separate dew dish
- 2 Separate the drain ditch cap by pushing it down.
- 3 Clean the drain ditch cap and dew dish with a neutral detergent.
- 4 Clean the drain ditch cap with brush kit.
- 5 Securely put in the dew dish after cleaning.

When lid does not close perfectly

Do not try to close the lid by force. It can cause problems.



1. Check to make sure the inner pot is place correctly inside the main body.
2. To close the lid turn the handle to unlock, in shown in the picture on the right.



3. If there is excess steam inside the inner pot it might be difficult to lock the handle. Twist the pressure weight and allow the excess steam to release. Then try to turn the handle again.



FUNCTION OPERATING PART / ERROR CODE AND POSSIBLE CAUSE

Function Operating Part

PRESET/AUTO CLEAN Button

Used to preset preferred cooking time (Refer to page 26~27)
When you use automatic steam cleaning function (Refer to page 18)

MODE Button

This function is used to customize individual (Refer to page 19~20) cooking preference, time-setting (Refer to page 14), keep volume setting (Refer to page 13), voice warm temperature setting (Refer to page 32), and power saving mode (Refer to page 33).

MENU/SELECTION Button

This function is used to select from among SUSHI RICE, GABA RICE, PORRIDGE, SOFT GLUTIN., MULTI COOK, CHICKEN SOUP, FERMENT BREAD, BREAD BAKING, SMART MENU, AUTO CLEAN, GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, BROWN RICE, HIGH HEAT BROWN RICE, NUTRI. RICE, and HIGH HEAT NUTRI. RICE and to modify preset time.
For setting selected action with 'MODE' button and setting GABA RICE, MULTI COOK, FERMENT BREAD, and BREAD BAKING time.

KEEP WARM/ REHEAT Button

Used to warm or reheat. (Refer to page 30)

Display

PRESSURE COOK Button

This function is used to start cooking. (Refer to page 17)

CANCEL Button


This function is used to cancel a selection or release remaining steam in the inner pot. (Refer to page 41) When using Power saving function. (Refer to page 33)

SET Button

This function is used to select a function or to button-lock function. (Refer to page 34)

HIGH HEAT Button

This function is used for to activate the High heat cooking mode of the cooking functions such as GLUTIN. RICE, MIXED RICE, BROWN RICE, or NUTRI. RICE. (Refer to page 17)

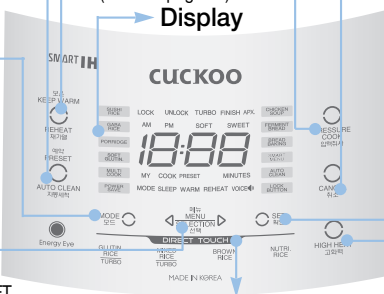

DIRECT TOUCH

This function is used when cooking GLUTIN. RICE/TURBO GLUTIN. RICE, MIXED RICE/TURBO MIXED RICE, BROWN RICE/NUTRI. RICE

- ※ If no operation is done while power cord is plugged, the system will be on standby mode as shown in the figure. (The menu on standby screen, time, voice and customized rice taste stage may differ depending on used configuration.)
- ※ If cancel button is pressed during cook, the rice cooker will go in standby mode.
- ※ Press the button until the buzzer sounds, Picture may vary depending on model.



<Standby condition screen>

Error Code and Possible Cause

When the product has any problems or used it inappropriately, you can follow the below marks.

If error persistently shows up even in normal using conditions or after taking measure, inquire with customer service .

	When the inner pot is not placed into the unit.
	Problem on temperature sensor. ("E-_" mark, "E-P" mark, "E-k" mark blink.)
	Problem on fan motor. ("E-F" marks blink.)
	When pressing the 'PRESSURE COOK' and 'PRESET/AUTO CLEAN' button, while the lid handle is on "Unlock" Turn the lid handle "Lock"
	When boiling only water.
	When setting preset time longer than 13 hours Set the preset time within 13 hours. (Refer to page 26~27)
	It appears on the display when you press 'PRESSURE COOK' or 'PRESET/AUTO CLEAN' button again, or if the cooking has finished and you've never ever turned the handle to "Unlock", it can be solved by turning handle to "Unlock" and then turn to "Lock".
	Problem on micom power.
	Problem on micom memory.
	Problem on environment sensor.
	This error messenger shows up when 'PRESSURE COOK' or 'KEEP WARM/REHEAT' button is pressed while separate cover is not mounted. Mount separate cover. While keeping warm, alarm will sound and keeping warm and reheating do not work.
	This code indicates the function of checking for abnormality of power of product.

HOW TO SET CURRENT TIME/ HOW TO SET OR CANCEL VOICE GUIDE FUNCTION



How to set current time

ex) 8:25am now

1 Press 'MODE' button once.


- ▶ 'MODE' button needs to be pressed for over 1 second at the first time.
- ▶ A voice comes up saying "Setting mode for current time. Set current time with 'MENU/SELECTION' button then press 'SET' button."
- ▶ 'MENU/SELECTION' button blinks and 'MODE', 'SET' and 'CANCEL' buttons turn ON.

2 Set 8 o'clock and 25 minute as pressing 'MENU/SELECTION' button.

- ▶ 1 min up "D" button
- ▶ 1 min down "J" button
- ▶ 10 min up or down "J", "D" keep pressing.
- ▶ Careful of setting am/pm.
- ▶ In case of 12:00 it is 12:00 pm.

3 When finishing to set time you want, press 'SET' button.

- ▶ 'SET' button blinks and 'MODE', 'MENU/SELECTION' and 'CANCEL' buttons turn ON.
- ▶ If it is over 7sec without 'SET' button, setting time will be canceled with "Function setting has been canceled with overtime.", it is canceled due to overtime.

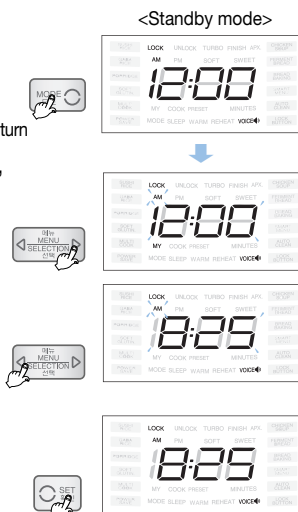

About Lithium battery

- This product contains lithium battery for improving blackout compensation and time. Lithium battery lasts for 3 years.
- When current time is not displayed on the screen, it means the battery is exhausted. It should be replaced.

What is blackout compensation


- This product remembers and maintains previous condition and processes. After finishing blackout, it operates immediately.
- If blackout happens during cooking, the cooking time will be delayed depending on blackout time.
- If the rice became cold because of blackout, warming will be cancelled.

How to set current time during keep warming mode

1. Press 'CANCEL' button to cancel 'KEEP WARM/REHEAT' and then press 'MODE' button over 1 time to set current time.
2. After setting time, press 'KEEP WARM /REHEAT' button to re-start keep warm.

Voice guide volume control (The function which can control volume and cancel)

To enter this function, press 'MODE' button 2 times. 'MODE' button needs to be pressed for over 1 second at the first time.

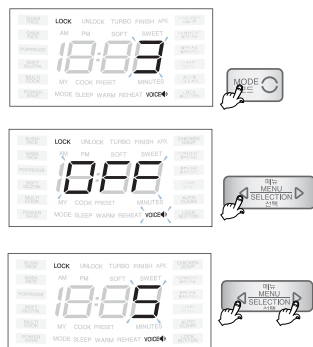

"3" sign is displayed when entered volume control mode by pressing 'MODE' button 2 times.

- ▶ 'MENU/SELECTION' button blinks and 'MODE', 'SET' and 'CANCEL' buttons turn ON.

If set value became "OFF" by pressing 'MENU/SELECTION' button, "VOICE" blink and voice guide function is off.

Press 'MENU/SELECTION' button to change the volume from "1" to "5".

- ▶ 'SET' button blinks and 'MODE', 'MENU/SELECTION' and 'CANCEL' buttons turn ON.
- ▶ Keep the button pressed, and the button will turn to Continuous.
- ▶ Set to desired voice volume, and press 'SET' button.
- ▶ If it is over 7sec without 'SET' button, setting time will be canceled with voice, "Function setting has been canceled with overtime."



NIGHT VOICE VOLUME REDUCTION/ VOICE SETTING FUNCTION

Night Voice Volume Reduction

Set the function of night voice volume reduction, the function to reduce the volume of voice during night time (10:00PM-05:59AM) on need-to-do basis. This function works only during night time.

▶ How to set night voice volume reduction



Example) 60% of day time voice volume

OPER.	Zero volume
OPER. =	20% of day time voice volume
OPER. ==	40% of day time voice volume
OPER. ===	60% of day time voice volume
OPER. ====	80% of day time voice volume

Night voice volumes by the setting of process progress

1. Press 'MODE' button 10 times in standby status, and you will enter Night Voice Volume Reduction mode. When pressing 'MODE' button initially, press the button for 1 second or longer to enter Night Voice Volume Reduction mode.
2. When you enter Night Voice Volume Reduction mode, a voice comes up saying "Setting mode for night time volume. Select or cancel night time volume with 'MENU/SELECTION' button then press 'SET' button."
3. Press 'MENU/SELECTION' button, and as process progress bar change, voice volume will change. Select desired voice volume, and press 'SET' button.
4. Once process progress bar reach full condition through adjustment of 'MENU/SELECTION' button, a voice will come saying "Night time volume has been canceled." Inactivate the function by pressing 'SET' button.
5. If 'Set' button is pressed or no button is pressed for 7 seconds after you enter Night Voice Volume Reduction mode, the function will be inactivated along with voice "Function setting has been cancelled with overtime.", and the system will be back to standby mode.

Voice Setting Function

This function helps you select Auto voice for either Korean or English or Chinese's voice. With this function, you can set to your desired voice. The product's default voice is set to Korean.

▶ How to set voice function



Example) When set to Korean



Example) When set to English voice



Example) When set to Chinese voice

1. Press 'MODE' button 11 times in standby status, and you will enter Voice mode. When pressing 'MODE' button initially, press the button for 1 second or longer to enter Voice mode. 'MODE' button needs to be pressed for over 1 second at the first time.
2. When you enter voice setting mode, a voice comes up saying "Setting mode for voice guide. Set voice with 'MENU/SELECTION' button then press 'SET' button." At this time 'MENU/SELECTION' button blinks and 'MODE', 'SET' and 'CANCEL' buttons turn ON.
3. After setting Auto voice with 'MENU/SELECTION' button, Korean or English or Chinese, and press 'SET' button.
4. If 'SET' button is pressed or no button is pressed for 7 seconds after you enter Volume, the function will be inactivated along with voice "Function setting has been cancelled with overtime.", and the system will be back to standby mode.

BEFORE COOKING RICE



1 Clean the inner pot and wipe the water on the inner pot with dry cloth.

- ▶ Use the soft cloth to wash the inner pot.
- ▶ Tough scrubber can make the coating come off.

2 Measure the amount of rice you want to cook using the measuring cup.

- ▶ Make the rice flat to the top of measuring cup and it is serving for 1 person. (ex: for 3 servings → 3 cups, for 6 servings → 6 cups)

3 Wash the rice with another container until the water becomes clear. (We recommend not to use inner pot for washing grains)

4 Put rinsed rice into the inner pot.

5 According to menu, adjust the water amount.

- ▶ For measuring, place the inner pot on a leveled surface and adjust the amount of water.
- ▶ The marked line of the inner pot indicates water level when putting the rice and water into inner pot together.
- ▶ About water scale
 - GLUTIN. RICE, TURBO GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, NUTRI. RICE, HIGH HEAT NUTRI. RICE : Adjust waterlevel to the water scale for 'GLUTINOUS'. GLUTIN. RICE/HIGH HEAT GLUTIN.RICE can be cooked to max 10 servings, TURBO GLU. RICE/NUTRI.RICE/HIGH HEAT NUTRI. RICE to max 6 servings.
 - MIXED RICE, TURBO MIXED RICE, HIGH HEAT MIXED RICE : Adjust water level to the water scale for 'MIXED RICE'. SUSHI RICE/MIXED RICE/HIGH HEAT MIXED RICE can be cooked to max 8 servings, TURBO MIXED RICE to max 6 servings.
 - BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE : Adjust water level to the water scale for 'GABA RICE'. BROWN RICE/GABA RICE/HIGH HEAT BROWN RICE can be cooked to max 6 servings
 - SOFT GLUTIN. : Adjust water level to the water scale for 'SOFT GLUTINOUS'. SOFT GLUTIN. can be cooked to max 6 servings.
 - PORRIDGE: Adjust water level to the water scale for 'PORRIDGE'. PORRIDGE can be cooked to max 2 servings

※ Cook in cereals menu, hard cereals like red-bean can be half-cooked depending on the kind of cereal.

6 Put the inner pot into the main body and close the topcover.


Put the inner pot correctly.

- ▶ If there is any external substance on the temperature sensor or the bottom of the inner pot, wipe it off before putting the pot into the main unit.
- ▶ Lid will not close if the inner pot is not placed correctly in the main body (Place the inner pot to the corresponding parts of the main body)

7 Close the topcover and Turn the lid handle to the “”(Lock) position.

- ▶ The lid is completely locked as soon as the on “” the lid locking handle and the “LOCK” on the front display panel are both lit up.
- ▶ If you press the ‘PRESSURE COOK’ button without setting the lid handle to “LOCK”, the cooker will not operate. You will hear “beep beep beep” sound and “E01” is shown in the LCD.
- ※ If you want to select another function while cooking, push ‘CANCEL’ button.
- ▶ If “” mark shows up in other instance, turn cover handle to “”(Unlock) direction, and turn it toward “”(Lock). Then the cooker will work normally. (The operation of cover lock sensing device can be checked.)



※ This instruction is not applicable if cover handle is turned toward “”(Unlock) direction once or more after cooking was completed in previous cooking.

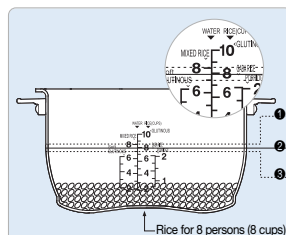

① When you want to cook the old rice or want the soft rice : pour more water than the measured scale

② Glutinous Rice for 8 persons (8 cups) : Set the water to scale 8 of 'GLUTINOUS'

③ For overcooked rice : pour less water than the measured scale

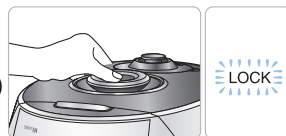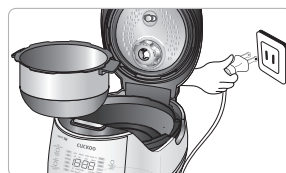
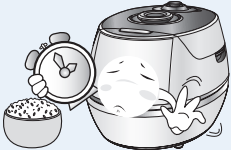




FOR THE BEST TASTE OF RICE

Cook tasty rice with Cuckoo pressure rice cooker

For the best taste of rice, check the following points carefully.

<p>Use the measuring cup</p> <p>Pour the water until water level marking in the inner pot</p>	<ul style="list-style-type: none"> When measuring the rice, use the measuring cup. (The amount of the rice may vary depending on the quality of the rice.) Place the inner pot on a flat surface and adjust the water to water level in the inner pot. 	<p>When the proportion between the amount of rice is not proper, rice can be crisp or hard.</p> 
<p>How to keep the rice</p>	<ul style="list-style-type: none"> If possible, buy a small amount of rice and keep the rice some place where ventilates well and avoid a direct ray of light. It can prevent evaporation of rice moisture. If the rice has been unsealed for long, rice can be dry and stale. In this case, you should pour the half of water more. It's tastier. 	<p>When rice is too dry, it can be crisp even though measuring the amount of rice is accurate.</p>
<p>It's better to set the preset time shortly.</p>	<ul style="list-style-type: none"> If possible, do not use the preset time function if rice is too dry and pour more water more. 	<ul style="list-style-type: none"> If you set "Preset" over the 10 hours or "Preset" dried rice, rice can be crisp or half cooked. Even worse condition, rice can be cooked different tastes each level. If the preset time is longer, the melanoizing effect could be increased.
<p>It's better to set the Keep warming time shortly.</p>	<p>It's better to set the keep warming in 12 hours.</p> 	<p>If rice is kept warm for a long period of time, rice color will change, and can cause odor.</p>
<p>Keep the product clean.</p>	<ul style="list-style-type: none"> Clean the product often. (Especially clean the top of the cover for external substance.) 	<p>Wipe the lid heating part well for any rice or external substance.</p>

HOW TO COOK



1 Choose menu with 'MENU/SELECTION' button.

- Please mount detachable cover.
- Please keep "Pressure weight" horizontal.
- Each time 'MENU/SELECTION' button is pressed, the selection switches in the sequential order, GLUTIN.RICE→HIGH HEAT GLUTIN.RICE→MIXED RICE→HIGH HEAT MIXED RICE→BROWN RICE→HIGH HEAT BROWN RICE→NUTRI.RICE→HIGH HEAT NUTRI.RICE→SUSHI RICE→GABA RICE→PORRIDGE→SOFT GLUTIN.→MULTI COOK→CHICKEN SOUP→FERMENT BREAD→BREAD BAKING→SMART MENU→AUTO CLEAN.
- If the button is pressed, repeatedly, the menu switches continuously in sequential order.
- The one of following cooking menu modes: GLUTIN. RICE, MIXED RICE, BROWN RICE, NUTRI. RICE will be immediately proceeded to start cooking by pressing the 'DIRECT TOUCH' button of each cooking menu mode.
- Pressing the 'HIGH HEAT' button within 5 seconds after proceeding the one of following cooking menu modes: GLUTIN. RICE, MIXED RICE, BROWN RICE, NUTRI. RICE will initiate the high temperature cooking of each cooking menu mode.
- In the cases of GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, SOFT GLUTIN., BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE, SUSHI RICE, NUTRI. RICE and HIGH HEAT NUTRI.RICE, the menu remains memorized once each cooking is completed, so for continuous use of the same menu, no selection of menu is required.



ex) In case of selecting SUSHI RICE.
▶ You can hear a voice, SUSHI RICE.

3 Steaming.

- The cooktime remaining on the display is shown from cooking thoroughly.
- The cook time is different according to the menu.
- Be careful not to burn yourself from the automatic steam outlet.

ex) In case of 10minutes left.



2 Start cooking by pressing 'PRESSURE COOK' button.

- You must turn lid handle to lock before cooking. Then press the 'PRESSURE COOK' button, and sound "Starting the Glutinous Rice."
- Unless lid handle is not turned to close, you get alarm with "E01", and sound "Close the lid then turn the handle to the lock position."



ex) In case of cooking Glutinous.

4 The end of cooking

- When cooking is completed, warming will start with the voice "Glutinous rice has been completed."
- If you want to stop warming, Push 'CANCEL' button for more than 2 seconds.
- When cooking ends, stir rice equally and immediately. If you don't stir rice at once and keep it stagnant, rice will go bad and smell bad.
- If the lid handle is not working well, take out the steam completely out of inner pot by turning over pressure weight.
- While cooking, do not press cancel button.



Cooking time for each menu

Menu Class	GLUTIN. RICE	TURBO GLUTIN. RICE	HIGH HEAT GLUTIN. RICE	MIXED RICE	TURBO MIXED RICE	HIGH HEAT MIXED RICE	SOFT GLUTIN.	SUSHI RICE	BROWN RICE	HIGH HEAT BROWN RICE	NUTRI. RICE	HIGH HEAT NUTRI. RICE	CHICKEN SOUP	PORRIDGE	SMART MENU	FERMENT BREAD BREAD BAKING	AUTO CLEAN (Steam Cleaning)
Cooking Capacity	2 servings-10 servings	2 servings-6 servings	2 servings-10 servings	2 servings-8 servings	2 servings-6 servings	2 servings-8 servings	2 servings-6 servings	2 servings-8 servings	2 servings-6 servings	2 servings-6 servings	2 servings-6 servings	2 servings-6 servings	1 Chicken (About 1kg)	1 servings-2 servings	Please refer to app.	See detailed guide to cooking by the menus.	Up to water scale 2
Cooking Time	About 28 min-About 38 min	About 13 min-About 21 min	About 30 min-About 38 min	About 44 min-About 54 min	About 26 min-About 36 min	About 46 min-About 51 min	About 51 min-About 61 min	About 40 min-About 51 min	About 55 min-About 61 min	About 56 min-About 62 min	About 29 min-About 33 min	About 30 min-About 35 min	About 70 min	About 61 min-About 71 min			About 20 minutes

※ After cooking SMART MENU, CHICKEN SOUP, MULTI COOK, FERMENT BREAD, BREAD BAKING etc, the smell may permeate into the unit, use the Unit after cleaning the rubber packing and lid part according to page 10.

※ Cooking time by menus may vary to some degree depending on the using environment of the product.




HOW TO COOK

How to use the cooking menu

GLUTIN. RICE	When you want to have sticky and nutritious white rice.	SOFT GLUTIN.	When you want to have a little more sticky and nutritive white rice than Glutinous rice.
MIXED RICE	This menu is used to cook a variation of mixed rice or brown rice.	GABA RICE	Used to cook germinated brown rice.
SMART MENU	With the NFC (Near field communication) function of the Smart Phone, the rice cooker can cook the new recipes, which are not pre-stored in the cooker, by transmitting the new recipes from the Smart Phone to the "Smart Menu" of the rice cooker.	CHICKEN SOUP	This menu cooks samgyetang automatically.
SUSHI RICE	When you want to have a little more sticky and nutritive white rice than Glutinous rice.	FERMENT BREAD/ BREAD BAKING	This menu is used to either ferment or bake the bread.
PORRIDGE	For cooking porridge.	NUTRI. RICE	Used to cook nutritious rice.
AUTO CLEAN (Steam Cleaning)	This menu is used to eliminate small soaked after cooking or warming.	MULTI COOK	The dish to the set temperature, the thermal and time manually.
BROWN RICE	This menu is used to cook a variation of brown rice.	HIGH HEAT (GLUTIN. RICE/ MIXED RICE/ GABA RICE/ NUTRI. RICE)	Use when cooking more sticky and soothing Cooked Rice. (Melanoizing effect could be increased.)
TURBO GLUTIN. RICE	<ul style="list-style-type: none"> Pressing 'PRESSURE COOK' button twice will switch to quick cooking 'PRESSURE COOK' button twice will switch to quick cooking and shorten the cooking time. (It takes about 13 minutes when you cook the Glutinous rice for 2 persons.) Use this turbo cooking function only for cooking rice for less than 6 persons. (The condition of the rice will not be good for more than 6 persons.) The turbo cooking function is allowed up to 6 persons. If you soak the rice in water for about 20 minutes before cooking the rice and then cook the rice in turbo cooking course, the rice will taste good. 		
TURBO MIXED RICE	<ul style="list-style-type: none"> If selected turbo mixed rice, total cooking time will be reduced. (It takes about 26 minutes for cooking mixed rice for 2 people.) Turbo mixed rice cooking lessens the quality of food, so only use for less than 6 people. For better taste of cooked rice, cook rice in white rice turbo mode after macerating rice for 20 minutes or so before cooking. 		

※ After cooking in white rice turbo mode or cooking of small serving, discard water. In case of small servings white rice turbo cooking, more water may be required than other menu.

How to use AUTO CLEAN (Steam Cleaning)

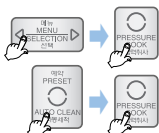

Put water until water scale 2, make sure to close and lock the cover.

Method 1, After choosing automatic cleaning menu by pressing 'MENU/SELECTION' button, and then press 'PRESSURE COOK' button.

Method 2, After choosing automatic cleaning function by pressing 'PRESET/AUTO CLEAN' button twice in standby mode, press 'PRESSURE COOK' button.

Melanoizing phenomenon

The cooked rice can be light yellow at the bottom of the oven, because this product is designed to improve pleasant flavor and taste. Especially, melanoizing is more serious at the "Preset cooking" than just "Cooking". It does not mean malfunction.

※ When mixing other rice with Glutinous, Melanoizing phenomenon could increase more than "Glutinous cook" setting.

Simple Soft Function

You can soak grains before stating cooking by setting a desired time with this function.

▶ Setting Method



1. To activate the Simple Soft Function, press 'PRESET/AUTO CLEAN' button within 5 seconds right after CUCKOO started the menu for GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, TURBO GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, TURBO MIXED RICE, SOFT GLUTIN., SUSHI RICE, NUTRI. RICE, HIGH NUTRI. RICE.
2. To change the soaking time, press 'PRESET/AUTO CLEAN' button in simple Soft Function: the time setting can change from 10 to 30 minutes, 60 minutes, and No Soaking Time.
3. If you do not press any button for more than 5 seconds while setting the soaking time, it will be automatically set back to the current soaking time. After the soaking time is over, the cooking will start.

※ Soaking time is counted by 1 minute unit.

※ If you unlock the lid Handle during the simple Soaking Function, the cooking will be canceled.

※ The longer the soaking time, the melanoizing phenomenon.

MY MODE (CUCKOO Customized Taste Function)



What is “MY MODE”?

- CUCKOO's patented technology based on variable circuit design. User can select the degree of “softness” and “glutinosity & tastiness” to meet a user's desire.

MY MODE Function

- Longer “SOFT” Time : rice becomes soft and glutinous. (selectable in 4 steps)
- Longer “SWEET” Time : rice becomes tastier(selectable in 4 steps) [melanoizing will occur]
- Both functions above can be selected simultaneously or separately

How to Use “MY MODE”

To enter “Customized Rice Taste Setting Mode”, select the menu in which Customized Rice Taste is supported such as GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE and press the ‘MODE’ button for 1 second or longer. Then, you are going to enter “Setting mode for my mode. After selecting the preferred rice with ‘MODE’ or ‘MENU/SELECTION’ button, then press the ‘SET’ button”.

※ The setting of figure below is based on glutinous rice menu.

1 “MENU” setting screen



2 “MY MODE” setting screen



To enter Customized Rice Taste Setting Mode, select desire menu and press ‘MODE’ button once for 1 second or longer.

3-1 Soft time control mode



Select desired swelling time by pressing the button.
► ‘SET’ button will blink, and ‘MODE’, ‘CANCEL’ and ‘MENU/SELECTION’ button will turn ON.

3-2 Sweet time control mode




Select desired heating extension time by pressing the button, and press ‘SET’ button.

► ‘SET’ button will blink, and ‘MODE’, ‘CANCEL’ and ‘MENU/SELECTION’ button will turn ON.

※ For 16 customized rice tastes, refer to the graph for 16 rice tastes. (Refer to page 20.)

4 Setting the completed screen after



Set up desired customized rice taste. And press ‘PRESSURE COOK’. (If you press ‘CANCEL’ or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.)

How to Use “MY MODE” II

You can customize your preference for cooked rice by selecting Customized Cooked Rice Taste mode or ‘MODE’ button. Each time you press ‘MODE’ button, the major cooked rice taste will show up in the sequential order ‘Sticky Cooked Rice Taste -> Soft Cooked Rice Taste -> Soothing Cooked Rice Taste -> Soft and Soothing Cooked Rice Taste’.

※ The setting in the figure below is based on GLUTIN. RICE menu.

1 “MENU” setting screen



2 “MY MODE” setting screen



To enter Customized Rice Taste setting Mode, select desire menu and press ‘MODE’ button once for 1 second or longer

3-1 Soft time control mode



Press ‘MODE’ button once, and the display will change as shown in the figure. At this time, Soft Cooked Rice Taste 3th Step will be selected.

3-2 Sweet time control mode



Press ‘MODE’ button two times, and the display will change as in the figure. At this time, Soft Cooked Rice Taste 3th Step will be selected.

3-3 Soft and Sweet Rice Mode



Press ‘MODE’ button three times, and the display will change as in the figure. At this time, Soft, Soothing Cooked Rice Taste will be selected.

4 Setting completed screen after



Set up desired customized rice taste. And press ‘PRESSURE COOK’. (If you press ‘CANCEL’ or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.)




MY MODE (Cuckoo Customized Taste Function)

The display for My Mode



This is a graph that shows the flavors of 16 types of cuckoo custom-made rice

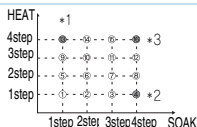

- *1. The rice becomes solid and glutinous.
- *2. The rice becomes soft and well-raised rice.
- *3. The rice becomes soft and glutinous.

※ Note: Rice taste number from 1 to 16 will be displayed on the display window.

Shown in the figure above, the stage mark will show up on the display during setting swelling time, heating, and maintenance time. The mark will continue to show up during cooking, reservation, keeping warm, and reheating as well.

▶ Cuckoo customized taste function is applied to glutinous, mixed, GABA, old rice, Nu Rung ji.

※ Set-up times is stored until the next reset. No need to set-up at every cooking.

During cooking, warming and preset time cooking modes, "soak" and "heat" time cannot be readjusted.

Cautions

1. 'MY MODE' function may influence scorching or cooking quality. Ensure that cooking time is not changed, by children.
- ※ Default settings are "SOFT" 1 step, "SWEET" 1 step.
2. 'MY MODE' function may elongate cooking time according to the set-up time.
3. Scorching of rice may occur by longer "HEAT" Time.

Cuckoo customized cooking function

While cooking you can control the heating temperature (both high an low) depending on, your preference.

Initialization is set up "□" get step by step as the case may be.

- High step : for cooking cereals, old rice and soft-boiled rice.

- Low step : for cooking the year's crop of rice.

How to use Cuckoo Customized cooking function

If you press the 'MODE' button 5times, customized cooking function is setup. At this time, a voice comes up saying "Setting mode for My Cook. Select menu with 'MENU/SELECTION' button then press the 'SET' button". You can see all means with cuckoo customized cooking function on the display.

②-1 High level mode



- Make the screen changed by pressing 'MENU/SELECTION' button.
- ▶ 'SET' button will blink, and 'MY', 'COOK', 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will turn ON.
 - ▶ Keep pressing the button, and the menu will switch continuously.

②-2 Low level mode



- Push the 'MENU/SELECTION' button, then the screen will be changed as above picture.
- ▶ 'SET' button will blink, and 'MY', 'COOK', 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will turn ON.
 - ▶ Keep pressing the button, and the menu will switch continuously.

③ Setting completed screen after



If you press the 'SET' button to complete your customized cooking. (If you press 'CANCEL' or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.)

① The display Cuckoo customized cooking function



If the push the button 5 times, the display for customized cooking function will be set up. Initiation is like above picture.

- ▶ 'MENU/SELECTION' button will blink, and 'MY', 'COOK', 'MODE', 'SET', and 'CANCEL' buttons will turn ON.

1. 'CUCKOO customized cooking function' applies to GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, TURBO GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, TURBO MIXED RICE, SUSHI RICE, BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE, NUTRI. RICE, HIGH HEAT NUTRI. RICE collectively.
2. Set up the step of customized cooking function to taste. The scorch can occur when cooking in high level mode.
3. Cook is subject to be set differently depending on the percentage of water content and the condition of rice.


HOW TO USE “GABA RICE (Brown rice)”



What is Germinated Brown rice?

- ▶ Brown rice has richer nutrients than polished rice. However, brown rice is rather tough and hard to be digested. By germination, the enzymes in the brown rice are activated, generating nutrients and become more digestible.

Tips to Buy Quality Brown Rice

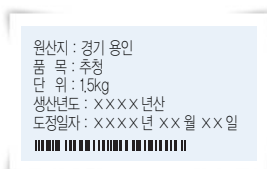


- ① Check the dates of harvest and pounding.
 - ▶ The dates should be within 1year from harvest, 3 months from pounding.
- ② Inspect rice with your eyes.
 - Check too see if the embryo is alive
 - Rice surface should be light yellow and glazing. Whitely stirred up surface, or darkish colored Brown rice is not suitable for a germination
 - Avoid fractured, not fully corned, or empty ear's. Empty ear's may generate odors during germination and and be bluish- nor corned Brown rice cannot be germinated.

Features of Germinated Brown rice

Germinated Brown rice increases nutrients and enhances taste which is a weak point of brown rice. Germinated Brown rice also improves digestion.

- ▶ Taste will be greatly enhanced.
- ▶ Digestive and rich in nutrients.
 - Diabetic hormone is generated improving digestion.
- ▶ Good as a health food for children or adults.
 - Rich with dietary fiber.
- ▶ Germinated brown rice has rich GABA (Gamma Aminobutyric Acid)
 - GABA promotes metabolism in liver and kidneys, suppresses neutral fat, lowers blood pressure, promotes metabolism in brain cells - these effects have been proven by medical science.

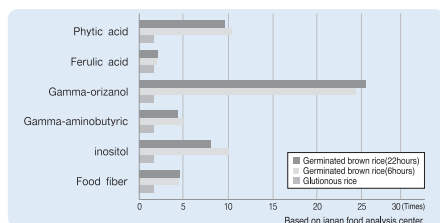

< Comparison of Germinated brown rice's nutrition and Glutinous rice's (6 hours) nutrition. >

- ▶ Phytic acid 10.3Times
- ▶ Ferulic acid 1.4Times
- ▶ Gamma-orizanol 23.9Times
- ▶ Gamma-aminobutyric 5Times
- ▶ Inositol 10Times
- ▶ Food fiber 4.3Times



HOW TO USE “GABA RICE (Brown rice)”

Method of Pre-germination

In order to promote germination, soak brown rice for 16 hours in water.

- ▶ Put washed brown rice in an appropriate container, pour sufficient water to soak the rice.
- ▶ Pre-germination shall not exceed 16 hours. Make sure to wash rice clean with flowing water before using “GABA” menu. Be careful that hard washing may take off embryos which generate the germination.
- ▶ Unique smell may be generated according to the soaking time of pre-germination.
- ▶ When pre-germination has been completed, wash the rice and put in inner pot (Oven). Pour appropriated volume of water, and use “GABA RICE” menu.
- ▶ In summer or hot temperature environment odor may be generated. Reduce germination time and wash clean when cooking.

Precautions for “GABA RICE” Cooking


- ❶ If smaller germ is preferred, omit pre-germination process. Select “GABA RICE” menu, set-up appropriate germination time, and start cooking (nutrient ingredients do not vary significantly by the size of germ).
- ❷ During hot seasons, longer germination time may generate odor. Reduce germination time.
- ❸ GABA RICE cooking is allowed up to 6 persons.
- ❹ City water can be used for germination. However, spring water is recommended. Germination may not be properly performed in hot or boiled water even after cooling.
- ❺ Germination rate, germ growth may differ by the Brown rice type, condition or period of storing, etc.
- Germinated brown rice is sprouted brown rice. Germination rate and growth may differ by the Brown rice type. The brown rice should be within 1 year from harvest, and not long since pounded.
- ❻ The taste of rice could be different as depending on a kind of brown rice. Use customized taste function or control the amount of water for your taste. (Refer to page 19~20)
- ❼ Depending on the state of the surrounding environment or the condition/type of rice, the sprouts of rice may not be visible or appeared.
- ❽ The sprouts may be not seen due to the environmental conditions or condition of the rice.



HOW TO COOK THE MULTI COOK


How to use the preset timer of 'MULTI COOK'

- 1**




Set the lid handle at "🔒" (Lock) and press 'MENU/SELECTION' button to select 'MULTI COOK'.

 - ▶ 'SET' button blinks, and 'MODE', 'MENU/SELECTION', 'CANCEL', and 'PRESSURE COOK' buttons light.
 - ▶ L:2 is indicated on the display when 'MULTI COOK' menu is selected. (A voice comes up saying "MULTI COOK", press the 'SET' button".)
- 2**




Press 'SET' button, and set heating stage with 'MENU/SELECTION' button.

 - ▶ 'MENU/SELECTION' button blinks and 'SET', 'CANCEL' and 'PRESSURE COOK' buttons light. A voice comes up saying "Adjust cooking heating power by pressing the 'SELECTION' button. Then, press the 'SET' button".
- 3**




Press 'SET' button, and set cooking temperature with 'MENU/SELECTION' button.

 - ▶ 'MENU/SELECTION' button blinks and 'SET', 'CANCEL' and 'PRESSURE COOK' buttons light. A voice comes up saying "Adjust cooking heating temperature by pressing the 'SELECTION' button. Then, press the 'SET' button".
- 4**



Press 'SET' button, and set cooking time with 'MENU/SELECTION' button.

 - ▶ 'MENU/SELECTION' button blinks and 'SET', 'CANCEL' and 'PRESSURE COOK' buttons light. A voice comes up saying "Adjust cooking heating time by pressing the selection button. Then, press the 'SET' button".
 - ▶ When you press the 'SET' button, a voice will come up saying "Press 'COOK' or 'PRESET' button"
- 5**




Press PRESSURE COOK button.

 - ▶ 'PRESSURE COOK' button blinks and 'MODE', 'SET', 'WARM', 'PRESET', 'MENU/SELECTION' and 'CANCEL' buttons light. Press 'PRESSURE COOK' button and Multi-Cook mode begins. Once the 'MULTI COOK' mode begins, the cooking icon is displayed along with the remaining time. A voice comes up saying "Starting the 'MULTI COOK'".



HOW TO COOK USING FERMENT BREAD / BREAD BAKING

How to use the FERMENT BREAD Menu

- 1 Turn the top handle to “”(Lock), press menu to select the FERMENT BREAD.

- ▶ ‘SET’ button will blink, and ‘MENU/SELECTION’, ‘CANCEL’, ‘PRESSURE COOK’, and ‘MODE’ buttons will turn ON.

- ▶ When the FERMENT BREAD Menu is selected, the display indicates cooking time to be 40 minutes.



- 2 Press ‘SET’ button and ‘MENU/SELECTION’ button to set fermentation time.

- ▶ ‘MENU/SELECTION’ button will blink, and ‘CANCEL’ and ‘PRESSURE COOK’ buttons will turn ON.

- ▶ A voice comes up saying “Set the fermenting time with ‘MENU/SELECTION’ button then press the ‘COOK’ button”.

- ▶ Available setting time is 5~120 minutes.

(From 90 minutes or more onward, the fermentation time increases or decreases by 10 minutes)



- 3 Press ‘PRESSURE COOK’ button.

- ▶ Press ‘PRESSURE COOK’ button will begin the bread fermentation.

- ▶ A voice comes up saying “Fermenting Bread, the Fermenting Bread is starting”.

- ▶ During FERMENT BREAD mode, indicator will show the remaining time.



- 4 When the first fermentation is complete, press softly dough for remove gas and repeat process ②, ③ for second ferment.

- ▶ After second ferment, open the lid and make sure dough size is 1.5 to 2 times.

How to use the BREAD BAKING Menu

- 1 Press ‘MENU/SELECTION’ button to select the BREAD BAKING Menu.

- ▶ A voice comes up saying “Baking Bread, press the ‘SET’ button”.

- ▶ ‘SET’ button will blink, and ‘MENU/SELECTION’, ‘CANCEL’, ‘PRESSURE COOK’, and ‘MODE’ buttons will turn ON.

- ▶ When selecting BREAD BAKING, the display indicate cooking time to be 40 minutes.



- 2 Press ‘SET’ button and ‘MENU/SELECTION’ button to set baking time.

- ▶ ‘MENU/SELECTION’ button will blink, and ‘CANCEL’ and ‘PRESSURE COOK’ buttons will turn ON.

- ▶ A voice comes up saying “Set the fermentation time by pressing the ‘SELECTION’ button then, press the Cook button.

- ▶ Available setting time is 1~80 minutes.

- ▶ Set the baking time depending on the fermentation state and the capacity of the dough.



- 3 Press ‘PRESSURE COOK’ button.

- ▶ Press ‘PRESSURE COOK’ button will begin the Bread baking.

- ▶ A voice comes up saying “Baking Bread, The Baking Bread is starting”.

- ▶ During BREAD BAKING mode, indicator will show the remaining time.



※ When the BREAD BAKING process is complete. Immediately remove the bread from inner pot
 ※ After the BREAD BAKING is complete, the bread is hot and you should be careful.

HOW TO COOK USING FERMENT BREAD / BREAD BAKING



▼ If there is a problem of FERMENT BREAD/BREAD BAKING, check the following details.

	Case	Check point	Do the following
DOUGH	When dough is not inflated	<ul style="list-style-type: none"> • Is capacity of the material accurate? • Does fermentation time is long or short? 	<ul style="list-style-type: none"> • Check the volume of the ingredients and knead the dough well.
	When bread is small and stiff.	<ul style="list-style-type: none"> • Capacity of the material, the time set correctly? 	
BAKED	When bread is rough and crunch.	<ul style="list-style-type: none"> • Fermentation time and kneading time set correctly? 	<ul style="list-style-type: none"> • follow the correct ingredient volumes and directions for fermentation and baking time.
	When bread was undercooked.	<ul style="list-style-type: none"> • Did you set short fermentation time or baking time? 	
BREAD	When bread was overcooked.	<ul style="list-style-type: none"> • Did you set long fermentation time or baking time? 	
	When the baked color of the Underside of the bread is not appered.	<ul style="list-style-type: none"> • Did you put the dough in the middle of inner pot. Did you set short baking time? 	<ul style="list-style-type: none"> • When the second fermentation is complete, the dough should be left in the middle of the inner pot. Extend ther baking time.
	When the bread is too sticky and wrinkled.	<ul style="list-style-type: none"> • Did you remove baket bread immediately? 	<ul style="list-style-type: none"> • When the "Bread Baking" process is complete. Immediately remove the bread from inner pot




HOW TO PRESET TIMER FOR COOKING

How to preset timer for cooking

How to use timer function

1 Check if the current time and the menu are correct.

- ▶ Refer to page 13 for the time setting.
- ▶ If the current time is not set correctly, the presetting time will also be incorrect.
- ▶ Make sure to select AM or PM correctly.

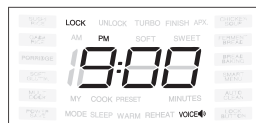


2 Turn the lid handle to the lock position and a lock icon will be displayed on the screen. Then press the 'PRESET/AUTO CLEAN' button.

- ▶ 'MENU/SELECTION' and 'KEEP WARM/REHEAT' button will blink, and 'PRESET/AUTO CLEAN', 'SET', 'CANCEL', and 'PRESSURE COOK' buttons will turn ON.
- ▶ The preset time is set to 06:30 AM when the product is delivered from the factory. If you want to preset reheating to this time, it is not required for you to set time.
- ▶ If the lid handle is not in the locked position then you will not be able to program or use the preset function.
- ▶ GABA RICE menu, you have to select "QH" in order to use the preset timer function.
- ※ When it is in keep warm mode, press cancel to exit keep warm mode, then select your desired preset time.



3 Select menu with 'MENU/SELECTION' button.

- ▶ 'SET' button will blink, and 'KEEP WARM/REHEAT', 'MENU/SELECTION', 'CANCEL', and 'PRESSURE COOK' buttons will turn ON.

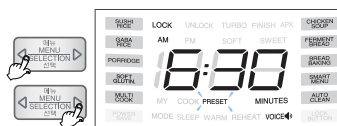

4 Preset the time.

- ▶ 'MENU/SELECTION' button will blink, and 'KEEP WARM/REHEAT', 'PRESET/AUTO CLEAN', 'SET', 'CANCEL', and 'PRESSURE COOK' buttons will turn ON.
- ▶ The preset time is increased by 10 minutes each time you press the "D" button.
- ▶ The preset time is decreased by 10 minutes each time you press the "V" button.



If you keep pressing the button and the time changes continuously. (repetition is allowed)

※ Please be careful no to change from AM to PM.

5 Press 'PRESSURE COOK' button.

- ▶ 'PRESSURE COOK' button will blink, and 'KEEP WARM/REHEAT', 'PRESET/AUTO CLEAN', 'SET', 'MENU/SELECTION', and 'CANCEL' buttons will turn ON.
- ▶ A voice comes up saying "Glutinous rice has been reserved. Preset cooking will be completed in today/tomorrow at 00, 00:00 AM/PM"
- ▶ Once cook is completed with preset time, preset time is stored in the memory.
- ▶ Don't need to set up time again.
- ※ If a small amount of rice is cooked, it could be finished earlier than time you programmed it.





HOW TO PRESET TIMER FOR COOKING

Precautions for preset cooking

1 In case of preset cooking

- ▶ If the rice is old and dry, the result may not be good.
- ▶ If the rice is not well cooked, add more water by about half-scale.
- ▶ If the preset time is longer, melanization could be increased.
- ▶ Rinsed rice adds precipitated starch, Preset Cook may cause scorching.
To reduce scorching, cook washed rice by rinsing in running water or reduce cooking amount.

2 The change of preset time

- ▶ Press 'cancel' button for more than 2 seconds and restart it to change the preset time.

3 If the preset time is shorter than cooking time, cooking will immediately begin.

- ▶ If set time is shorter than preset time, cooking will immediately begin.

4 In case the preset time is over 13 hours.

- ▶ "13H0" will be displayed and the preset time will be changed to 13 hours automatically.
ex) If cooking is preset to AM07:00 of the following day at PM5:00 of the day, where preset time is 14 hours, "13H0" will be displayed, and preset time automatically changes to AM06:00. (Preset time is 13 hours)
- ※ If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours because the rice spoils easily during the summer time.
- ※ When you want to finish presetting P.M 12:00, preset P.M 12:00.
- ※ Use this function when you want to finish cooking between 1 hour to 13 hours based on the preset time.
- ※ If you press the set button to check the present time during the preset cooking function, the preset time will be displayed for 2 second.

Possible time setting for each menu

Menu Class	GLUTIN. RICE	HIGH HEAT GLUTIN. RICE	MIXED RICE	HIGH HEAT MIXED RICE	SUSHI RICE	SOFT GLUTIN.	BROWN RICE	HIGH HEAT BROWN RICE	NUTRI. RICE	HIGH HEAT NUTRI. RICE	CHICKEN SOUP	PORRIDGE	MULTI COOK	FERMENT BREAD/ BREAD BAKING	AUTO CLEAN (Steam Cleaning)
Possible time Setting	From 43minutes +My mode) to 13hours	From 44minutes +My mode) to 13hours	From 59minutes +My mode) to 13hours	From 59minutes +My mode) to 13hours	From 58minutes to 13hours	From 64minutes to 13hours	From 66minutes +My mode) to 13hours	From 67minutes +My mode) to 13hours	From 38minutes to 13hours	From 40minutes +My mode) to 13hours	From 75minutes to 13hours	From 76minutes to 13hours	From 1minutes +My mode) to 13hours	From 1minutes +My mode) to 13hours	From 25minutes to 13hours



HOW TO USE PRESET REHEATING FUNCTION


How to use Preset Reheating function

- ▶ Use this function when the cooked rice is not kept warm in the rice cooker but you still want to enjoy a hot meal at your convenience.
- ▶ It takes three hours before it's fully warmed up: Please use the function at least three hours before you enjoy your meal.

For example, if it is nine o'clock in the evening and you want to have warm breakfast at six thirty the next morning:

1 Make sure that the current time is correct

- ▶ Refer to Page 13 for how to set the current time.
- ▶ Please make sure that the current time is correct so that the reheating process ends on time.
- ▶ Do not get confused between morning and afternoon.

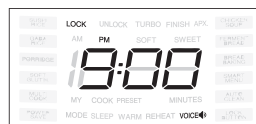

2 Set the lid handle at "🔒" (Lock) and press 'PRESET/AUTO CLEAN' button when the Lock icon is displayed.

- ▶ A voice will come up saying "Select 'PRESET' menu with 'MENU/SELECTION' button then press the SET button".
- ▶ "Preset, 'MENU/SELECTION', 'KEEP WARM' buttons blink and 'PRESET/AUTO CLEAN', 'SET', 'CANCEL' and 'PRESSURE COOK' buttons light."
- ▶ Please make sure that the lid handle is locked properly before using the 'PRESET/AUTO CLEAN' function.



3 Press the 'KEEP WARM/REHEAT' button and Preset Reheating mode begins.

- ▶ A voice will come up saying "Reserve Reheating, set completion time with Menu/selection select button then press Warm button".
- ▶ 'MENU/SELECTION' button blinks and 'KEEP WARM/REHEAT', 'SET' and 'CANCEL' button light.
- ▶ The Preset time is set to 06:30 AM when the product is delivered from the factory. If you want to preset reheating to this time, it is not required for you to set the time.



4 Press the 'MENU/SELECTION' button to preset the completion time of reheating.

- ▶ 'KEEP WARM/REHEAT' button blinks and 'MENU/SELECTION', 'SET' and 'CANCEL' buttons light.
- ▶ The completion time is increased by 10 minutes each time you press the "➡" button.
- ▶ The completion time is decreased by 10 minutes each time you press the "⬅" button. If you keep pressing the button and the time changes continuously (repetition is allowed).

※ Do not get confused between morning and afternoon.



5 Press the 'SET' button.

- ▶ A voice will come up saying "Press Warm button".
- ▶ 'KEEP WARM/REHEAT' button blinks and 'MENU/SELECTION', 'SET' and 'CANCEL' buttons light.



6 Press the 'KEEP WARM/REHEAT' button.

- ▶ A voice will come up saying "Reheating has been reserved. Reserved reheating will be completed in today/tomorrow at 00:00:00 AM/PM.
- ▶ Reheating is completed as scheduled.
- ▶ The cooker memorizes the hour that you have preset: You may press the 'KEEP WARM/REHEAT' button directly without having to preset the time again from the beginning.





HOW TO USE PRESET REHEATING FUNCTION

Precautions for preset reheating

1 In case of preset reheating

- ▶ When leaving cooked rice at ambient temperature for a prolonged period of time, moisture is evaporated from cooked rice. In such a case, the reheating preset may cause dehumidifying or melanosis (slightly burnt) of cooked rice.
- ▶ If there is an excessive amount of cooked rice in the pot, it may not sufficiently be reheated. It is recommended to set reheating for no more than six people (approx. half of the inner pot).
- ▶ Reheating of cold- or frozen-stored cooked rice may cause insufficient heating, dehumidifying or melanosis (slightly burnt) after completion of reheating.
- ▶ Put cold-stored cooked rice into the inner pot, beat rice with a scoop, and then reheat rice.
- ▶ Reheating of frozen-stored cooked rice shall be performed only after thawing the rice.

2 Changing preset time

- ▶ Press 'CANCEL' button for more than 2 seconds and restart it to change the preset time.

3 If the preset time is beyond the available range

- ▶ If the preset time is shorter than the available range (3 hours), reheating will begin immediately.

4 In case the preset time is over 13 hours.

- ▶ "13H0" will be displayed and the preset time will be changed to 13 hours automatically. If cooking is preset to AM07:00 of the following day at PM5:00 of the day, where preset time is 14 hours, "13H0" will be displayed, and preset time automatically changes to AM06:00. (Maximum preset time is 13 hours)
- ※ If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours because the rice spoils easily during the summer time.
- ※ When you want to finish presetting P.M 12:00, preset P.M 12:00.
- ※ Use this function when you want to finish cooking between 1 hour to 13 hours based on the preset time.
- ※ If you press the set button to check the present time during the preset cooking function, the present time will be displayed for 2 seconds.



TO KEEP COOKED RICE WARM AND TASTY

Having a meal

- ▶ If you want to have warm rice, press the 'KEEP WARM/REHEAT' button. Then 'Reheat' function will be started and you can eat fresh rice in 9 minutes.
- ▶ To use reheating in standby status after power is applied, turn lid combining hand grip to Locked location, press 'KEEP WARM/REHEAT' button, and the cooker will convert to Heat Preservation mode. Here press 'KEEP WARM/REHEAT' button once more.

<Keep warming>



34 indicates the time elapsed as warming time.

<Reheating>



The lamp blinks and "09" indicator will show the reheat remaining time displayed in minutes with the mark going around clockwise.

<Finishing reheat>



When the reheat finishes with the beep sound, keep warming function will be operated and show the time elapsed.

※ If you change the current time during warming, refer to page 13.

- ▶ The frequent use of the "Reheat" function may cause the cooked rice to be discolored or dried. Use it once or twice per day.
- ▶ If a separate heating appliance or gas burner is used to cook rice, put the cooked rice into the cooker and press the 'KEEP WARM/REHEAT' button to keep the rice warm. At this time, "09" is shown on the display. (Like this, transferring hot rice to a cold cooker may cause the rice to be discolored or develop an odor)
- ▶ After 24 hours of heat preservation, the lamp of heat preservation time lapse blinks, indicating that long time has passed in heat preservation condition.
- ▶ In case the lid combining hand grip is in open status during heat preservation, the cooker does not go for reheating. For reheating, lock the lid combining hand grip to (Locked) position, and then press 'KEEP WARM/REHEAT' button.
- ▶ If the lid combining hand grip is turned to open status during reheating, function display will show "E0!". At this time, reheating will be cancelled, and heat preservation will proceed.

Simple Soft Function

It will be hard to open the lid during warming or right after it has finished cooking. So push the pressure weight to the side and allow the steam to release.

Make sure the handle is in the "Lock" position during warming or reheating.

It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm)

Do not keep the scoop inside the pot while warming the rice. When using a wooden scoop it can create serious bacteria and odors.

It would be better to warm the rice for less than 12 hours because of odors and color change.

The cooked rice, which cooked by pressure cooker is more prone to changing color than the rice cooked by general cooker.

During warm mode, the rice can arise and turn white and rise. In this case, mix the rice.

The mixed and brown rice cannot be in such good condition as white rice while in warm function due to their characteristics. Therefore do not keep mixed and brown rice in function for a long period of time.

Do not mix small amount of rice or leftovers with the rice under keeping warm. Doing so may cause an odor. (Use a microwave oven for the cold rice.)



TO KEEP COOKED RICE WARM AND TASTY

Controlling method of warming temperature

If the temperature in the oven is not proper, it will smell bad and the color of the rice will change so make sure to adjust the temperature.



- ① Press 'MODE' button over 1 time during warming. It displays as picture with buzzer. At the time, 74 means current warming temperature.

▶ 'MENU/SELECTION' button will blink, and 'SET', 'CANCEL', and 'MODE' buttons will be turned ON.

※ The reference temperature programmed when the product is shipped may differ from the Instruction.

To raise temperature



To lower temperature



- ②-1 Press 'MENU/SELECTION' button to change the temperature as 74 → 75 → 76 → 77 → 78 → 79 → 80.

▶ 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.

▶ To switch the functions continuously, keep pressing the button.

- ③ After setting temperature, press 'MODE' select button. Preset temperature will be stored with buzzer sound. (If will be cancelled once press 'CANCEL' button or after 7 seconds without pressing any button)

- ②-2 Press 'MENU/SELECTION' button to change the temperature as 74 → 73 → 72 → 71 → 70 → 69.

▶ 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.

▶ To switch the functions continuously, keep pressing the button.

Change of temperature

If you want to change cooking temperature in the standby mode, press 'MODE' button over 2 seconds, and press it 2 more times. You can change cooking temperature.

How to operate My Mode function.

Use it while opening the lid when there is too much water or rice becomes too soft.



- ① In standby mode, push the 'MODE' button 4 times. The voice says that it is programmed warming mode, control the temperature you want.



- ②-1 Press 'MENU/SELECTION' button to change as the picture (up)

▶ 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.

▶ To switch the functions continuously, keep pressing the button.

- ③ Select the menu you want, then press the 'MODE' button and set-up time will be automatically entered with a buzzer. (If you press the 'CANCEL' button or do not press a button within 7 seconds, the function will be cancelled and returned to standby mode.)

- ②-2 Press 'MENU/SELECTION' button as the picture (down)

▶ 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.

▶ To switch the functions continuously, keep pressing the button.

1. If too much water is spilled out when you open the lid : Press 'MENU/SELECTION' button to raise the setting mode.
2. If the edge of rice is too soft : Press 'MENU/SELECTION' button to reduce the setting mode.



TO KEEP COOKED RICE WARM AND TASTY

How to activate “SLEEPING” mode.


When keeping rice warm for a long time, set up the temperature low to prevent the following quality of rice: smelly, dry, change of color; from PM10:00 ~ AM 04:00.

► How to set up



1. Hold 'MODE' button for one second, then press the 'MODE' button 6 times to set up sleeping mode. If sleeping mode is not shown, keep on pressing the 'MODE' button until it is heard or displayed.
2. When you are in sleeping mode, it says "Setting mode for Sleeping Keep Warm. Select or cancel Sleeping Keep Warm with 'MENU/SELECTION' button then press 'SET' button". At this time, 'MENU/SELECTION' button will blink, and 'MODE', 'SET', and 'CANCEL' buttons will be turned ON.
3. Press the 'MENU/SELECTION' button, it says "Sleeping Keep Warm has been selected. Then press 'SET' button". You will see nothing surrounding the rice cooker on the screen.
4. This function must be activated by the user depending on necessity

► How to release

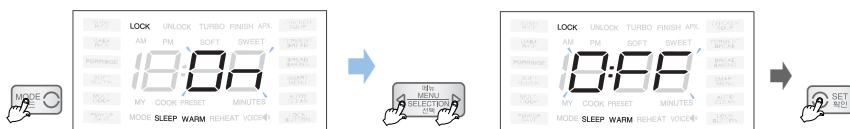

1. Hold 'MODE' button for one second, then press the 'MODE' button 6 times to set up sleeping mode. If sleeping mode is not shown, Keep on pressing the 'MODE' button until it is heard or displayed.
2. When you are in sleeping mode, it says "Setting mode for Sleeping Keep Warm. Select or cancel Sleeping Keep Warm with 'MENU/SELECTION' button then press 'SET' button". At this time, 'MENU/SELECTION' button will blink, and 'MODE', 'SET', and 'CANCEL' buttons will be turned ON.
3. Press the 'MENU/SELECTION' button, it says "Sleeping Keep Warm has been canceled. Then press 'SET' button". You will see nothing surrounding the rice cooker on the screen.
4. In the SLEEP/KEEP WARM mode, if you press 'CANCEL' button, the Voice message will state: "Function setting has been cancelled with overtime". If no button is pressed for more than 7 seconds, You'll return to the Standby mode.

- If you need to keep the rice warm during sleeping, do not use this function. This function makes the rice cooler than normal. In summer, the rice can be spoiled and may smell bad because of high temperature. If possible, do not use the "Custom-made warming" mode while sleeping.
- This function is set up as cancel state.

When odors are rising during the warming mode

- Clean the lid frequently. It can cause bacteria and odors.
- Even though exterior looks clean, there might be germs and it can cause odor so please be sure to use automatic sterilization (steam cleaning) menu for cleaning. Clean the inner pot completely after automatic cleaning function is done. (Refer to page 18)
- After you cook soups and steamed dishes, clean the inner pot properly to prevent rice from smelling.

HOW TO USE POWER SAVE / ENERGY EYE FUNCTION



What is POWER SAVE mode?

If power cord is not unplugged, little bit of electricity will be still wasted. It is called standby electric power. The power SAVE mode is technology which minimizes this electricity consumption.

Manual Method


► How to start power saving

When 'CANCEL' button is pushed for 2 seconds at waiting state, Saving power function is set up.

► How to end power saving

Method 1) Push any button then it will be returned to waiting mode.

Method 2) If lid handle is turned to open or close, power saving mode will be canceled and back to waiting Mode.

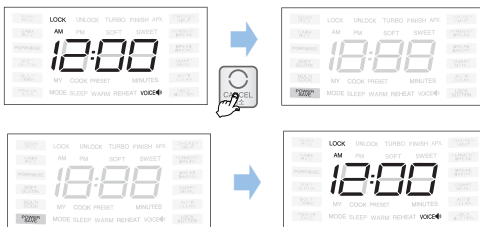

Automatic Method

If the standby time is chosen as number other than "0" at the automatic power saving mode, the automatic saving power function will be operative.

If you move lid handle or push any button before passing waiting time, the waiting time which is reduced will go back to the setting.

► How to original setting



1. If you push 'MODE' button 7 times at the standby state, automatic power saving mode is set up. 'MODE' button needs to be pressed for over 1 second at the first time.
2. When automatic power saving mode is set up, it says "Setting mode for Automatic Power Save. Select stand by time with 'MENU/SELECTION' button then press 'SET' button". 'MENU/SELECTION' button will blink, and 'MODE', 'SET', and 'CANCEL' buttons will be turned ON.
3. If you Select OFF with 'MENU/SELECTION' button, Automatic saving will be canceled. After setting up waiting time you want, press the 'SET' button. At this time, 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.
4. Without pressing any button within 7 seconds or pushing 'CANCEL' button, Automatic power saving function will be canceled and go back to waiting mode.

Energy Eye function

The luminance sensor automatically recognizes ambient brightness during standby, cooking, warming and preset timer for minimizing power consumption of the product. If you want the power saving mode to start when it's darker than the current level (Step 2), set the mode to Step 1. If you want the mode to start when it's brighter than the current level, set the mode to Step 3. (The power saving mode of CUCKOO is set to Step 2 at the factory.)



(When selecting Energy Eye function)

(When deactivating Energy Eye function)

1. Press the 'MODE' button 12 times in standby status and you will enter the Energy Eye mode. 'MODE' button needs to be pressed for over 1 second at the first time.
2. When you enter the Energy Eye setting mode, a voice comes up saying "This is the Energy Eye Setting Mode. Set or unset the Energy-I Mode by pressing the Selection button. Then, press the OK button". 'MENU/SELECTION' button will blink, and 'MODE', 'SET', and 'CANCEL' buttons will be turned ON. buttons light.
3. Each time you press the 'MENU/SELECTION', the Energy Eye shifts from OFF to Step 1 to Step 2 to Step 3. When OFF is displayed, a voice comes up saying "The Energy Eye function is canceled". The 'SET' button blink and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons light.
4. After selecting your preferred step, please press the 'SET' button. A voice will come up saying "The Energy Eye mode has been set". and your step will be stored.
5. If will be cancelled if you press the 'CANCEL' button or after 7 seconds without pressing any button. In this case a voice will come up saying "Function setting has been cancelled with overtime".



HOW TO USE POWER SAVE SCREEN LIGHT / LOCK BUTTON / REMAINING COOKING TIME DISPLAY MODE

Display POWER SAVE SCREEN LIGHT Mode

This mode adjusts the brightness of the display during cooking, warming or reservation cooking.

► How to set and unset the mode




1. In the Standby mode, press the 'MODE' button 9 times to activate the Display POWER SAVE SCREEN LIGHT mode. ('MODE' button needs to be pressed for over 1 second at the first time.)
2. When the Display POWER SAVE SCREEN LIGHT mode starts, a Voice message will state "Setting mode for power save screen light. Select or cancel power save screen light with 'MENU/SELECTION' button then press 'SET' button". 'MENU/SELECTION' button will blink, and 'MODE', 'SET', and 'CANCEL' buttons will be turned ON.
3. When you press the 'MENU/SELECTION' button, a Voice message will give one of these two statements: The Display the POWER SAVE SCREEN LIGHT Function is selected. Please, press the 'SET' button. "or" The Display POWER SAVE SCREEN LIGHT Function is canceled. Please press the 'SET' button. 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON.
4. Press the 'SET' button and the Display POWER SAVE SCREEN LIGHT Function will start with a Voice message stating "Power save screen light has been set".
5. In the Display Lighting/Power- Saving mode, press the 'CANCEL' button or do not press any button for more than 7 seconds. The setting will be canceled and you return to the Standby mode with a Voice message stating "Function setting has been cancelled with overtime".

How to Set "LOCK BUTTON"

Lock can be set for touch button to prevent accidental touch during cleaning or by children.

► Setting Method



1. Button will be locked if 'SET' button is pressed for 3 seconds or longer during cooking, presetting, warming, reheating or in standby condition.
2. When button is locked, a voice will sound saying "Button lock has been selected". At this time, button lock is displayed on the screen.

► How to set and unset the mode



1. To 'CANCEL' button lock, press 'SET' button for 3 seconds or longer on locked the button.
2. "Lock" sign on the display disappears when button lock is cancelled, a voice will be saying "Button lock has been canceled".

- ※ Any button other than 'SET' button is pressed while button lock is set, buzzer will sound.
- ※ Desired function can be set after cancelling button lock is set, buzzer will sound.
- ※ Button lock function is cancelled automatically when the power is OFF even though the button lock function is already set.

Remaining Cooking Time Display Mode

This mode sets on or off the remaining cooking time display which appears periodically during the cooking. (The displayed remaining cooking time may vary from the actual one depending on the cooking volume and process.)

1. In the Standby mode, press the 'MODE' button 9 times to activate the Remaining Cooking Time Display mode. 'MODE' button needs to be pressed for over 1 second at the first time.
2. When the Remaining Cooking Time Display mode starts, a voice message will state "Setting Mode for remained cooking time. Select or deselect the remained cooking time with 'MENU/SELECTION' button then press the 'SET' button".
3. When you press the 'MENU/SELECTION' button, a voice message will give one of these two statements: "Remained cooking time has been selected. Then press 'SET' button" or "Remained cooking time has been deselected. Then press 'SET' button". 'SET' button will blink, and 'MODE', 'MENU/SELECTION', and 'CANCEL' buttons will be turned ON. After selecting either mode, press the 'SET' button.
4. In the Remaining Cooking Time Display mode, press the 'CANCEL' button or do not press any button for more than 7 seconds. The setting will be canceled and you return to the Standby mode with a voice message stating "Function setting has been cancelled with overtime."



※ Remaining Cooking Time Display mode set on



※ Remaining Cooking Time Display mode set off

HOW TO USE THE NFC FUNCTION



App installation and activation

You can interface the product with your smart phone when you download and install CUCKOO Smart Rice Cooker application from Android Play Store.

► How to use the NFC function

1. Please see the user's manual of your smart phone if the phone supports the NFC function.
2. NFC function of smart phone is supported only by Android OS version 2.3.3 or higher only.
3. If you are new to the NFC function, please refer to the NFC setting instruction below:


► App installation

1. You can simply touch your smart phone on the NFC icon of your product to install the application from the Google Store.
2. Search CUCKOO on Google Store, and download and install the application.


How to set NFC function (for Galaxy S3)

Setting method may slightly vary among smart phone models. See the user's manual of your smart phone.


① Settings

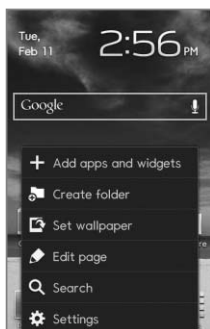


② More Settings

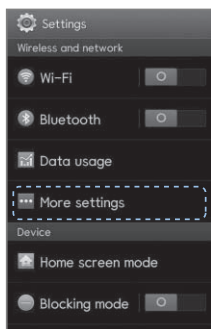

③ NFC function ON

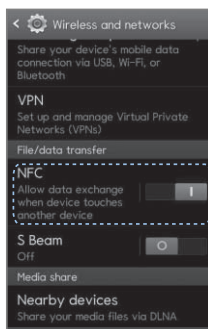

④ Read and Write/P2P, Android function NO

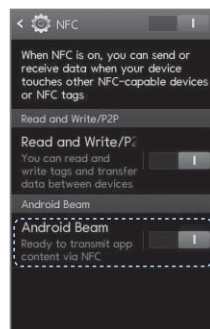

How to touch



1. Hold the smart phone as shown below, and touch the antenna of your smart phone on NFC icon of your product for 2-3 seconds.
2. NFC functions only when the screen of the smart phone is displayed as shown below.
3. It does not function properly when the screen of your smart phone is turned on, or locked.
4. Please make sure the antenna touches the NFC icon properly so that they communicate without any problem.
5. Once they communicate properly, a message window is displayed to indicate the transmission has succeeded.
6. Location of the NFC antenna varies among smart phone models. See the user's manual of your smart phone to check the location of the NFC antenna.
7. NFC transmission speed may vary among smart phone models.




HOW TO USE THE NFC FUNCTION

How to select your product model after loading the application.

① Start the application.




② Choose between Automatic and Manual selection.

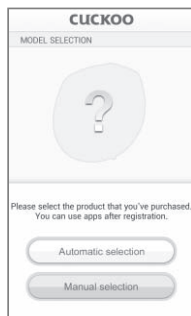

③-1 Automatic selection



③-2 Manual selection


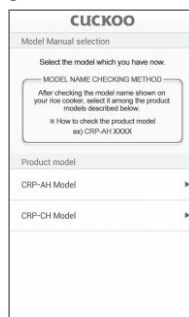


④ The app is executed.



Automatic cooking

It is allowed to perform cooking function through interface of CUCKOO and the smart phone.

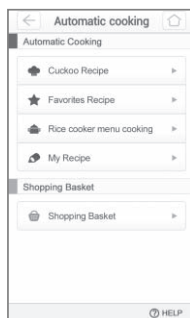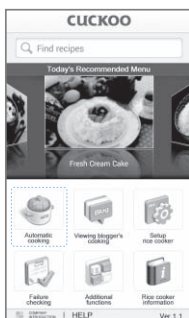

① CUCKOO recipes

The NFC technology supports cooking based on the additional recipes transmitted to Smart Menu of your product. Transmitted recipes are stored in the Smart Menu of your product. (The Smart menu has Black bean as its default recipe.)

② Favorite recipes

When Favorite button on the CUCKOO recipes is clicked, the recipe is saved as a favorite recipe.

③ Rice cooker menu

It allows to easily set various menus and settings of the rice cooker with the smart phone, and conveniently cook the menu through the NFC function.

④ My recipes

You can save your own recipes in your smart phone, and conveniently cook according to the recipe simply by touching it to your product.

⑤ Shopping cart

List of ingredients for recipes is stored in the shopping cart of CUCKOO recipes.


HOW TO USE THE NFC FUNCTION




How to choose a recipe

1. Search recipe


① Select search bar

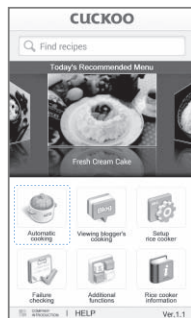

② Type in recipe and search

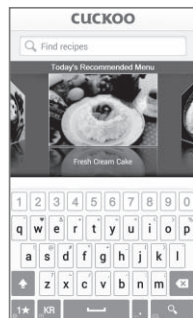

③ Confirm the recipe

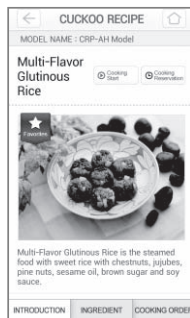


2. Search by the types of recipe


① Select automatic cooking




② Select cuckoo recipe

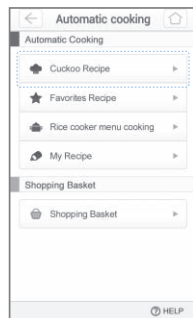



③ Select recipes

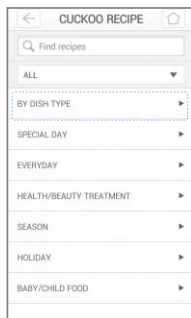

④ Select Steam dish

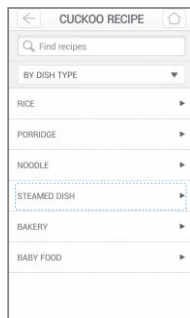

⑤ Select Multi-flavor glutinous rice

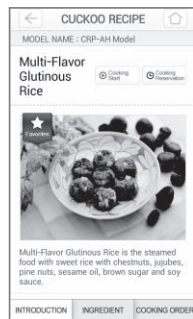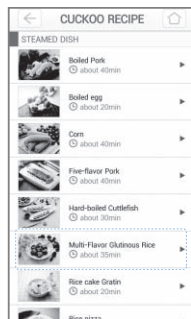




HOW TO USE THE NFC FUNCTION


How to choose a recipe

3. Search by the conditions


1 Select automatic cooking

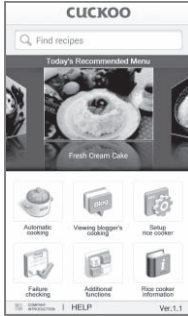


2 Select cuckoo recipe

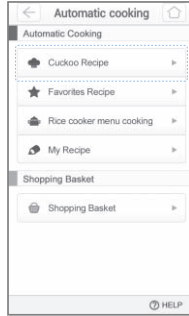



3 Select special day

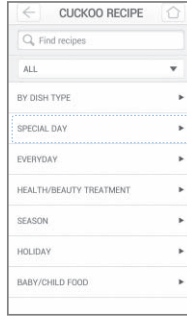

4 Select treatment for seniors

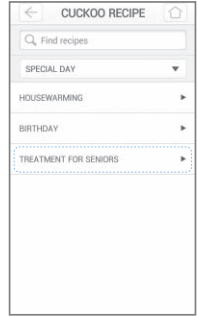

5 Select Multi-flavor glutinous rice

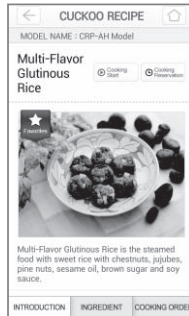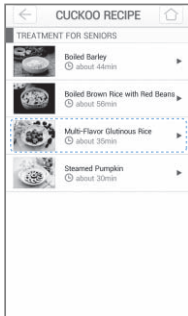

How to start cooking after selecting your preferred recipe (example: Cooking teokbokki, Stir-Fried Rice Cake).


1. Select teokbokki



2. Check out the recipe and prepare ingredients for cooking




3. Clean ingredients following each step

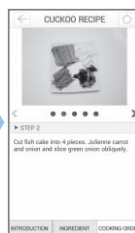

4. Select Start Cooking button from the Introduction tab



5. Touch the smart phone to your product.

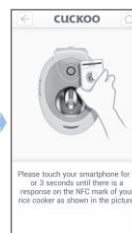

6. Start cooking




HOW TO USE THE NFC FUNCTION



Viewing dishes cooked by bloggers

It is possible to view blogger's dishes, and directly upload recipes of the dishes

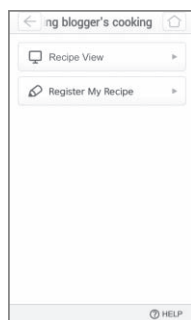


① Viewing dishes

It allows view recipes uploaded by other bloggers or myself.

② Uploading your own dishes


You can upload your own recipes of the dishes to share them with other bloggers

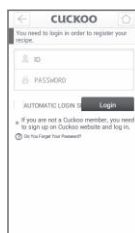

Please login to our website.
If you don't have an ID, please sign up for your account before logging in to our website.

Setting rice cooker

You can set various functions of the rice cooker using the NFC technology.
The function settings are configured with Clock setting, Language & Voice Volume setting, Customized Rice Taste & Warming temperature setting and Power Saving setting.

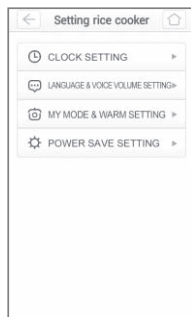

① Clock setting

You can easily set the time on the product.

② Language & Voice Volume setting

You may select your language among Korean, English and Chinese, and adjust the volume for your convenience.

③ Customized Rice Taste & Warming temperature setting

You may select your preferred taste and warming temperature.

④ Power Saving setting



You can minimize power consumption in standby mode.



HOW TO USE THE NFC FUNCTION

Troubleshooting

The menu consists of Self-diagnosis, Checking trouble in advance, and Contacting our repair center

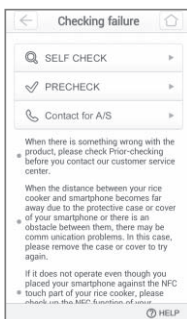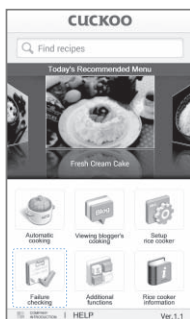

1 Self-diagnosis

You can diagnose the current conditions of the rice cooker, and identify cause of abnormal conditions, if any, through the NFC function of your smart phone.

2 Checking troubles in advance



If the product functions abnormally, you can identify the cause of trouble before you contact out repair center.

3 Contact our repair center

You may find and contact the nearest local repair center.

Other functions

Other functions include timer and diet management.

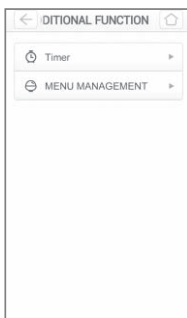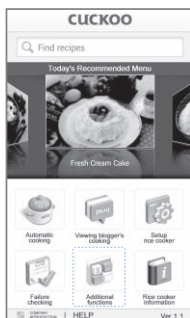

1 Timer



You can use this function for conveniently measuring cooking time during cooking.

2 Diet management

You can count how often you have been cooking and have calorie information for each dish for a day or a certain period of time through the NFC function of the smart phone.

Product information

We will keep you updated on our new models and the list of replacements.

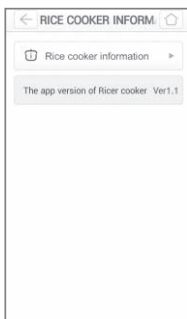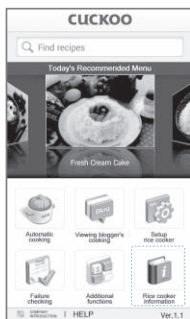

1 Product information

Please keep yourself updated on our new models and the list of replacements so that your CUCKOO products can have a longer life span.

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When cannot turn to "Unlock".	<ul style="list-style-type: none"> • Did you turn the "lid" handle while cooking? • Did you turn the "lid" handle before exhausting steam perfectly? 	<ul style="list-style-type: none"> • Don't open the lid while cooking. If you want to open lid while cooking, press the 'CANCEL' button more than 2 seconds and release the steam. • Pull the pressure handle to the side once and allow the steam to release.
When the lid cannot open although the lid handle is turned to "Unlock".		<ul style="list-style-type: none"> • Because of the pressure. • Pull the pressure handle to aside once and exhaust the steam perfectly.
When the steam exhausted between the lid.	<ul style="list-style-type: none"> • Is there an external substance on the packing? • Is packing too old? 	<ul style="list-style-type: none"> • Clean the packing with duster. • Keep the packing clean. • If the steam is exhausted through the lid, please power off and contact the service center and dealer. • Packing life cycle is 12 month, please replace the packing per 1 year.
When the 'CANCEL' button does not operate while cooking.	<ul style="list-style-type: none"> • Is the inner pot hot? • Is currently the setting to lock mode? 	<ul style="list-style-type: none"> • Keep pressing the 'CANCEL' button for 2 seconds for safety reason if you want to cancel while cooking. • Be careful of hot steam emission or hot contents spattered from the automatic steam outlet during cancellation. • Please press 'SET' button for over 3 seconds to release.
When you hear weird noises during cooking and warming	<ul style="list-style-type: none"> • Is there a wind blowing sound when cooking the rice? • Is there a "Chi" sound when warming the rice? 	<ul style="list-style-type: none"> • Is the inner pot inserted? • Check the rated voltage?
Brown rice is not germinated properly	<ul style="list-style-type: none"> • Does the amount of rice exceed the specified maximum capacity? • Is bean(other grains) too dry? 	<ul style="list-style-type: none"> • Put the specified maximum capacity of brown rice. • Old rice or contaminated rice may not be germinated properly. (Refer to page 21)

CHECK BEFORE ASKING FOR SERVICE

- ▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the button cannot operate with “ L ”	<ul style="list-style-type: none"> Is the inner pot inserted? Check the rated voltage? 	<ul style="list-style-type: none"> Please insert inner pot. This product is 120V only.
When the Pressure “Cook/Turbo” Timer button does not operate with “ E01 ”	<ul style="list-style-type: none"> Did you turn the lid Handle to “Lock” Is “Lock” lamp on? 	<ul style="list-style-type: none"> Please turn the “lid” handle to “Lock”.
When the rice is badly sticky.	<ul style="list-style-type: none"> Is there any rice or any other alien substance on the temperature sensor or the bottom surface of the inner pot? 	<ul style="list-style-type: none"> Clean all the alien substances on the temperature sensor or the bottom surface of the inner pot.
When “ E03 ” is showed on the LCD.	<ul style="list-style-type: none"> Check the rated Voltage? 	<ul style="list-style-type: none"> Cut the power and contact customer service. It is normal to get “E03” when putting only water. This is only for 120V.
When the time cannot be preset.	<ul style="list-style-type: none"> Is the current time correct? Is AM or PM set properly? Did you set the reservation time over 13 hours? 	<ul style="list-style-type: none"> Set the current time(Refer to page 13). Check the AM and PM. Maximum reservation time is 13 hours. (Refer to page 26~27)
When you smell after and before cooking?	<ul style="list-style-type: none"> Is the inner pot correctly inserted in the main body? Is the lid handle on the top cover set to “Lock”? Is there hot food in the inner pot? 	<ul style="list-style-type: none"> Please put in the inner pot perfectly. Please turn the “lid” handle to “Lock” Pull the pressure handle to aside once.
When “ E ”, “ 00 ” are shown on the LCD by turns	<ul style="list-style-type: none"> Micom power is out 	<ul style="list-style-type: none"> Please cut the power and contact customer service
When “ E ”, “ 00 ” are shown on the LCD by turns	<ul style="list-style-type: none"> The sensor is broken 	<ul style="list-style-type: none"> Please cut the power and contact customer service
“ E ” mark shows up during the product operation	<ul style="list-style-type: none"> Micom memory is out. 	<ul style="list-style-type: none"> Please cut the power and contact customer service
When “ 00 ”, “ 00 ” are shown on the LCD by turns		<ul style="list-style-type: none"> Is there power cut while in cooking?

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the rice is not cooked.	<ul style="list-style-type: none"> • 'PRESSURE COOK' button is pressed? • Is there power cut while in cooking? 	<ul style="list-style-type: none"> • Press the 'PRESSURE COOK' button once. And check "E-3" sign on the display. • Re-press the 'PRESSURE COOK' button. • Refer to page 13 for blackout compensation.
When the rice is not well cooked.	<ul style="list-style-type: none"> • Did you use the measuring cup for the rice? • Did you put proper amount of water? • Did you rinse the rice before cooking? • Did you put rice in water for a long time? • Is the rice old or dry? 	<ul style="list-style-type: none"> • Refer to page 15~16 • Add water about half the notch and then cook.
Bean (other grains) is half cooked.	<ul style="list-style-type: none"> • Is bean (other grains) too dry? 	<ul style="list-style-type: none"> • Soak or steam beans and other grains before cooking in the pressure cooker in order to avoid partially cooked beans or grains. Beans should be soaked for ~2-minutes or steamed for ~2-minutes prior to cooking, depending on your taste.
Rice is too watery or stiff.	<ul style="list-style-type: none"> • Is the menu selected correctly? • Did you properly measure water? • Did you open the top cover before cooking was finished? 	<ul style="list-style-type: none"> • Select the correct menu. • Properly measure water. • Open the top cover after cooking finished
When the water overflows.	<ul style="list-style-type: none"> • Did you use the measuring cup? • Did you use proper amount of water? • Is the menu selected correctly? 	<ul style="list-style-type: none"> • Refer to page 15~16
When you smell odors while warming.	<ul style="list-style-type: none"> • Did you close the top cover? • Please check if the power cord is plugged. • Did it warm over 12 hours? • Is there any other substance such as rice scoop or cold rice? • Is bean (other grains) too dry? 	<ul style="list-style-type: none"> • Select the correct menu. • Properly measure water. • Open the top cover after cooking finished
"E-1 E-P E-L" Signs show up. "E-2" Signs show up.	<ul style="list-style-type: none"> • Temperature sensor or fan motor does not work properly. 	<ul style="list-style-type: none"> • Unplug the power cord and call the Service center.
Warming passed time mark blinks during keeping warm.	<ul style="list-style-type: none"> • 24 hours has not passed yet after Keeping warm 	<ul style="list-style-type: none"> • This function alarms if the rice remained warm for more than 24 hours.
Rice has gotten cold or a lot of water flow during Keeping warm	<ul style="list-style-type: none"> • Keeping warm was set in "Sleeping" mode 	<ul style="list-style-type: none"> • Keep warm after cancelling or setting "Sleep Keeping Warm" mode depending on the necessity.
If "E-4" sign is appears.	<ul style="list-style-type: none"> • It shows on the display when pressing "Start" button again, or when the cooking has finished and you've never ever open turned the handle to "Unlock" 	<ul style="list-style-type: none"> • It can be solved by turning handle to "Unlock" and then turn to "Lock"
"E-5" sign shows up	<ul style="list-style-type: none"> • Detachable cover is not mounted 	<ul style="list-style-type: none"> • Mount detachable cover(Refer to page 10) • If "E-5" sign is displayed continuously even though you already installed detachable cover, please contact customer service.
Alarm sounds or reheating does not work while keeping warm	<ul style="list-style-type: none"> • Is bean (other grains) too dry? 	<ul style="list-style-type: none"> • Mount detachable cover(Refer to page 10)
When the NFC function is not operated	<ul style="list-style-type: none"> • Does "SMART" appear on the control panel of your rice cooker? • Does your Smart Phone have the NFC (Near field communication) function? 	<ul style="list-style-type: none"> • Please check your Smart Phone Manual to find out whether your phone has the NFC function or not. • This NFC function only supports android 2.3.3 and above



안전상의 경고

- '안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- '안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.



경고 피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황



주의 피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황



- 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다.
- 위험 발생을 피하기 위해 주의감에 앞고 지시에 따라 사용하십시오.
- 이 기호는 어떤 행위를 '금지'하는 표시입니다.
- 이 기호는 어떤 행위를 '지시'하는 표시입니다.



경고



(금지)

사용 중 압력추 및 자동증기배출구에는 손과 얼굴을 가까이 하지 마십시오.

- 화상의 우려가 있습니다.
- 취사 또는 요리 중 나오는 증기는 매우 뜨거우므로 손이나 얼굴을 가까이 하지 마십시오.
- 특히 어린이의 접근을 막아 주십시오.



제품을 직사광선이 쬐는 곳, 가스레인지, 라이터, 전열기구 등의 가까이에서 사용하지 마십시오.

- 잔류전 감전 변형 변색 및 화재의 원인이 됩니다.
- 전원코드를 열기구 가까이 두지 마십시오. 코드가 녹아 화재, 감전의 원인이 됩니다.
- 수로 전원코드의 상태를 꼭 확인하십시오.
- 오디오, TV 등과 같은 전자제품과 2m 이상 거리를 유지하십시오.



제품을 분해하거나 개조하지 마십시오.

- 화재 및 감전의 원인이 됩니다.
- 사설기사와의 시공이 분해하거나 수리하지 마십시오. 수리 및 고장 symptoms

서비스센터로 문의하여 주십시오.



제품을 싱크대에 넣고 닦거나 제품 내부에 물을 넣지 마십시오.

- 잔기누전 및 감전 화재의 원인이 됩니다.
- 제품에 물이 들어간 경우에는 사용을 중지하고 전원플러그를 뽑은 다음

서비스센터로 문의하여 주십시오.

싱크대, 목욕탕 등 제품에 물이 들어 갈 수 있는 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오.

- 잔기누전 및 감전의 위험이 있습니다.
- 만화기 많은 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오.
- 제품에 물이 들어갔을 경우에는 서비스센터로 문의의 하십시오.



반드시 정격 15A 이상의 교류 120V 전용 콘센트에서만 사용해 주시고 한 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오.

- 여러 제품과 함께 사용하거나, 다른 기구에 사용하면 발열 및 발화 감전의 원인이 됩니다. 수로 콘센트 상태를 꼭 확인하십시오.
- 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오.
- 전원코드를 15A 이상의 것을 사용하여 주십시오.



전원코드가 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고, 서비스센터로 문의하십시오.

- 제품 사용 중 사용상의 부주의로 전원 코드의 파손이 발생하거나 찢힐 경우 화재 및 감전의 원인이 될 수 있으며, 수로 전원코드와 전원플러그, 콘센트의 상태를 꼭 확인하십시오.
- 전원코드가 전원플러그가 파손된 경우에는 위험이 생기지 않도록 하기 위하여 제조사나 그 판매점 또는 유자격 기술(수리사) 기사에게 의해 코드 교환을 하십시오.
- 반드시 지정된 서비스센터에서 수리하시기 바랍니다.





안전상의 경고



경고



(금지)

압력축 및 자동증기배출구를 막거나 증기구에 행주나 장식용 덮개, 기타물건을 올린 채 사용하지 마십시오.

- 압력에 의한 폭발의 위험이 있습니다.
- 본체의 변형, 변색 및 고장의 원인이 됩니다.



변형된 내솥이나 전용 내솥이 아닌것은 사용하지 마십시오

- 내솥이 가열되어 이상증 및 화재의 원인이 됩니다.
- 내솥을 떨어뜨렸거나 변형된 경우에는

서비스센터로 문의해 주십시오.



〈전용 내솥〉

내솥 없이 사용을 하지 마십시오

- 감전 및 고장의 원인이 됩니다.
- 내솥이 없는 상태에서 쌀이나 물을 넣지 마십시오.
- 쌀이나 물이 들어있을 경우에는 제품을 뒤집거나 흔들지 마십시오

서비스센터로 문의하십시오

취사나 요리가 진행중일 때 뚜껑 열림 버튼을 누르거나, 뚜껑 결합 손잡이를 절대 “” (열림) 방향으로 돌리지 마십시오


- 강제로 열 경우 압력으로 인해 화상 및 폭발의 위험이 있습니다.
- 취사 요리 완료 후 증기 완전히 배출된 상태에서 뚜껑 결합손잡이를 작동하십시오

전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품바닥에 눌리지 않도록 주의해 주십시오.

- 화재 및 감전의 원인이 됩니다.
- 수시로 전원코드 상태를 꼭 확인하십시오

내솥 없이 금속성 물질 등을 넣거나, 넣어서 사용하지 마십시오 (특히 어린이가 주의)

- 감전 및 화재의 원인이 됩니다.

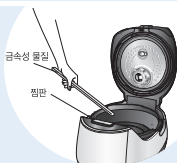

금속성 물질
찜판

제품 내에 실충제나 화학물질 등을 뿌리거나 투입하지 마십시오

- 화재 발생의 우려가 있습니다.
- 제품내 바퀴발레나 발레 등이 들어있을 경우는

서비스센터로 문의해 주십시오



흡·배기구 또는 틈 사이에 비닐, 청소용 핀, 금속물 등 이물질이 들어거나 막히지 않도록 하십시오

- 감전 및 화재의 원인이 됩니다.
- 청소용 핀을 증기배출구 청소와에 제품의 틈새나 구멍에 넣지 마십시오

취사나 요리가 진행중일 때 절대로 뚜껑을 열지 마십시오

- 취사 요리가 진행중일 때는 압력에 의해 뚜껑이 열리지 않습니다.
- 강제로 열면 화상 및 폭발의 위험이 있습니다.
- 취사 또는 요리가 진행 중일때 부득이하게 뚜껑을 열어야 할 경우 취사 버튼을 약 2초간 누른 후 내압압력이 완전히 제거되었는지 확인을 하고 열어 주십시오

전원코드를 무리하게 구부리거나, 묶거나 잡아당기지 마십시오

- 감전이나 소로 인해 화재의 원인이 될 수 있습니다.
- 수시로 전원코드 상태를 꼭 확인하십시오



플러그 및 전원 코드부를 동물이나 물이 뜯거나 못과 같이 날카로운 금속물체로부터 충격을 받지 않도록 주의하여 주십시오

- 충격으로 인한 파손을 합선, 감전, 화재 등의 원인이 됩니다.
- 수시로 전원코드와 전원 플러그 상태를 꼭 확인하십시오



전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.

- 화재의 원인이 됩니다. 수시로 전원 플러그 상태를 꼭 확인하십시오

어린이 혼자 사용하거나 어린이가 만질 수 있는 장소에 제품을 두지 마십시오

- 고열에 화상을 입거나 감전이 될 수 있습니다.




안전상의 경고

! 경고


쌀통 및 다용도 선반 등에
제품을 놓고 사용하지 마십시오.

- 전원코드가 등체에 눌러져 화재 및 감전의 원인이 됩니다. 수로 전원코드 상태를 꼭 확인하십시오.
- 취사 또는 요리를 중지가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

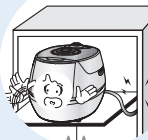

인공심장 박동기 및 전기를
사용하는 의료보조장치를
사용하는 분은 본 제품을 사용하기
전에 의사와 상담하여 주십시오.

- 본 제품의 작동시 인공심장 박동기 및 전기를 사용하는 의료보조기 구의 작동에 영향을 미칠 수 있습니다.

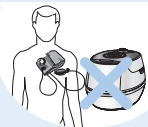

온도감지기, 밥솥내부 또는
내솥 바깥부위의 이물질, 밥알,
기타음식물 등은 반드시
제거한 후에 사용하십시오.

- 온도감지를 정확히 못하게 되므로 내솥이 가열되어 이상온도 및 화재의 원인이 됩니다.
- 제품 사용전 반드시 이물질 제거 상태 확인 후 사용하십시오.



전원플러그를 콘센트에서 뽑거나 뺄 때는 손의
물기를 반드시 제거한 후 전원플러그를 잡고
뽑거나 빼어 주십시오.

- 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다.
- 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.

! 주의

사용 중에 이상한 소리나 냄새 또는 연기가
나면 즉시 전원플러그를 뽑고
내부 압력을 완전히 제거후
서비스센터로 문의해 주십시오.

최대 용량 이상으로 내용물을 넣고
사용하지 마십시오.

- 밥알 넘침이나 취사불량 등 고장의 원인이 됩니다.

사용 중이거나 사용직후에는 내솥, 내부 및
압력추 등은 뜨거우므로 만지지 마십시오.

- 고열에 의해 화상을 입을 수 있습니다.
- 압력추가 잠겨져 증기배출에 의해 화상을 입을 수 있습니다.

뚜껑 위에 자성을 지닌 물체를 올려
놓거나 자성이 강한 물체 근처에서
사용하지 마십시오.

- 제품 고장 및 기능이 정상적으로 작동되지 않을 수 있습니다.



제품에 심한 충격을 주거나 떨어뜨리지 마십시오.

- 제품 고장 및 안전상의 문제가 발생할 수 있습니다.

내솥을 다른 용도로 사용하거나 불위에 올리지 마십시오.

- 내솥의 변색 및 손잡이의 변형으로 제품에 이상이 발생할 수 있습니다.

교류 120V 이외에는 사용하지 마십시오.

- 감전, 화재의 원인이 될 수 있습니다.
- 제품이 정상적으로 작동을 하지 않습니다.

제품을 전자레인지 및 싱크대
스테인리스 위에 올려놓거나 제품내에
칼판, 방석, 전기장판, 찻판, 은박지
등을 놓고 사용하지 마십시오.



- 화재 및 변형의 원인이 됩니다. 수시로 제품 상태를 꼭 확인하십시오.

취사, 보온, 지정된 메뉴 이외의 물끓임, 식혜,
미역국, 카레, 기름으로 튀기는 요리 등
다른 용도로 사용하지 마십시오.

- 고장 및 냄새의 원인이 됩니다.

사용하지 않을 때는 전원플러그를
콘센트에서 뽑아 주십시오.

- 절연 성능 저하로 인해 감전, 누전, 화재의 원인이 될 수 있습니다.




내솥 손잡이를 잡고 제품을 들어 올리지 마십시오.

- 내솥 손잡이를 잡고 들어 올릴 경우 우발적 열려 위험합니다.
- 제품 바닥 좌우측에 있는 이동용 손잡이 홀을 양손으로 들어올려 안전하게 사용하십시오.




각 부분의 이름

각 부 명칭(외부)

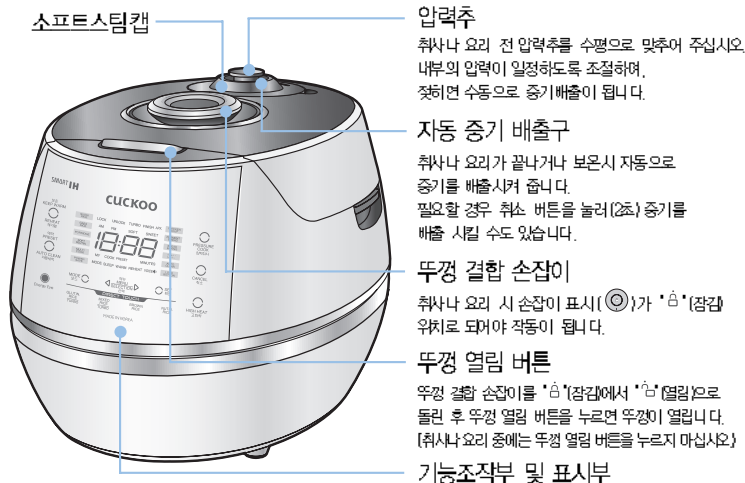

각 부 명칭(내부)

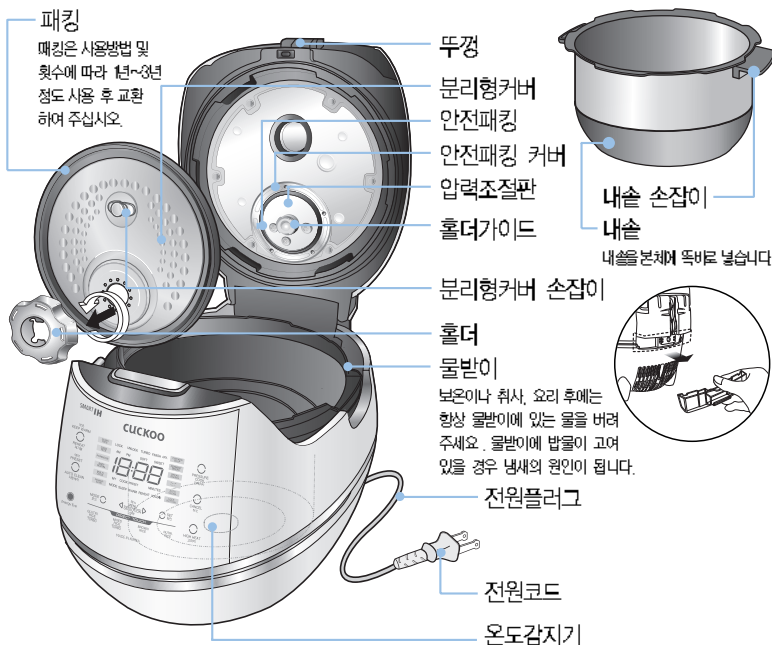

부속품 안내



사용설명서 및 요리안내



주걱



계량컵



점판

(점판은 요리 전에 잘 청소하여사용하십시오)



청소용 핀·보리쉬 킷
(핀은 본체 바닥면에 부착되어 있습니다.
오류를 방지하여 사용하십시오)




제품 손질 방법

- **청소를 잘하지 않으면 보온 중 냄새가 나는 원인이 됩니다. 특히 뚜껑부는 자주 청소해 주십시오.**
(전원플러그를 빼고 본체의 열이 식고 난 후 손질하십시오.)
- 본체 · 뚜껑은 물기를 제거한 행주로 닦아 주십시오. 벤젠, 신나 등은 사용하지 마십시오.
- 사용 중 분리형커버나 내솥내부에 밥물이 묻어 전분막이 생기는 수가 있으나, 위생상 아무런 영향이 없습니다.

분리형 커버 및 압력패킹

분리형커버 세척 후에는 반드시 뚜껑에 장착해 주십시오.

분리형커버가 장착되지 않으면 취사, 예약취사가 되지 않습니다. (보온시 경고음 발생)

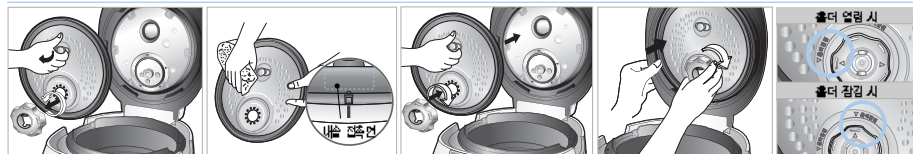


- ① 화살표 방향대로 돌려 분리 후 분리형 커버 손잡이를 확실하게 청소하고 같이 세척하면 밥솥과 쉽게 분리되어 세척이 가능합니다.
※ 손잡이 파손을 막고 열이 식은 후 분리해나 세척하십시오.
- ② 주방용 중성세제 및 스펀지로 자주 세척해 주시고 물기를 제거한 행주로 닦아 주십시오.
※ 압력패킹의 내솥 접촉면에는 밥알 등이 붙지 않게 닦아 주시고 청결해 관리하면 재질을 더 오래 사용할 수 있습니다.

- ③ 장착 시에는 분리형커버 손잡이를 잡고 뚜껑에 부착한 후 홈터를 돌리기부위의 홈에 맞춘 후 시계방향으로 돌려 고정 하십시오.

- ④ 그림과 같이 분리형 커버의 하단부를 뚜껑쪽으로 누른 상태에서 홈터를 걸당히시 면 쉽게 사용하실 수 있습니다

- ※ 그림과 같이 홈터와 분리형커버의 화살표 방향을 맞춘 후 사용해 주십시오.

압력패킹의 세척이나 교환으로 분리 후 재조립시에는 빠진곳이 없도록 완전히 끼워넣고 사용해 주십시오.

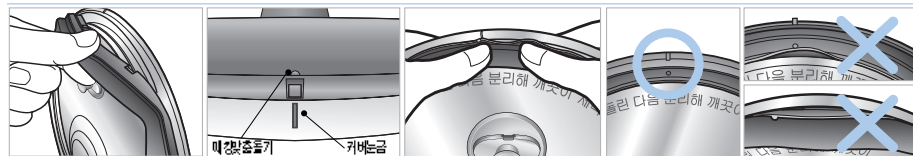

- ① 압력패킹 분리 시에는 그림과 같이 잡고 당겨 주십시오.
- ② 조립 시에는 6군데의 압력패킹 맞출돌기와 커버 눈금을 먼저맞춰 끼워주십시오.
- ③ 6군데를 끼운 후 그림과 같이 압력 패킹을 돌려가며 눌러 완전히 끼워주십시오.
- ④ 전 돌리에 그림과 같이 완전히 끼워지지 않은 구간이 있는지 확인하여 주십시오. 압력패킹이 완전히 끼워지지 않으면 증기가 누설될 수 있습니다.



사용 전 · 후 증기배출구가 막히지 않도록 깨끗이 부드럽게 닦아 주십시오. 안전패킹은 부드럽게 닦아 주시고 강제로 빼거나 제품에서 떼어내지 마시고 사용 전 · 후 결합상태를 확인해 주십시오. 결합이 불안전한 경우 반드시 서비스 센터에 문의 하십시오.



내솥의 바깥면이나 밀면의 이물질 및 물기를 깨끗이 닦아 주십시오. 거친 수세미, 솔, 연마제 등은 코팅이 벗겨질 수 있으므로 주방용 세제와 부드러운 천 · 스펀지로 닦아 주십시오.
※ 내솥의 압력 패킹접촉부위를 청결히 관리하면 재질을 더 오래 사용할 수 있습니다.



취사 시 발생하는 밥물은 증기배출구로 통해 이곳에 고일수 있도록 설계되어 있으므로 취사 완료 후 물기를 제거한 행주로 깨끗이 닦아 주십시오.



온도감지기에 이물질이 눌러 붙어 있는 경우 금속판이 손상되지 않게 제거 하십시오.

뚜껑 결합 손잡이의 사용법에 관하여

1. 취사나 요리 시에는 뚜껑을 닫고 뚜껑 결합 손잡이를 '스' (잠금) 방향으로 확실하게 돌려주십시오. 기능표시부에서 'LOCK' 표시가 나타납니다. 이는 뚜껑이 확실하게 잠겨 압력취사를 실행할 수 있도록 표시하여 주는 안전장치인 기능입니다.
2. 취사나 요리 완료 후 뚜껑 손잡이를 '스' (잠금)에서 '옴' (열림) 방향으로 돌린 후, 뚜껑 열림 버튼을 눌러 뚜껑을 열려주십시오. 제품 내부에 증기가 완전히 배출되지 않으면 뚜껑 결합 손잡이가 '스' (잠금)에서 '옴' (열림) 방향으로 쉽게 돌아가지 않습니다. 이때 뚜껑 결합 손잡이를 강제로 돌리지 마시고 입력축을 정혀 내부 증기가 완전히 배출된 후 다시 조작해 주십시오.
3. 뚜껑을 열고 닫을 때는 항상 뚜껑 결합 손잡이 위치를 '스' (열림) 방향으로 확실하게 돌려 주십시오.
- 기능표시부에서 'LOCK' 표시가 나타나지 않으면 압력취사, 예약/자동세척 버튼이 작동하지 않습니다. 정확하게 다시 '스' (잠금) 위치로 돌려 주십시오.
- 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 '스' (잠금) 방향으로 완전히 돌아갔을 때 뚜껑이 잠긴 상태입니다.
- 뚜껑 결합 손잡이가 열림 방향으로 돌아갔을 때 '옴' 표시가 3회 점멸 후 소등되며, 잠금 방향으로 돌아갔을 때 '옴' 표시가 점등됩니다.





제품 손질 방법

압력 노즐막힘 손질 방법

압력추

이물질 등으로 압력추/증기 배출구가 막혀있으면 제 기능을 발휘하지 못하므로 사용 전 · 후에는 아래의 압력추/증기배출구 청소방법을 참조하여 압력추를 분리한 다음 청소용 핀으로 구멍을 뚫은 후 사용에 주십시오.
증기 배출구의 구멍이 막히지 않았는지 정기적으로 점검해 주십시오.
※ 압력추의 디자인은 그림과 다를 수 있습니다.

〈압력추/증기배출구 청소방법〉



① 뚜껑 결합손잡이를 "8"자 모양으로 돌린후 압력추를 잡고 위로 들면서 화살표 방향 반시계방향으로 돌려서 분리합니다.



② 청소용 핀 & 브러쉬를 사용할때는 본체 바닥면에 부딪히지 않도록 구멍을 뚫습니다.
※ 청소용 핀으로 압력추 증기 배출구만 청소하시고, 다른 구멍은 안전장치므로 절대로 파지 않습니다.



소프트 스팀캡

취사나 요리 완료 후 때워낸 다음 주방용 중성세제 및 스폰지로 자주 세척해 주시고 제품 뚜껑에 고인물은 물을 꼭 한 행주로 닦아 주십시오.



내솥 · 무속품 ▶ 주방용 중성세제와 스폰지로 씻어 주십시오.


거친수세미

금속세제


엔마제

세용


청소용 핀 & 브러쉬 킷 사용방법




① 청소용 핀 & 브러쉬 킷(제품 바닥면 부속)을 그림과 같이 분리합니다.




② 그림과 같이 브러쉬를 뚜껑을 잡고 화살표 방향으로 원을 주어 뚜껑을 분리합니다.



③ 청소용 브러쉬를 반쯤고인 방지 배수로나 행주로 닦기 어려운 부분을 깨끗이 청소할 수 있습니다.



④ 청소용 핀을 사용할 때에는 화살표 방향으로 청소용 핀을 당겨서 청소용 핀 브러쉬 킷을 90도 맞춰 주십시오.




⑤ 청소용 핀을 증기 배출구 청소시에만 사용하십시오.

소프트 스팀캡 손질 방법


취사나 요리 완료 직후에는 소프트 스팀캡이 뜨거우므로 만지지 마십시오. 화상을 입을 수 있으므로 주의하십시오.




① 소프트 스팀캡을 그림과 같이 증기 배출구 쪽으로 잡고 위쪽 부분을 손가락으로 잡고 위쪽 부분을 잡고 돌려 분리합니다. ※ 때로는 증기 배출구 쪽에 물이 맺혀 분리하기 어렵습니다.




② 손가락을 잡고 반시계 방향으로 돌려 분리하십시오. 주방용 중성세제 및 스폰지로 자주 세척하십시오. 세척 후 수세미로 닦아 주십시오.



③ 소프트 스팀캡을 조리하여 사용 때에는 화살표 방향으로 돌려놓으십시오. 사용 후 시계방향으로 돌려 화살표로 돌려 주십시오.



④ 세척 후 소프트 스팀캡을 잘라 놓는 것은 그림과 같이 소프트 스팀캡을 잘라낸 후 소프트 스팀캡을 눌러 닫아 고정시켜 주십시오.




⑤ 세척 후 소프트 스팀캡을 잘라 놓는 것은 그림과 같이 소프트 스팀캡을 잘라낸 후 소프트 스팀캡을 눌러 닫아 고정시켜 주십시오.




⑥ 세척 후 소프트 스팀캡을 잘라 놓는 것은 그림과 같이 소프트 스팀캡을 잘라낸 후 소프트 스팀캡을 눌러 닫아 고정시켜 주십시오.

물받이/밥물 고임방지배수로 손질방법




① 물받이를 분리합니다.




② 밥물고임방지배수로 및 손가락을 잡고 아래방향으로 밀어서 분리합니다.




③ 밥물고임방지배수로 및 물받이를 물거름 받침 행주로 닦기 후 뚜껑을 닫아 고정시켜 주십시오.



④ 밥물고임방지배수로에 청소용 브러쉬를 이용하여 그림과 같이 깨끗이 청소해 주십시오.



⑤ 청소 후 그림과 같이 밥물고임방지배수로를 위로 밀어서 끼워 놓은 후 물받이를 확실하게 장착합니다.



⑥ 청소 후 그림과 같이 밥물고임방지배수로를 위로 밀어서 끼워 놓은 후 물받이를 확실하게 장착합니다.

뚜껑이 닫히지 않을 때의 주의사항

뚜껑을 강제로 닫지 마십시오. 고장의 원인이 됩니다. 뚜껑이 잘 닫히지 않을 때에는 다음 사항을 확인하십시오.



- 1 내솥이 제품 본체에 완전히 들어가 있는지 확인합니다. (내솥에 부속된 손잡이)를 제품 본체 홈 부에 안착하십시오.
- 2 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 오른쪽 그림과 같이 되어 있어야 뚜껑이 닫힙니다.



- 3 제품 내에 증기가 발생하는 응축물이나 뜨거운 물 등이 들어 있으면 닫는 순간 압력이 걸려서 뚜껑이 잘 닫히지 않습니다. 이때는 압력추를 찌른 다음 뚜껑을 닫고 뚜껑 결합 손잡이를 시계방향으로 돌려서 뚜껑을 체결합니다.



기능 조작부의 이름과 역할 / 기능 표시부의 이상점검 기능

기능 조작부의 이름과 역할

예약/자동세척 버튼
예약취사를 할 경우 사용
▶ 65~68쪽 참조
자동세척/자동살균세척을 할 경우 사용
▶ 57쪽 참조

모드 버튼
맛솜밥맛(58쪽~59쪽),
현재시간(52쪽), 음성블록(52쪽),
아간 음성 블록 줄임(53쪽),
음성 설정(53쪽),
보온온도(70쪽), 맛솜보온(70쪽),
맛솜취사(59쪽), 취침보온(70쪽),
자동절전(72쪽) 화면모양 설정(73쪽)
을 설정 할 경우 사용

보온/재가열 버튼
보온을 할 경우나 식사 적전
밥을 따뜻하게 데울 경우 사용
▶ 60쪽 참조

기능 표시부

압력취사 버튼
취사 및 요리를 시작 할 경우 사용
▶ 56쪽 참조

취소 버튼
선택한 기능을 취소 할 경우 사용
허거나 지동으로 중기를 배출시킬
때 사용 (취사 또는 요리중에 취소
시작 경우 2초간 눌러 주십시오)
▶ 60쪽 참조
절전기능 진입시 사용
▶ 72쪽 참조

확인 버튼
선택한 기능을 설정 허거나
버튼잠금 기능을 설정 할 경우 사용
▶ 73쪽 참조

메뉴/선택 버튼
김밥, 한해매, 영양죽, SOFT 백미, 달걀국, 삼계탕, 뽕밥죽, 찰국, 스마트메뉴,
자동세척 백미, 백미교차력, 잡곡, 잡곡교차력, 현미, 현미교차력, 영양밥, 영양밥교차력 메뉴를
선택할 경우 사용, 예약시간을 변경할 경우 사용, 오프메뉴로 선택된 기능들을 실행할 경우 사용,
한해매 시간을 맞추거나 달걀국, 뽕밥죽, 찰국 시간을 선택할 경우 사용

고하력 버튼
백미, 잡곡, 현미, 영양밥 메뉴의
고하력 취사를 할 경우 사용
▶ 56쪽 참조

DIRECT TOUCH
백미, 백미교차력, 잡곡, 잡곡교차력, 현미,
영양밥 메뉴를 즉시 취사 할 경우 사용
▶ 56쪽 참조

- ※ 전원플러그를 꽂고 아무 동작을 하지 않은 경우, 그림과 같이 화면상태가 나타날 때가 대기 상태입니다.
(대기 상태 화면의 메뉴, 시간, 음성 유무, 맛솜밥맛 단계는 사용자의 설정에 따라 다릅니다.)
- ※ 기능 조작 시 취소 버튼을 누르면 대기 상태로 전환됩니다.
- ※ 버튼은 부처음이 날 때까지 확실하게 눌러 주시고 본 명판의 디자인은 실물과 다를 수 있습니다.



기능 표시부의 이상점검 기능

사용방법이 올바르게 않거나 제품에 이상이 생겼을 때 아래와 같은 표시가 나타나 경보를 하여 줍니다.
정상적인 사용 조건에서나 혹은 조치 이후에도 지속적으로 표시가 나타날 경우에는 서비스센터로 문의하십시오.

LI	나열이 없을 때 나타납니다.
E..	E.P E.L 온도감자에 이상이 있을 때 나타납니다. ('E..' 표시 'E.P' 표시 'E.L' 표시가 깜박거립니다.) 서비스센터로 문의하십시오.
E.F	냉각팬에 이상이 있을 때 나타납니다. ('E.F' 표시가 깜박거립니다.) 서비스센터로 문의하십시오.
E01	우경 결합 손잡이를 확실하게 돌리지 않은 상태에서 압력취사 또는 예약자동세척 버튼을 눌렀을 때 나타납니다. 손잡이를 '0' (잠금)쪽으로 확실하게 돌려 주십시오.
E03	물만 계속 끓일 경우나 저음이상 발생시 나타납니다. 서비스센터로 문의하십시오.
13Ho	예약 시간이 13시간을 초과한 경우에 나타납니다. 13시간 이내로 예약을 하십시오. (65~68쪽 참조)
E do	취사 종료 후 보온 상태에서 한번도 우경 결합 손잡이를 '0' (잠금)방향으로 하지 않고 대기 상태가 된 후 재차 압력취사 또는 예약자동세척 버튼을 눌렀을 때 나타납니다. 우경 체결 감지 장치의 동작 확인 기능입니다. 우경 결합 손잡이를 '0' (잠금)으로 한 후 다시 '0' (잠금)쪽으로 돌려 주시면 됩니다. 그래도 문제가 계속 해결되지 않으면 서비스센터로 문의하여 주십시오.
E..u	미리검 전원에 이상이 있을 때 나타납니다. 서비스센터로 문의하십시오.
E..F	미리검 내부 메모리에 이상이 있을 때 나타납니다. 서비스센터로 문의하십시오.
E..P	환경센서에 이상이 있을 때 나타납니다. 서비스센터로 문의하십시오.
E.co	분리형 컵커가 장착되지 않았을 때 나타납니다. 분리형 컵커를 장착해 주십시오. 분리형 컵커가 장착된 상태에서 'E.co' 표시가 깜박이는 경우는 분리형 컵커 감지부에 이상이 발생되었을 경우입니다.
14.P 14.F	전원 또는 저음의 이상 발생 점검 기능입니다. 서비스센터로 문의하십시오.



현재시각의 설정 / 음성안내 기능의 설정과 해제

현재시각은 이렇게 맞추십시오.

현재시각을 맞추려면 다음 사항을 꼭 알아두십시오. 예) 현재 시각이 오전 8시 25분일 경우


1 전원플러그를 꽂은 후 모드 버튼을 1회 누릅니다

- ▶ 모드버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.
- ▶ '현재 시각 설정 모드'입니다. 선택버튼으로 현재시각을 맞춘 후 확인 버튼을 눌러주세요' 하는 음성이 나옵니다.
- ▶ 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.



2 메뉴/선택 버튼을 눌러 시를 "8"에 맞추고 분을 "25"에 맞춥니다.

- ▶ D 버튼을 누를 때마다 1분 단위로 증가합니다.
- ▶ O 버튼을 누를 때마다 1분 단위로 감소합니다.
- ▶ 버튼을 계속 누르고 있으면 10분 단위로 연속으로 변합니다. (반복기능)
- ▶ 반복기능을 이용하여 원하는 시를 먼저 맞춘 후, 1분 단위로 분을 맞추면 원하는 시각을 더 편리하게 설정 할 수 있습니다.
- ▶ 오전 오후가 바뀌지 않도록 주의하여 맞춥니다.
- ▶ 낮 1200의 경우는 오후 1200으로 표시됩니다.

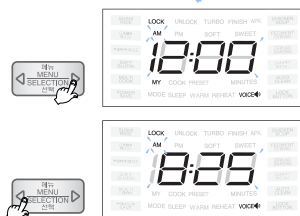

3 원하는 시각으로 설정이 완료되면 확인 버튼을 눌러주십시오.

- ▶ 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 꺼집니다.
- ▶ 확인 버튼을 누르지 않고 7초가 경과되면 '시간이 초과되어 기능 설정이 취소되었습니다.' 하는 음성과 함께 시각 설정이 취소됩니다.



■리튬 건전지에 대하여

- 음 자음에는 정전압 기능 및 시계 기능을 위하여 리튬 건전지가 내장되어 있으며 건전지의 수명은 약 3년 정도나 성능에 따라 차이가 날 수 있습니다.
- 전원플러그를 뽑거나 다시 꽂았을 때 현재시각이 '1200'로 바뀌는 현상이 발생하면 건전지에 문제 발생된 경우가 있으므로 교체방법으로 문맥에서 지정된 서비스센터에서 건전지를 교환한 후 사용하십시오.

■정전 보상기능이란?

- 음 자음은 정전이 되어도 정전 이전의 상태로 기억하게 되어 있어 정전 후, 다시 전기가 들어오면 정상 작동으로 작동하게 됩니다.
- 취사나 요리 중에 정전이 되면 정전 전 시간만큼 취사나 요리 시간이 늘어났어 정전전제에 따라 취사나 요리 상태가 다소 차이가 날 수도 있습니다.
- 오온 중 정전이 되어 밥이 익었을 때는 보온이 취소됩니다.

■보온 중일때 현재시각 설정은 이렇게 하십시오.

1. 보온 중일때 현재시각을 변경할 경우에는 취소버튼을 눌러 보온을 취소한 후 모드 버튼을 1회 눌러 현재시각을 설정합니다.
2. 현재시각 설정이 끝나면 보온재가 꺼짐 버튼을 1회 눌러보십시오. 이 때 표시부에는 "ON"이 표시됩니다.

음성볼륨 조절기능(음성기능을 해제하거나 음성볼륨을 조절하는 기능임)

대기 상태에서 모드 버튼을 2회 누르면 진입합니다. (모드 버튼을 1초에 누를 시 1초 이상 눌러야 진입 가능합니다.)



모드 버튼을 2회 눌러 음성볼륨 설정모드 진입 시 표시부에 "3"이 표시됩니다.

- ▶ 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
- ▶ '음성볼륨 설정모드'입니다. 선택 버튼으로 볼륨을 조절한 후 확인 버튼을 눌러주세요' 하는 음성이 나옵니다.

메뉴/선택 버튼을 눌러 "OFF"가 설정되면 "VOICE" 및 "OFF" 표시가 깜빡거리며 음성기능이 해제됩니다.

메뉴/선택 버튼을 눌러 "1"부터 "5"까지의 음성볼륨 크기를 설정할 수 있습니다.

- ▶ 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
- ▶ 계속 누르고 있으면 연속으로 변합니다.
- ▶ 원하는 음성볼륨을 설정하신 후 확인 버튼을 눌러 주십시오.
- ▶ 아무런 버튼 입력없이 7초가 경과되면 '시간이 초과되어 기능설정이 취소 되었습니다.' 하는 음성과 함께 기능이 설정되지 않고 취소되어 대기모드로 돌아갑니다.



야간 음성볼륨 줄임 기능 / 음성 설정 기능

야간 음성볼륨 줄임 기능

야간 음성볼륨 줄임 기능은 야간시간(0:00 PM~05:59 AM)의 음성볼륨을 줄이는 기능으로 필요에 따라 설정하여 주십시오. 이 기능은 야간 시간 중에만 동작합니다.

▶ 야간 음성볼륨 줄임 설정방법



예) 3단계, 주간음성 크기의 60%

- : 음성 없음.
 - 1 : 주간음성 크기의 20%
 - 2 : 주간음성 크기의 40%
 - 3 : 주간음성 크기의 60%
 - 4 : 주간음성 크기의 80%
- 설정 단계에 따른 야간음성 크기

- 대기상태에서 모드 버튼을 10회 누르면 야간 음성볼륨 줄임 모드로 진입합니다.
모드 버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.
- 야간 음성볼륨 줄임 설정 모드로 들어왔을 때 '야간 음성볼륨 줄임 설정 모드입니다. 선택 버튼으로 야간 음성볼륨 줄임 기능을 선택 또는 해제한 후 확인 버튼을 눌러주세요.' 하는 음성이 나옵니다.
이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
- 메뉴/선택 버튼을 누르면 단계가 선택되면서 음성의 크기가 바뀝니다. 원하시는 음성의 크기를 선택 후 확인 버튼을 눌러주세요.
이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
- 메뉴/선택 버튼을 조절하여 "5" 표시가 되면 '야간 음성볼륨 줄임 기능이 해제되었습니다.' 하는 음성이 나옵니다. 확인 버튼을 눌러 기능을 해제하여 주십시오. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
- 야간 음성볼륨 줄임 설정 모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 '시간이 초과되어 기능 설정이 취소되었습니다.' 하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.

음성 설정 기능

한국어, 영어, 중국어 음성을 선택하는 기능으로 원하시는 음성을 설정 가능합니다.

제품의 초기 상태는 한국어음성 상태입니다.

▶ 음성 기능 설정방법



예) 한국어음성 설정 시



예) 영어음성 설정 시



예) 중국어음성 설정 시

- 대기상태에서 모드 버튼을 1회 누르면 음성 설정 모드로 진입합니다.
모드 버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.
- 음성 설정 모드로 들어왔을 때 '음성 설정 모드입니다. 선택 버튼으로 원하시는 음성을 선택한 후 확인 버튼을 눌러주세요.' 하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
- 원하시는 음성 선택 후 확인 버튼을 누르면 '음성 설정이 완료되었습니다.' 하는 음성과 함께 기능이 설정되고, 대기모드로 돌아갑니다.
- 음성 설정 모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 '시간이 초과되어 기능 설정이 취소되었습니다.' 하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.



취사 전 준비사항

1 내솥을 깨끗이 씻은 후 물기를 닦습니다.

- ▶ 내솥을 씻을 때는 부드러운 행주를 사용하여 주십시오.
- ▶ 강한 수세미를 사용하면 내솥 안쪽 표면에 벗겨지는 경우가 있습니다.

2 계량컵을 사용하여 쌀을 인분수 만큼 별도의 용기에 담습니다.

- ▶ 쌀을 계량컵의 윗면 기준으로 평평하게 맞추면 인분에 해당됩니다.
(예 : 3인분일 경우 → 3컵, 6인분일 경우 → 6컵)

3 맑은 물이 나올 때까지 깨끗이 씻습니다.

4 깨끗이 씻은 쌀을 내솥에 옮겨 담습니다.

5 메뉴에 따라 물의 양을 조절합니다.

- ▶ 바닥이 평평한 곳에 내솥을 올려 놓고 내솥에 표시된 눈금에 맞춰 물의 양을 조절합니다.
- ▶ 내솥에 표시된 눈금은 쌀과 물을 함께 부었을 때의 물눈금을 표시합니다.
- ▶ 물 높이를 조절에 대하여
 - 백미, 백미쾌속, 백미고화력, 영양밥 : '백미' 물눈금 기준으로 물을 맞춥니다.
영양밥 고화력 : 백미 고화력은 최대 10인분, 백미쾌속, 영양밥, 영양밥 고화력은 최대 6인분까지 취사 가능합니다.
 - 잡곡, 잡곡쾌속, 잡곡고화력 : '잡곡' 물눈금 기준으로 맞춥니다.
김치밥 : 잡곡, 잡곡고화력 김치밥은 최대 8인분, 잡곡쾌속은 최대 6인분까지 취사 가능합니다.
 - 현미, 현미고화력, 현미발아 : '현미/발아' 물눈금 기준으로 맞춥니다. 현미, 현미고화력, 현미발아는 최대 6인분까지 취사 가능합니다.
 - 90FT백미 : 5d백미 물눈금 기준으로 맞춥니다. 90FT백미는 최대 6인분까지 취사 가능합니다.
 - 영양죽 : '영양죽' 물눈금 기준으로 맞춥니다. 영양죽은 최대 2인분까지 취사 가능합니다.

※ 콩, 팥과 같은 딱딱한 곡류는 불리거나 삶아서 잡곡, 잡곡고화력, 잡곡쾌속 메뉴에서 취사를 하십시오. 잡곡의 종류에 따라 실익을 수도 있습니다.
※ 메뉴별 취사량은 56쪽의 '메뉴별 취사시간'을 참조하십시오.

6 전원을 플러그를 꽂은 후 내솥을 본체에 넣어 주십시오.

- ▶ 분리형 커버가 장착되어 있는지 확인하여 주십시오.
- ▶ 분리형 커버가 장착되어 있지 않으면 'Eco' 표시가 나타나며 버튼입력이 되지 않습니다.

내솥을 넣을 때 본체에 완전히 들어가도록 주의하여 넣습니다.

- ▶ 내솥의 바닥면에 쌀 등의 이물질이 붙어 있으면 취사가 잘 되지 않거나 고장의 우려가 있습니다.

- ▶ 내솥이 본체에 정확하게 들어가지 않으면 뚜껑이 닫히지 않습니다.
(내솥의 손잡이가 본체의 홈에 들어가도록 하십시오.)


7 뚜껑을 닫은 후 뚜껑 결합 손잡이를 "옴"(잠금) 위치로 돌려주십시오.

- ▶ 뚜껑 결합 손잡이의 "옴" 표시가 점등되고, 기능표시부에 "LOCK" 표시가 나타나면 뚜껑이 완전히 결합 되었음을 알 수 있습니다.
- ▶ 뚜껑 결합 손잡이를 "옴"(잠금) 방향으로 돌리지 않고 압력취사 버튼을 누르면 경고음 및 "E01" 표시가 나고 취사가 되지 않습니다.

※ 보온 중일 때는 취소 버튼을 눌러 보온을 취소한 후 원하는 기능을 선택하여 주십시오.

- ▶ 이외에 "E00" 표시가 나올 경우에는 뚜껑 결합 손잡이를 "옴"(열림) 방향으로 돌린 후 다시 "옴"(잠금)으로 돌려 주시면 정상적으로 동작 됩니다.
(뚜껑 체결 감지 장치의 동작 확인 기능)



※ 이전 취사에서 취사 완료 후 한번 이상 뚜껑 결합 손잡이를 "옴"(열림) 방향으로 돌렸을 경우에는 해당되지 않습니다.

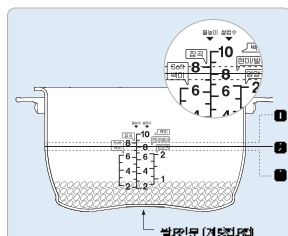

① 전원을 연결합니다 : 물을 규정량보다 많이 부어 주십시오.

② 쌀 2인분의 경우 여분의 2인분의 백미 눈금에 물을 맞춥니다.


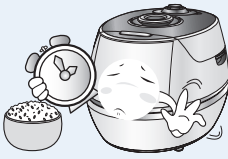
③ 쌀을 충분히 불렸을 때 또는 린반을 원할 때 : 물을 규정량보다 적게 부어 주십시오.

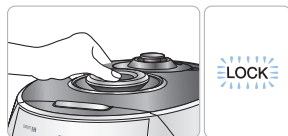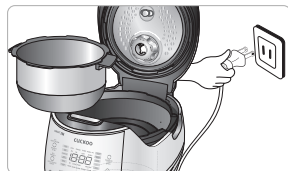



압력밥솥으로 맛있는 밥짓기

맛있는 압력밥솥 밥을 드시려면 다음 사항을 꼭 알아두십시오.

<p>쌀은 계량컵으로 물은 내솥 눈금 으로 정확히</p>	<ul style="list-style-type: none"> • 쌀은 반드시 계량컵을 사용하여 정확히 계량합니다. (시중에 유통되고 있는 쌀통은 제품에 따라 쌀의 양이 다소 차이가 날 수도 있습니다.) • 물의 양은 내솥을 평평한 곳에 놓고 내솥의 물(水) 눈금에 맞춥니다. 	<p>쌀의 양과 물의 양이 맞지 않으면 밥이 퍼석하거나 설악거나 질게 될 수가 있습니다.</p> 
<p>쌀은 보관 방법이 중요</p>	<ul style="list-style-type: none"> • 쌀은 가급적이면 소량으로 구입하여 통풍이 잘되고 직사광선이 없는 서늘한 곳에 쌀의 수분이 잘 증발 되지 않도록 보관합니다. • 쌀을 개봉한 지 오래되어 말라 있는 경우는 물을 반눈금 정도 더 넣고 취사를 하면 좋습니다. 	<p>쌀이 많이 말라 있는 경우는 계량을 정확히 하더라도 밥이 퍼석할 수가 있습니다.</p>
<p>예약 취사 시간은 짧을수록 좋습니다!</p>	<ul style="list-style-type: none"> • 쌀이 많이 말라 있는 경우는 가급적 예약취사를 피해하고 물을 반눈금 정도 더 넣고 취사합니다. 	<p>10시간 이상 예약취사하거나 말라있 는 쌀을 예약취사할 경우는 밥이 퍼석 하거나 설악을 수가 있으며 심한 경우 는 충밥이 될 수도 있습니다.</p> <p>예약 설정 시간이 길어질수록 멜라노이징(미세 밥 늙음현상)이 증가 할 수 있습니다.</p>
<p>보온시간은 짧을 수록 좋습니다!</p>	<ul style="list-style-type: none"> • 보온은 12시간 이내로 하는 것이 좋습니다. 	<p>장시간 보온을 하게되면 밥색깔이 변하거나 밥에서 냄새가 날 수도 있습니다.</p>
<p>제품은 깨끗하게!</p>	<ul style="list-style-type: none"> • 청소를 자주 하십시오. 특히, 뚜껑부에 이물질이 묻어 있지 않도록 자주 닦아 주십시오. 	<p>청소를 자주 하지 않으면 세균이 번식하여 보온시 밥에서 냄새가 날 수 있습니다.</p>



취사는 이렇게 하십시오

1

메뉴/선택 버튼을 눌러 원하시는 메뉴를 선택합니다.

- 본리형 커버가 장착되어 있는지 확인하여 주십시오.
- 취사전 입력추를 수평으로 맞추어 주십시오.
- 메뉴/선택 버튼을 누를 때마다 백미 → 백교화력 → 집콕 → 집콕교화력 → 현미 → 현미교화력 → 영양밥 → 영양밥교화력 → 감귤밥 → 현미밥 → 영양죽 → SOF백미 → 알타리 → 삼계탕 → 뽕밥 → 뽕고기 → 스마트메뉴 → 자동 살균식초순으로 반복 선택됩니다.
- 버튼을 계속 누르고 있으면 메뉴 순서대로 연속으로 변합니다.
- 백미, 집콕, 현미, 영양밥 메뉴의 경우 해당 메뉴의 DIRECT TOUCH 버튼을 누르면 선택 즉시 취사가 진행됩니다.
- 백미, 집콕, 현미, 영양밥 메뉴 취사 시작 후 5초 이내에 교화력 버튼 입력시 해당메뉴의 교화력 취사가 진행 됩니다.
- 백미, 백교화력, 집콕, 집콕교화력, SOF백미, 현미, 현미교화력, 현미밥, 감귤밥, 영양밥, 영양밥교화력 메뉴의 경우 취사가 완료되면 메뉴가 기억되어 동일 메뉴를 연속사용할 경우는 메뉴를 선택하지 않아도 됩니다.



예 감초밥을 선택 할 경우
▶ 감초밥 아래는 음성이나 합니다.

2

입력취사 버튼을 눌러 취사를 시작합니다.

- 취사를 하기전에 반드시 뚜껑 결합 손잡이를 'δ' 잠금 방향으로 돌리고 입력취사 버튼을 누르면 '백미 쿠쿠가 맛있는 취사를 시작합니다.' 하는 음성과 함께 취사가 시작됩니다.
- 뚜껑 결합 손잡이를 'δ' 잠금 방향으로 돌리지 않고 입력취사 버튼을 누르면 경고음과 함께 'E.C.'이 나타난 후 '뚜껑 결합 손잡이를 잠금으로 돌려주세요.' 하는 음성이 나오고 작동되지 않습니다.
- 취사 시작 직후 1분간 취사완료 예상 시간을 표시합니다.
- 취사 용량이나 수온, 취사 조건에 따라 실제 취사 시간은 차이가 있을 수 있습니다.
- 취사 시작 1분 후에는 일정시간 주기로 남은 취사 시간을 산정하여 10초간 표시합니다.



예 백미를 취사 할 경우

3

뜸들이기 (예 : 백미)

- 뜸 진행 부트는 '뜸들이기를 시작합니다.' 하는 음성과 함께 표시부어 남은 취사시간을 표시합니다.
- 메뉴에 따라 남은 시간은 차이가 있습니다.
- 뜸완료 1~3분 전에 증기배출소음이(차소라) 이 나오고 '증기배출이 시작됩니다.' 하는 음성과 함께 증기가 자동배출 되므로 놀라거나 화상을 입지 않도록 주의하십시오.

예) 10분 남은 경우



4

취사완료

- 취사가 끝날 때 완료음 (두~쿠~ 쿠쿠하세요, 새소라 이 울리고 쿠쿠가 맛있는 백미밥을 완성하였습니다.) 하는 음성과 함께 보온 기능을 시작합니다.
- 보온을 원하지 않을 경우 취사 버튼을 2초간 눌러 보온을 취소하여 주십시오.
- 취사가 끝나면 즉시 밥을 골고루 잘 섞어 주십시오.
- 섞지 않고 그냥 두면 밥이 굳고 변색되어 냄새가 발생합니다.
- 뚜껑 결합 손잡이가 잘 돌아가지 않는 경우는 입력추를 찌친 다음 내부 증기를 완전히 빼낸 후 뚜껑 결합 손잡이를 돌려 주십시오.
- 취사 중에는 취사 버튼을 누르지 마십시오. 취사가 취소됩니다.



메뉴별 취사시간

구분	백미	백교화력	집콕	집콕교화력	SOF백미	감초밥	현미	현미교화력	영양밥	영양밥교화력	삼계탕	영양죽	스마트메뉴	뽕밥	자동식초
취사량	2인분~10인분	2인분~6인분	2인분~10인분	2인분~8인분	2인분~6인분	2인분~8인분	2인분~6인분	2인분~6인분	2인분~6인분	2인분~6인분	1인분~1kg	1인분~2인분	밥을 청조하여 주십시오.	발효외방밥을 청조하여 주십시오.	백미 물은금 2차지
취사시간	약28분~약38분	약35분~약42분	약30분~약39분	약44분~약54분	약28분~약36분	약46분~약54분	약45분~약55분	약40분~약46분	약56분~약65분	약25분~약33분	약70분	약60분~약75분			약20분

※ 스마트메뉴, 삼계탕, 밀타리, 뽕밥, 뽕고기 등의 요리 후 취사하게 되면 냄새가 배어올 수도 있습니다.

(40분 청조하여 패킹과 뚜껑 부위를 깨끗하게 닦아 낸 후 사용하여 주십시오.)

※ 메뉴별 취사시간은 전압, 물량, 수온 등 사용환경에 따라 다소 차이가 날 수 있습니다.




취사 / 자동세척 / 간편불림기능은 이렇게 하십시오

취사메뉴 사용법

백미	백미를 차지게 취사할 때 사용합니다.	SOFT 백미	찰기없이 부드러운 밥을 드시고자 할때 사용합니다.
잡곡	백미를 곡류에 섞어서 취사할 경우 사용합니다.	현미밥	현미를 발아시켜 발아현미밥을 드시고자 할 때 사용합니다.
스마트메뉴	밥술에 없는 새로운 레시피를 스마트폰의 NFC 기능을 통해 밥술의 스마트 메뉴로 전송 후, 바로 요리 또는 예약할 수 있습니다.	발효밥 (발효/급기)	빵발효를 하거나, 빵굽기를 할 때 사용합니다.
		삼계탕	삼계탕을 자동으로 요리해 줍니다.
김치밥	일반밥과 차진밥의 중간밥을 드시고자 할때 사용합니다.	영양밥	영양밥을 취사할 때 사용합니다.
영양죽	영양죽을 끓이는 기능입니다.	멀티국	수동으로 화력, 온도, 시간을 설정해서 요리합니다.
자동세척 (자동윤세척)	취사, 보온 또는 요리 후 배운 탕에 세척할 때 사용합니다.	고화력 (백미, 잡곡, 현미, 영양밥)	일반취사와 차별되는 구수하고 차진 밥을 드시고자 할 때 사용합니다. (엘라노이징 현상이 발생할 수 있습니다)
현미	현미를 발아하지 않고 현미를 드시고자 할 때 사용합니다.		
백미쾌속	<ul style="list-style-type: none"> 백미메뉴를 선택한 후 버튼을 연속하여 두번 누르면 백미쾌속 취사로 동작하여 밥짓는 시간이 단축됩니다. (백미 22분 기준 약 13분 정도 걸림) 백미쾌속 취사는 정상취사보다 밥알대가 좋지 않으므로 80% 이하에서만 사용하여 주십시오. 취사전 쌀을 20분 정도 불린 다음 백미쾌속으로 취사하시면 밥맛이 더욱 좋아집니다. 		
잡곡쾌속	<ul style="list-style-type: none"> 잡곡메뉴를 선택한 후, 버튼을 연속하여 두번 누르면 잡곡쾌속 취사로 동작하여 밥짓는 시간이 단축됩니다. (오곡밥 22분 기준 약 20분 정도 걸림) 잡곡쾌속 취사는 정상 취사보다 밥 상태가 좋지 않으므로 80% 이하에서만 사용하여 주십시오. 취사전 잡곡을 미리 불리거나 딱딱한 콩, 팥등의 경우 미리 삶아서 취사하시면 밥맛이 더욱 좋아집니다. 		

※ 백미쾌속 및 저전원을 취사할 경우 물받이에 있는 물이 많을 수 있으므로 취사 후 물을 버려 주십시오.

자동세척(자동윤세척)은 이렇게 하십시오

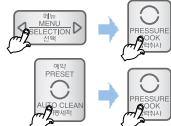

내물에 물을 백미 물레금 2까지 붓고 우정을 덮어 우정 결합 손잡이를 'A' (잠금) 으로 돌려주십시오.

방법, 메뉴선택 버튼을 이용하여 자동세척(자동윤세척) 메뉴를 선택한 후 압력취사 버튼을 눌러 주십시오.

방법, 대기상태의쪽 창에서 예약자동세척 버튼을 2회 눌러 자동세척 (자동윤세척)을 선택한 후 압력취사 버튼을 눌러 주십시오.

엘라노이징미세 밥 나눔) 현상

이 압력밥솥은 밥의 밀도에 얹은 누런 빛깔이 나타나는 데 이는 밥이 전여수분을 밥 내부로 흡수시켜 밥 특유의 구수한 향기와 맛을 내는 엘라노이징 현상을 일으켜 맛있는 밥이 되도록 설계되어 있기 때문입니다. 특히 예약취사와 같이 쌀알이 오랜 시간 침전되던 내물 바닥에 미세 전분이 가라앉아 일반취사 보다 엘라노이징미세 밥 나눔현상이 증가할 수 있습니다.

※ 백미에 곡류를 섞어서 잡곡을 취사할 경우 백미만으로 취사할 때 보다 엘라노이징미세 밥 나눔현상이 증가할 수 있습니다.

간편 불림 기능

취사 시작시 간편하게 불림시간을 추가하여 시간만큼 불림 후 취사할 수 있는 기능입니다.



- 1 백미, 백미고화력, 백미쾌속, 잡곡, 잡곡고화력, 잡곡쾌속, SOFT 백미, 김치밥, 영양밥, 영양밥고화력 메뉴 취사 시작 후 5초 이내 예약자동세척 버튼을 누르면 간편 불림 기능 설정으로 진입합니다.
- 2 간편불림 기능 설정으로 진입 시 예약자동세척 버튼을 누를 때마다 취사전 불림시간이 10분 - 30분 - 60분 불림시간 없음으로 반복하여 변경됩니다.
- 3 불림시간 선택 중 버튼 입력 없이 5초 경과시 현재 불림 시간이 적용됩니다. 원하는 불림 시간 선택이 해당 불림 시간이 지면 취사가 진행됩니다.
- ※ 선택된 불림시간은 분 단위로 감소됩니다.
- ※ 간편 불림 기능 동작 중 우정 결합 손잡이를 열림 방향으로 돌릴 경우, 취사가 취소됩니다.
- ※ 불림시간이 길어질수록 엘라노이징 현상이 증가할 수 있습니다.



쿠쿠 맞춤밥맛 기능은 이렇게 하십시오

쿠쿠 맞춤밥맛이란

세계 최초로 쿠쿠만의 가변밥맛 기술을 개발하여 밥의 부드러운 정도와 차지고 구수한 정도를 자신의 기호에 맞게 선택하여 취사하는 기능으로 소비자가 원하는 밥맛으로 취사할 수 있는 쿠쿠만의 특허 기술입니다.

쿠쿠 맞춤밥맛기능

부드러운밥 단계 증가시 : 밥맛이 부드러워집니다. (부드러움 4단계 선택가능)

구수한밥 단계 증가시 : 밥맛이 더 구수해집니다. 밀라노이징이 발생 할 수 있습니다. (구수함 4단계 선택가능)

※ 기호에 따라 부드러운밥, 구수한밥 단계를 각각 선택하셔도 되고 두 기능을 동시에 선택하셔도 됩니다.

쿠쿠 맞춤밥맛 사용 방법 I

맞춤밥맛이 지원하는 메뉴(백미, 백미교과rice, 잡곡, 잡곡교과rice, 현미, 현미교과rice, 현미발아)를 선택하신 후 모드 버튼을 1초 이상 누르면 맞춤밥맛 설정모드입니다. 모드 또는 선택 버튼을 눌러 원하는 밥맛을 선택한 후 확인 버튼을 눌러주세요. 하는 음성과 함께 맞춤밥맛 설정모드로 진입합니다. ※ 아래의 설정방법의 예는 백미 메뉴 기준입니다.

① 메뉴 선택 화면



② 쿠쿠 맞춤밥맛 진입 화면



원하는 메뉴를 선택하신 후 모드 버튼을 1초 이상 눌러서 맞춤밥맛 설정 모드로 진입합니다.

▶ 모드 메뉴선택 버튼이 잠깐하고 모드, 취소, 맞춤밥맛 선택 가능 메뉴를 바뀝니다.

③-1 부드러운밥 단계 조정모드



메뉴선택 버튼의 왼쪽을 눌러 원하는 부드러운밥 단계를 선택하십시오.

▶ 확인 버튼이 잠깐하고 모드, 취소, 메뉴선택 버튼이 커집니다.

③-2 구수한밥단계 조정모드



메뉴선택 버튼의 오른쪽을 눌러 원하는 구수한밥 단계를 선택하신 후 확인 버튼을 눌러 주십시오.

▶ 확인 버튼이 잠깐하고 모드, 취소, 메뉴선택 버튼이 커집니다.

※ 16가지 맞춤밥맛은 16가지 밥맛 그래프를 참조하여 주입량의 80%를 참조

④ 설정 완료 화면



원하는 맞춤밥맛을 설정하신 후, 확인 버튼을 누르면 설정된 값이 자동으로 입력됩니다.
(취소 버튼을 누르거나 버튼 입력 없이 17초가 경과하면 기능이 취소되고 대기상태로 돌아갑니다.)

쿠쿠 맞춤밥맛 사용 방법 II

맞춤밥맛 설정 모드 진입한 후 모드 버튼을 눌러 맞춤밥맛의 대표밥맛을 설정할 수 있습니다. 모드 버튼을 누를 때마다 찰진밥 → 부드러운밥 → 구수한밥 → 두드러짐, 구수한밥 순으로 맞춤밥맛의 대표밥맛이 나타납니다.

※ 아래의 설정방법의 예는 백미 메뉴 기준입니다.

① 메뉴 선택 화면



② 쿠쿠 맞춤밥맛 진입 화면



원하는 메뉴를 선택하신 후 모드 버튼을 1초 이상 눌러서 맞춤밥맛 설정 모드로 진입합니다.

▶ 모드 메뉴선택 버튼이 잠깐하고 모드, 취소, 맞춤밥맛 선택 가능 메뉴를 바뀝니다.

③-1 부드러운밥 선택모드



모드 버튼을 1초 누르면 그림과 같이 바뀝니다. 이때 부드러운밥 단계가 선택됩니다.

③-2 구수한밥 선택모드



모드 버튼을 2초 누르면 그림과 같이 바뀝니다. 이때 구수한밥 단계가 선택됩니다.

③-3 두드러짐, 구수한밥 선택모드



모드 버튼을 3초 누르면 그림과 같이 바뀝니다. 이때, 두드러짐, 구수한밥이 선택됩니다.

▶ 부드러운밥 단계, 구수한 밥 단계가 연립하여 바뀝니다.

④ 설정 완료 화면



원하는 맞춤밥맛을 설정하신 후, 확인 버튼을 누르면 설정된 값이 자동으로 입력됩니다.
(취소 버튼을 누르거나 버튼 입력 없이 17초가 경과하면 기능이 취소되고 대기 상태로 돌아갑니다.)




쿠쿠 맞춤밥맛 기능은 이렇게 하십시오

쿠쿠 맞춤밥맛의 단계별 그래픽 표시



쿠쿠 맞춤밥맛의 16가지 밥맛 그래프

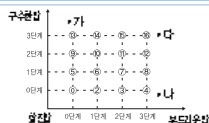

- * 가. 쌀이 단단하고 구수한 밥맛이 됩니다.
- * 나. 쌀이 부드럽고 잘 무푼어 오른 밥맛이 됩니다.
- * 다. 쌀이 부드럽고 구수한 밥맛이 됩니다.
- * 밥맛번호(0~16)가 숫자로 LCD 창에 표시 됩니다.

부드러운밥 및 구수한밥 단계 설정시 설정된 시간만큼 표시부에 위의 그림과 같이 단계표시가 나타나며 취사, 예약 중에도 계속 나타납니다.

▶ '쿠쿠 맞춤밥맛' 기능은 백미, 백미고화력, 잡곡, 잡곡고화력 현미, 현미고화력 현미찰이 메뉴에 개별 적용됩니다.

* 한 번 설정된 선택시간은 다시 변경하기 전까지 계속 기억되므로, 매번 취사마다 시간을 맞출 필요가 없습니다.

취사 및 보온, 예약취사가 진행 중일때는 부드러운밥, 구수한밥을 조정할 수 없습니다.

주의사항

1. '쿠쿠 맞춤밥맛' 기능 사용시 농음현상 발생과 취사상태 등에 영향을 줄 수 있습니다. 어란의 조작 등으로 인해 시간이 잘못 변경되지 않도록 주의하여 주십시오.
※ 초기 설정(부드러운밥 단계, 구수한밥 단계는 '1'번 설정)으로 설정되어 있습니다.
2. '쿠쿠 맞춤밥맛' 기능을 사용하게 되면 설정된 시간만큼 취사시간이 다소 길어질 수 있습니다.
3. 구수한밥 단계를 길게 설정하면, 농음현상이 나타날 수 있습니다.

쿠쿠 맞춤취사 기능(취사온도 조절기능)

취사시 가열완료 온도단계를 조절(온도의 높고, 낮음)하여 취사할 수 있는 기능으로 기존 취사시 고정되어 있던 온도단계를 소비자가 직접 조절할 수 있으므로 소비자가 원하는 기호에 맞게 취사할 수 있습니다.

초기값은 '1'으로 설정되어 있으며 경우에 따라 단계별 조절을 해 주십시오.

- 높은 단계 : 잔곡류로 취사하실 경우나 찰진밥을 좋아하실 경우에 설정해 주십시오.
- 낮은 단계 : 햅쌀로 취사하실 경우나 찰진밥을 싫어하실 경우에 설정해 주십시오.

쿠쿠 맞춤취사 사용방법

대기상태에서 모드 버튼을 5회 누르면 부자음과 함께 '맞춤취사' 설정모드입니다. 선택 버튼으로 메뉴를 선택한 후 확인 버튼을 눌러 주세요. 하는 음성과 함께 맞춤취사 설정모드로 들어갑니다. 이 때 쿠쿠 맞춤취사가 지원되는 전 메뉴가 표시부에 나타납니다.

① 쿠쿠 맞춤취사 설정화면



모드 버튼을 5회 누르면 맞춤취사 설정화면으로 진입합니다. 초기값은 화면과 같습니다. [모드 버튼을 3초 이상 눌러] 진입 가능합니다.

▶ 메뉴선택 버튼이 점멸하고 맞출, 취소, 모드, 메뉴선택, 취소 버튼이 커집니다.

② 메뉴 선택 화면



메뉴선택 버튼을 눌러 맞춤취사가 지원되는 메뉴를 선택하여 주십시오.

③-1 높은단계 조정모드



메뉴선택 버튼을 눌러 표시부가 그림과 같이 변화도록 합니다.
▶ 확인 버튼이 점멸하고 맞출, 취소, 모드, 메뉴선택, 취소 버튼이 커집니다.
▶ 버튼을 계속 누르고 있으면 연속으로 변화합니다.

③-2 낮은단계 조정모드



메뉴선택 버튼을 눌러 표시부가 그림과 같이 변화도록 합니다.
▶ 확인 버튼이 점멸하고 맞출, 취소, 모드, 메뉴선택, 취소 버튼이 커집니다.
▶ 버튼을 계속 누르고 있으면 연속으로 변화합니다.

④ 설정 완료 화면



확인 버튼을 누르면 설정된 값이 자동으로 입력됩니다. 취소 버튼을 누르면 입력값이 7초가 경과하면 기능이 취소되고 대기상태로 돌아옵니다.

1. 쿠쿠 맞춤취사 기능은 백미, 백미고화력, 백미해축, 잡곡, 잡곡고화력, 잡곡해축, 김치밥, 현미, 현미고화력, 현미찰이, 영양밥, 영양밥고화력 메뉴에 개별 적용됩니다.
2. 초기 표시 화면을 기준으로 하여 기호에 따라 맞춤취사 단계를 설정하여 주십시오. 취사단계가 높은 경우 농음현상이 발생할 수 있습니다.
3. 단계를 설정 후 취사시 쌀의 상태 및 향수 등에 따라서 취사상태에서 차이가 있을 수 있습니다.



현미발아는 이렇게 하십시오

발아현미란

현미는 백미에 비해 영양가가 높은 식품이지만 먹었을 때 거칠고 딱딱하며, 소화하기 힘들다는 단점이 있으나 아주 조금만 발아 시켜도 잡과도 있던 효소가 활성화되어 영양성분이 보다 풍부하게 되고 소화 흡수가 훨씬 수월한 형태로 변화됩니다.

현미구입방법

원산지: 경기 용인
품종: 추정
단위: 1kg
생산년도: XX.XX.년
도정일자: XX.XX.년 XX월 XX일
||||| ||||| ||||| ||||| |||||

[정상현미] 통량 현미 - 찌든 소실

[통량 현미 - 쪽정아와 덜 여문 현미]

① 먼저 생산일자와 도정일자를 확인 하십시오.

- ▶ 수확한지 1년 이내 그리고 도정일자로부터 3개월 이내의 현미를 사용하십시오.
(현미의 경우 수확년도와 도정날짜가 표시되어 있습니다.)


② 눈으로 현미를 직접 확인하십시오.

- ▶ 시장에서 판매하는 현미의 대부분은 내부를 볼 수 있도록 되어 있습니다.
 - 찌든 이 살아 있는지 먼저 확인하십시오.
 - 쌀 표면이 밝은 황색을 띄고 표면에 윤기가 흐르면 좋은 현미이고 하얗게 일어나거나 색이 검은 기운을 띄면 발아에 적합하지 않은 현미입니다.
 - 조각나거나 덜 여문 현미는 피하시고 쪽정아가 없는 현미를 고르세요.
쪽정이는 발아 중 색어 염색을 유발하고 푸르스름한 색을 띄는 덜 여문 현미는 발아가 되지 않습니다.

발아현미의 특징

발아현미는 영양가 높은 현미를 발아 시켜 영양소를 더욱 증가시키고 현미의 단점인 거친 밥맛이 개선된 소화가 잘되는 훌륭한 영양원입니다.

- ▶ 현미보다 부드러운 밥맛을 즐기실 수 있습니다.
- ▶ 소화가 잘되고 영양소가 풍부합니다 - 발아과정에서 당화호르몬이 분비되어 소화흡수가 잘됩니다.
- ▶ 어린이나 수험생의 영양 건강식으로 좋습니다 - 식이섬유가 풍부합니다.
- ▶ 발아현미에는 GABA(감마아미노낙산)가 다량 함유되어 있습니다. GABA는 간장과 신장의 신진대사를 촉진하며 중성지방 증가 억제 작용, 혈압상승 방지효과, 뇌세포 대사 촉진 등 우리몸에 좋은 효과가 있음이 의학적으로 확인되었습니다.

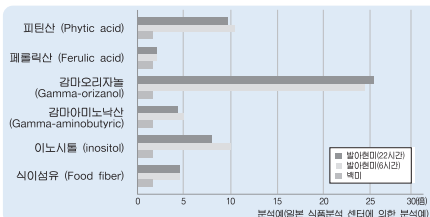

발아현미(6시간)와 백미의 영양 비교

발아현미는 백미에 비해 높은 영양소를 가집니다.

피틴산 10.3배	감마아미노낙산 5배
페룰릭산 1.4배	이노시톨 10배
감마오리자놀 239배	식이섬유 4.3배

현미발아는 이렇게 하십시오



예비발아 방법

발아를 더욱 촉진 시키기 위해 현미를 미리 16시간 이내로 침수하여 예비발아를 해주십시오.

- ▶ 일반적으로 가정에서 사용하시는 용기에 씻은 현미를 넣은 뒤, 물을 충분히 넣고 침수시킨 후 예비발아하여 주십시오.
- ▶ 예비발아는 16시간 이내로 하여 주시고 현미발아 메뉴 사용 전에는 반드시 흐르는 물에 세척하신 후 사용하여 주십시오. 지나치게 세게 문질러 세척하면 쌀눈(배아)이 떨어져 발아되지 않을 수 있습니다.
- ▶ 예비발아하실 때 침수시간에 따라 특유의 냄새가 날 수 있습니다.
- ▶ 예비발아가 완료된 현미는 씻은 후에 내솥에 넣고 취사량에 따라 물높이를 맞추신 후 현미발아 메뉴를 사용하여 주십시오.
- ▶ 기온이 높은 여름이나 보관온도 등에 따라 예비발아시간에는 냄새가 날 수 있으니 가급적 예비발아시간을 줄여 주시고 더 주의해서 깨끗이 잘 씻어 주십시오.

현미발아 취사 시 유의사항

- ❶ 발아된 쌀의 크기를 키우지 않고 좀 더 빨리 드시고 싶으면 예비발아를 하지 않고 현미발아를 선택하여 원하는 발아시간을 설정하신 후 압력취사 버튼을 눌러 취사하십시오. (쌀의 크기에 따른 영양분의 차이는 크지 않습니다.)
- ❷ 기온이 높을때 오랜시간 발아시키면 냄새가 날 경우가 있습니다. 그 경우에는 발아 설정시간을 짧게 설정하여 주십시오.
- ❸ 현미발아 메뉴로 취사하실 경우에는 최대 6인분 이하로 하여 주십시오.
- ❹ 물은 수도물을 사용하셔도 무방하나 생수를 이용하시면 더욱 좋습니다. 단, 뜨거운 물, 끓인 물은 식힌 경우라 하더라도 발아가 되지 않을수 있으니 사용을 피해주십시오.
- ❺ 현미의 발아율이나 쌀의 길이 등의 발아상태는 현미의 종자와 보관상태, 보관기간에 따라 차이가 있을 수 있습니다.
 - 발아현미는 현미를 씻은 것으로, 현미의 종자에 따라 발아율 및 발아된 후의 쌀의 길이에 차이가 있을 수 있습니다.발아시킬 현미는 반드시 수확후 1년 미만의 것을 사용해 주시고, 도정후 보관기간이 가급적 짧은 것을 이용해 주십시오.
- ❻ 현미발아 메뉴의 경우, 예약 취사가 설정되지 않습니다. 예약을 원하실 경우, 현미 메뉴로 설정 후 예약해 주십시오.
- ❼ 현미의 종류에 따라 멜라노이진 또는 밥상태의 차이가 나타날 수 있습니다.
기호에 맞게 물량을 가감하거나 맞춤밥맛 기능을 이용해 주십시오. (58~59쪽 참조)
- ❽ 사용환경이나 쌀 상태에 따라서 쌀이 보이지 않을 수 있습니다.



멀티콕은 이렇게 하십시오

멀티콕 사용 및 예약방법

1



뚜껑 결합 손잡이를 “**잠**”(잠김) 방향으로 돌리고,
메뉴/선택 버튼을 눌러 멀티콕을 선택합니다.

- ▶ 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소, 압력취사 버튼이 켜집니다.
- ▶ 멀티콕 메뉴가 선택되었을 때는 표시부에 L: 2가 표시됩니다.
(*멀티콕 확인 버튼을 눌러주세요.* 하는 음성이 나옵니다.)

2



확인 버튼을 누르고 메뉴/선택 버튼으로 화력을 설정합니다.

- ▶ 메뉴/선택 버튼이 점멸하고, 확인, 취소, 압력취사 버튼이 켜집니다.
*선택 버튼으로 요리화력을 조절한 후 확인 버튼을 눌러주세요.*하는 음성이 나옵니다.

3



확인 버튼을 누르고 메뉴/선택 버튼으로 요리 온도를 설정합니다.

- ▶ 메뉴/선택 버튼이 점멸하고, 확인, 취소, 압력취사 버튼이 켜집니다.
*선택 버튼으로 요리온도를 조절한 후 확인 버튼을 눌러주세요.*하는 음성이 나옵니다.

4



확인 버튼을 누르고 메뉴/선택 버튼으로 요리 시간을 설정합니다.

- ▶ 메뉴/선택 버튼이 점멸하고, 확인, 취소, 압력취사 버튼이 켜집니다.
*선택 버튼으로 요리시간을 조절한 후 확인 버튼을 눌러주세요.*하는 음성이 나옵니다.
- ▶ 확인 버튼을 누르면 *취사나 예약 버튼을 눌러주세요.*하는 음성이 나옵니다.

5



압력취사 버튼을 누릅니다.

- ▶ 압력취사 버튼이 점멸하고, 모드, 확인, 보온, 예약, 메뉴/선택, 취소 버튼이 켜집니다.
압력취사 버튼을 누르면 멀티콕 취사가 시작됩니다.
멀티콕 취사가 시작되면 취사 표시가 나타나며 남은 시간이 표시됩니다.
*멀티콕 쿠쿠가 맛있는 요리를 시작합니다.*하는 음성이 나옵니다.



발효빵은 이렇게 하십시오

빵발효 메뉴 사용 방법

- 1 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌리고, 메뉴/선택 버튼을 눌러 빵발효 메뉴를 선택합니다.

- ▶ “빵발효 확인 버튼을 눌러주세요.”하는 음성이 나옵니다.
- ▶ 확인 버튼이 점멸하고, 메뉴/선택, 취소, 압력취사 모드 버튼이 켜집니다.
- ▶ 빵발효 메뉴가 선택되었을 때 표시부에 40분이 표시됩니다.



- 2 확인 버튼을 누르고, 메뉴/선택 버튼을 눌러 원하시는 발효시간을 설정 하십시오.

- ▶ 메뉴/선택 버튼이 점멸하고, 취소, 압력취사 버튼이 켜집니다.
- ▶ “선택 버튼으로 발효시간을 맞춘 후 취사 버튼을 눌러주세요.”하는 음성이 나옵니다.
- ▶ 발효시간은 5분~20분까지 설정 가능합니다. (30분 이후에는 10분씩 증가 또는 감소합니다.)



※ 초기 설정시 40분

- 3 압력취사 버튼을 눌러 주십시오.

- ▶ 압력취사 버튼을 누르면 빵발효가 시작됩니다.
- ▶ “빵발효 00분 쿠쿠가 빵발효를 시작합니다.”하는 음성이 나옵니다.
- ▶ 발효가 시작되면 취사표시가 나타나며, 남은 시간이 표시됩니다.



- 4 [1차 발효]가 완료되면, 반죽 전체를 가볍게 눌러 가스를 뺀 후, ②,③을 반복하여 [2차 발효]를 진행해 주십시오.

- ▶ 2차 발효가 완료 된 후, 뚜껑을 열고 반죽이 2차 발효 전 대비 1.5 ~ 2배 정도 팽창되어 있는지를 확인해 주십시오.

빵굽기 메뉴 사용 방법

- 1 메뉴/선택 버튼을 눌러 빵굽기 메뉴를 선택해 주십시오.

- ▶ “빵굽기 확인버튼을 눌러주세요.”하는 음성이 나옵니다.
- ▶ 확인 버튼이 점멸하고, 메뉴/선택, 취소, 압력취사 모드 버튼이 켜집니다.
- ▶ 빵굽기 메뉴가 선택되었을 때 표시부에 40분이 표시됩니다.



- 2 확인 버튼을 누르고, 메뉴/선택 버튼을 눌러 원하시는 굽기시간을 설정 하십시오.

- ▶ 메뉴/선택 버튼이 점멸하고, 취소, 압력취사 버튼이 켜집니다.
- ▶ “선택 버튼으로 굽기시간을 맞춘 후 취사 버튼을 눌러주세요.”하는 음성이 나옵니다.
- ▶ 굽기시간은 1분~80분까지 설정 가능합니다. (20분 이후에는 5분씩 증가 또는 감소합니다.)
- ▶ 반죽의 발효 상태 및 재료를 용량에 따라 굽기 시간을 설정해 주십시오.



※ 초기 설정시 40분

- 3 압력취사 버튼을 눌러 주십시오.

- ▶ 압력취사 버튼을 누르면 빵굽기가 시작됩니다.
- ▶ “빵굽기 00분 쿠쿠가 맛있는 빵굽기를 시작합니다.”하는 음성이 나옵니다.
- ▶ 굽기가 시작되면 취사표시가 나타나며, 남은 시간이 표시됩니다.



- ※ 다 구워졌으면 바로 빵을 꺼냅니다. 그대로 두면 내술에 달라 붙습니다.
- ※ 완료 후, 빵을 직접 손 대지 않도록 주의하십시오. 화상을 입을 우려가 있습니다.



발효빵은 이렇게 하십시오.

▼ 발효 시킨 반죽이나, 구워진 빵이 이상할 때 아래의 사항을 확인해 주십시오.

	증상	확인사항	조치사항
발효시킨 반죽	• 발효시킨 반죽이 팽창하지 않거나, 너무 많이 팽창할 때	• 재료의 용량은 정확히 하셨습니까? 발효시간이 길거나, 부족하지는 않았습니까?	• 발효빵 요리 방법을 참조하여, 재료의 용량을 정확히 하십시오.
	• 반죽이 내솥바닥에 눌러 붙을 때	• 재료를 잘 반죽하셨습니까?	• 재료의 용량을 확인 후, 반죽하여 주십시오.
구워진 빵	• 빵이 작고, 딱딱할 때	• 반죽의 재료, 발효 시간을 정확히 하셨습니까?	• 발효빵 요리 방법을 참조하여, 재료의 용량 및 발효, 시간을 정확히 하십시오.
	• 결이 거칠고, 퍼석퍼석 할 때	• 발효 시간이 길거나 반죽을 정확히 하셨습니까?	
	• 빵이 끈적끈적함이 실익을 할 때	• 발효 또는 굽기 시간이 부족하지 않았습니까?	
	• 빵이 탈 때	• 발효 또는 굽기 시간이 길지 않았습니까?	
	• 빵의 밑면이 구워진 색이 나지 않을 때	• 반죽을 내솥 중앙에 두셨습니까? 빵 굽는 시간이 부족하지 않았습니까?	• 2차 발효가 완료된 반죽을 내솥 중앙에 놓아 주십시오. 빵 굽는 시간을 늘려 주십시오.
	• 빵 표면에 주름이 생기거나, 끈적끈적해질 때	• 다 구워진 빵을 바로 꺼내셨습니까?	• 발효빵 굽기가 완료되면, 바로 빵을 꺼내주십시오.

※ 반죽 재료의 용량을 잘못 맞추거나 발효 시간이 짧으면 빵 품질이 저하될 수 있으니 발효빵 요리 방법에 준하여 요리하시기 바랍니다.

발효빵 요리 방법

발효빵



준비할 재료

밀가루(강력분) 300g, 이스트 5g, 설탕 8g, 소금 3g, 버터23g, 탈지분유 12g, 물 160g

이렇게 만드세요

[발효]

[1차 발효]

- ① 밀가루(강력분)는 체에 내려 주십시오.
- ② 버터는 실온에 두어 부드럽게 해 두십시오.
- ③ 밀가루(강력분)를 볼에 넣고, 탈지분유, 설탕, 이스트 순서로 넣어 주십시오.
- ④ 버터와 물을 넣고, 반죽해 주십시오.
반죽을 늘려서 접는 것을 반죽해서 잘 반죽하십시오.
(반죽 표면이 매끄럽고, 끊어지지 않으며, 얇게 늘릴 수 있게 되면 완료합니다.)
- ⑤ 반죽을 등골에 말아서 내솥 중앙에 넣어 주십시오.
- ⑥ 뚜껑을 잠그고, **메뉴선택** 버튼을 눌러 **행발효**를 선택한 후, 발효시간을 40분으로 설정한 뒤 **입력확인** 버튼을 눌러 주십시오.

[2차 발효]

- ① 1차 발효가 완료 후, 뚜껑을 열어 반죽이 2차 발효 전 대비 1.5~2배 정도 팽창되어 있는지 확인해 주십시오.
- ② 반죽을 다시 등골에 말아 내솥 중앙에 넣어 주십시오.
- ③ 뚜껑을 잠그고, **메뉴선택** 버튼을 눌러 **행발효**를 선택한 후, 발효시간을 40분으로 설정한 뒤 **입력확인** 버튼을 눌러 2차 발효를 해주십시오.

[굽기]

- ① 2차 발효가 완료된 후, 뚜껑을 열어 반죽이 2차 발효 전 대비 1.5~2배 정도 팽창되어 있는지 확인해 주십시오.
- ② 뚜껑을 잠그고, **메뉴선택** 버튼을 눌러 **행굽기**를 선택해 주십시오.
- ③ 굽기 시간을 40분으로 설정한 뒤 **입력확인** 버튼을 눌러 주십시오.
- ④ 빵굽기가 완료되면 꺼내서 식혀주십시오.



예약 취사는 이렇게 하십시오

예약 취사하는 방법

현재 시각이 오후 9시이고 다음날 오전 7시 40분에 식사를 하고 싶을 경우

1 현재 시각이 맞는지 확인합니다.

- ▶ 현재 시각을 맞추는 방법은 52쪽을 참조하십시오.
- ▶ 현재 시각이 맞지 않을 경우 예약취사 시각이 맞지 않으므로 현재 시각으로 정확히 맞추십시오.
- ▶ 오전 오후가 바뀌지 않도록 주의합니다.



2 뚜껑 결합 손잡이를 “음”(잠김)방향으로 돌려 잠김표시가 나타나면 예약/자동세척 버튼을 누릅니다.


- ▶ 메뉴/선택, 보온/재가열 버튼이 점멸하고 예약/자동세척, 확인, 취소, 압력취사 버튼이 켜집니다.
- ▶ 예약 시각은 제품 출하시 오전 6시 30분에 맞추어져 있으므로 이 시각에 예약 취사를 원하시는 분은 예약시간 설정을 하지 않아도 됩니다.
- ▶ 뚜껑 결합 손잡이를 “음”(잠김)방향으로 돌리지 않고 예약/자동세척 버튼을 누르면 예약이 되지 않습니다.
- ▶ 예약/자동세척 버튼을 누르면 그림과 같이 기존에 설정되어 있는 예약 시각 표시가 나타나고, 예약표시가 깜박거립니다.
- ▶ 한미발이 메뉴의 경우, 예약취사가 설정 되지 않습니다. 예약을 원하실 경우, 한미 메뉴로 설정 후, 예약해 주십시오.



※보온 중일 때 예약 취사를 설정하실 경우 취소 버튼을 눌러 보온을 취소한 후 예약 시간을 설정에 주십시오.

3 메뉴/선택 버튼을 눌러 원하는 메뉴를 선택합니다.

- ▶ 확인 버튼이 점멸하고 보온/재가열, 메뉴/선택 취소, 압력취사 버튼이 켜집니다.

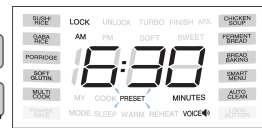

4 확인 버튼을 누른 후 메뉴/선택 버튼을 눌러 예약시간을 설정합니다.

- ▶ 메뉴/선택 버튼이 점멸하고 보온/재가열, 예약/자동세척, 확인, 취소, 압력취사 버튼이 켜집니다.
- ▶ D 버튼을 누를 때마다 10분 단위로 증가합니다.
- ▶ < 버튼을 누를 때마다 10분 단위로 감소합니다.

계속 누르고 있으면 연속으로 변합니다. (한미기능)

※ 오전오후가 바뀌지 않도록 주의하십시오.



5 압력취사 버튼을 누릅니다.

- ▶ 압력취사 버튼이 점멸하고, 보온/재가열, 예약/자동세척, 메뉴/선택, 확인, 취소 버튼이 켜집니다.
- ▶ “백이 맞았는 취사가 예약되었습니다. 내일00, 00시 00분에 예약취사가 완료됩니다.” 하는 음성이나옵니다.
- ▶ 예약 설정된 시각에 예약 취사가 완료됩니다. (취사량 및 사용조건에 따라 완료시간이 다소 차이가 날 수도 있습니다.)
- ▶ 한 번 설정되어 취사가 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞추실 필요없이 예약/자동세척 버튼만 누르면 됩니다.

※ 예약 취사 시간은 메뉴별 최대2분 기준으로 설정되어 있으므로 소량 취사시 예약시간 보다 일찍 취사가완료될 수 있습니다.





예약 취사는 이렇게 하십시오

예약 취사시 유의사항

1 예약 취사를 할 경우

- ▶ 쌀이 개봉된 지 오래되어 매우 말라버린 경우에는 증압이 되는 수도 있습니다.
- ▶ 예약취사 설정시간 또는 주변 환경조건에 따라서 밥이 되거나 질어질 수 있으므로 내솥표시의 물(水)높이 기준에서 가감하여 물량을 조절해 주십시오.
- ▶ 예약 취사 용량이 많거나 장시간 예약취사를 설정하실 경우 멜라노이징(미세 밥 나눔)현상이 증가할 수 있습니다.
- ▶ 세척기는 침전된 진분이 많으므로 예약 취사 시 나눔이 발생할 수 있습니다. 세척미를 흐르는 물에 행궤 취사하시거나, 취사 용량을 적게 해주시면 나눔 정도가 감소합니다.

2 예약 시각 변경

- ▶ 예약시각을 변경할 경우는 취소 버튼을 2초 이상 눌러 취소시킨 후 다시 시작하십시오.

3 예약 설정 가능 시간을 벗어난 경우

- ▶ 설정 시간이 예약 설정 가능 시간보다 짧았을 경우 즉시 취사를 시작합니다.

4 설정시간이 13시간을 초과할 경우

- ▶ “13Ho”가 표시되고 예약 시간은 자동적으로 13시간으로 변경됩니다.
예) 오후 5시에 내일 오전 7시 취사 원료를 예약하면 (설정시간 14시간이 됨) “13Ho”가 표시되고 예약 시각이 오전 6시로 자동 변경됩니다. (설정시간 13시간)
- ※ 예약시간이 13시간을 초과할 경우 냄새 및 변색의 원인이 되고, 여름철에는 쌀이 쉬기 때문에 13시간 이하로 예약설정 가능시간을 설정하였습니다.
- ※ 낮 12시에 예약취사 원료를 원하실 경우 오후 1200로 설정해 주십시오.
- ※ 예약취사 기능은 현재시각 기준 1시간 후에서 13시간 이내로 취사원료를 원하실때 사용해 주십시오.
- ※ 예약취사 진행중에 현재 시각을 확인하려면 확인 버튼을 누르면 현재 시각이 약 2초간 나타납니다.

메뉴별 예약 취사시간

메뉴 구분	백 미	백미 고회력	잡곡	잡곡 고회력	김밥	SOFT백미	현미	현미 고회력	영양밥	영양밥 고회력	삼계탕	영양죽	말미역	방울호박냉국	자른채식
취사량	100g+ 약 100g ~13시간	100g+ 약 100g ~13시간	100g+ 약 100g ~13시간	100g+ 약 100g ~13시간	500g ~13시간	600g ~13시간	100g+ 약 100g ~13시간	100g+ 약 100g ~13시간	300g ~13시간	400g ~13시간	700g ~13시간	700g ~13시간	120g +50g ~13시간	120g +50g ~13시간	200g ~13시간



예약 재가열은 이렇게 하십시오

예약 재가열 사용 방법

- ▶ 보온을 하지 않고 밥술에 보관중인 밥을 원하시는 시각에 따뜻하게 드시고 싶을 때, 설정하십시오.
- ▶ 예약 재가열은 3시간동안 진행되므로 밥을 드시고자 하는 시각에서 최소 3시간 전 예약 재가열을 하십시오.

현재 시각이 오후 9시이고 다음날 오전 7시 40분에 따뜻한 식사를 하고 싶을 경우

1 현재 시각이 맞는지 확인합니다.

- ▶ 현재 시각을 맞추는 방법은 ②쪽을 참조하십시오.
- ▶ 현재 시각을 맞지 않을 경우 예약 재가열 완료 시각이 맞지 않으므로 현재 시각으로 정확히 맞춥니다.
- ▶ 오전, 오후가 바뀌지 않도록 주의합니다.



2 뚜껑 결합 손잡이를 “⓪” (잠김)방향으로 돌려 잠김표시가 나타나면 예약/자동세척 버튼을 누릅니다.

- ▶ “예약, 선택 버튼으로 예약메뉴를 선택한 후 확인 버튼을 눌러주세요.” 하는 음성이 나옵니다.
- ▶ 메뉴/선택, 보온/재가열 버튼이 점멸하고 예약/자동세척, 확인, 취소, 압력력사 버튼이 켜집니다.
- ▶ 뚜껑 결합 손잡이를 “⓪” (잠김)방향으로 돌리지 않고 예약/자동세척 버튼을 누르면 예약이 되지 않습니다.



3 보온 버튼을 누르면 예약 재가열 설정 모드로 진입합니다.

- ▶ “예약 재가열, 선택 버튼으로 재가열 완료 시각을 맞춘 후 보온 버튼을 눌러주세요.” 하는 음성이 나옵니다.
- ▶ 메뉴/선택 버튼이 점멸하고 보온/재가열, 확인, 취소 버튼이 켜집니다.
- ▶ 예약 시각은 제품 출하시 오전 6시 30분에 맞추어져 있으므로 이 시각에 예약 재가열을 원하시는 예약시간 설정을 하지 않아도 됩니다.



4 메뉴/선택 버튼을 눌러 예약 재가열 완료 시각을 설정합니다.

- ▶ 보온/재가열 버튼이 점멸하고 메뉴/선택, 확인, 취소 버튼이 켜집니다.
- ▶ D 버튼을 누를 때마다 10분 단위로 증가합니다.
- ▶ Q 버튼을 누를 때마다 10분 단위로 감소합니다.
- ▶ 계속 누르고 있으면 연속으로 변합니다.(반복기능)
- ※ 오전/오후가 바뀌지 않도록 주의하십시오.



5 확인 버튼을 누릅니다.

- ▶ “보온 버튼을 눌러주세요.” 하는 음성이 나옵니다.
- ▶ 보온/재가열 버튼이 점멸하고 메뉴/선택, 확인, 취소 버튼이 켜집니다.



6 보온/재가열 버튼을 누릅니다.

- ▶ “따끈따끈한 재가열이 예약되었습니다. 오늘/내일 00, 00시00분에 예약 재가열이 완료 됩니다.” 하는 음성이 나옵니다.
- ▶ 예약 재가열 설정 시각에 예약 재가열이 완료됩니다.
- ▶ 한번 설정되어 재가열이 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞추 필요없이 보온/재가열 버튼만 누르면 됩니다.





예약 재가열은 이렇게 하십시오

예약 재가열시 유의 사항

1 예약 재가열을 할 경우

- ▶ 취사가 완료된 후 상온에서 장시간 보관된 밥은 수분이 증발되어 예약 재가열을 하실 경우 밥이 마르거나 멜라노이징미세 밥 늘음 현상이 발생할 수 있습니다.
- ▶ 밥양이 많은 경우 밥이 먹기 좋은 따끈따끈한 온도까지 충분히 데워지지 않을 수 있으니 예약 재가열 설정시 밥양은 5인분(내술의 절반 가량) 이내를 권장합니다.
- ▶ 냉장 또는 냉동 보관된 밥의 경우 보관 상태에 따라 예약 재가열 완료 후 밥이 덜 데워지거나 밥 마름 및 멜라노이징미세 밥 늘음 현상이 증가할 수 있습니다.
- ▶ 냉장 보관된 밥 사용시에는 내술에 옮겨 담은 후 주걱을 사용하여 골고루 저어 뭉쳐진 밥을 잘 펼친 후 예약 재가열 하시기 바랍니다.
- ▶ 냉동 보관된 밥은 반드시 해동 후 예약 재가열 하시기 바랍니다.

2 예약 시간 변경

- ▶ 예약 시간을 변경할 경우는 취소 버튼을 2초 이상 눌러 취소시킨 후 다시 시작하십시오.

3 예약 설정 가능 시간을 벗어난 경우

- ▶ 설정 시간이 예약 설정 가능 시간(3시간)보다 짧았을 경우 즉시 예약 재가열을 시작합니다.

4 설정시간이 13시간을 초과할 경우

- ▶ ' 13Mo '가 표시되고 예약 시간을 자동적으로 13시간으로 변경됩니다.
예) 오늘 오후 5시에 내일 오전 7시 예약 재가열 완료를 예약하면(설정시간 14시간이 됨)
' 13Mo '가 표시되고 예약 시간이 내일 오전 6시로 자동 변경됩니다.(설정시간 13시간)

- ※ 예약 재가열 시간이 13시간을 초과할 경우 냄새 및 변색의 원인이 되고, 여름철에는 쌀이 쉬기 때문에 13시간 이하로 예약설정 가능시간을 설정합니다.
- ※ 낮 12시에 예약 재가열 완료를 원하시는 경우 오후 12:00로 설정해 주십시오.
- ※ 예약 재가열 기능은 현재시간 기준 3시간 후에서 13시간 이내로 재가열 완료를 원하실 때 사용해 주십시오.
- ※ 예약 재가열 진행중에 현재 시간을 확인하려면 확인 버튼을 누르면 현재 시간이 약2초간 나타납니다.



식사할 때

- ▶ 보온 중 식사를 하실 때 따끈따끈한 밥을 원하시면, 보온/재가열 버튼을 누르면 "따끈따끈한 보온/재가열을 시작합니다."하는 음성과 함께 보온재가열이 시작되고 9분 후 밥을 드시면 금방 지은 밥처럼 따끈따끈한 밥을 드실 수 있습니다.
- ▶ 전원을 인가 후 대기상태에서 재가열을 사용하실 경우에는 뚜껑 결합 손잡이를 "△"(잠김)위치로 돌린후 보온/재가열 버튼을 눌러 보온으로 전환되면 보온/재가열 버튼을 1회 더 눌러 주십시오.

〈보온중〉



표시부의 '34'는 보온경과 시간이 3시간임을 의미합니다.

〈재가열 중〉



표시부의 '0' 표시가 빙글빙글 돌아가고 남은시간을 표시하여 재가열을 합니다.

〈재가열 완료〉



재가열이 끝나면 "보온재가열이 완료되었습니다. 밥을 잘 지어 주세요."하는 음성과 완료효과음(쿠~쿠~)이 나온 후 다시 보온을 진행하여 보온경과 시간을 표시합니다.

※ 보온 중일 때 현재시간을 변경할 경우에는 52쪽을 참조하여 주십시오.

- ▶ 재가열 기능을 너무 자주 사용하시면 밥이 변색되거나 마르는 경우가 있습니다. 1일 1~2회만 사용하세요.
- ▶ 별도의 전열기구나 가스불로 밥을 지은 경우는 밥을 밥솥에 담은 후 보온/재가열 버튼을 1회 눌러 보온을 합니다. 이때, 표시부에는 "OK"가 표시됩니다. 1회와 같이 차가운 밥솥에 뜨거운 밥을 옮겨 담아 보온할 경우 냄새가 변색이 있을 수 있습니다.)
- ▶ 보온 24시간 경과 이후부터 보온 경과시간을 감쪽이게 표시하여 보온이 장시간 경과 되었음을 알립니다.
- ▶ 보온중 뚜껑 결합 손잡이가 "△"(열림) 상태시 재가열이 진행되지 않습니다. 뚜껑 결합 손잡이를 "△"(잠김)위치로 돌린후, 보온/재가열 버튼을 눌러주십시오.
- ▶ 재가열 진행중 뚜껑 결합 손잡이를 "△"(열림)으로 돌릴경우, 표시부에 "E01"가 표시됩니다. 이때 보온재가열이 취소되고 보온이 진행됩니다.

보온할 때 주의사항

취사 직후나 보온 중 뚜껑을 열 때 압력에 의해 뚜껑이 잘 안열리는 경우가 있습니다. 뚜껑을 열 때는 압력추를 맞춰 압력이 완전히 제거된 다음 열어 주십시오.

보온 또는 재가열시 반드시 뚜껑 결합 손잡이를 "△"(잠김)방향으로 돌려주십시오. (뚜껑 열림 버튼 파손 및 보온 성능에 영향을 줍니다.)

취사 완료 후 밥을 밀면까지 골고루 섞어 보온하면 밥상태가 좋습니다. (적은 밥은 내솥의 중앙에 불룩하게 모아서 보온하십시오.)

보온 중 내솥에 밥이 없거나 사용되지 않을 경우에는 취소 버튼을 눌러 보온을 취소하거나, 전원플러그를 콘센트에서 뽑아 주십시오.

주걱을 내솥에 넣어 둔 채로 보온하지 마십시오. 특히, 나무주걱 등은 세균을 발생시켜 냄새의 원인이 됩니다.

장시간 보온하면 밥이 변색되고 냄새가 날 수 있으므로 보온은 12시간 이내로 하는 것이 좋습니다. 특히, 압력밥은 특성상 일반 밥솥의 밥보다 변색이 빨리 됩니다. 보온 24시간 경과 이후부터 보온 경과시간을 감쪽이게 표시합니다.

잡곡, 현미는 백미보다 보온 상태가 좋지 않으므로 기급적 보온은 피하십시오.

보온 중 내솥의 가장자리나 중기 배출구 하단부는 부분적으로 밥이 하얗게 변하고 부풀어 오를 수도 있습니다. 이럴 경우는 밥을 자아서 섞어 주십시오.

너무 적은 밥을 보온하거나 마다 남은 밥이나 찬밥을 보온 중인 밥과 섞어서 보온하지 마십시오. 밥에서 냄새가 날 수 있습니다. (찬밥은 전자레인지로 이용하십시오.)



밥을 맛있게 보온하려면

보온온도 조정방법

청소를 자주하고 물을 끓여 소독을 하였는데도 냄새가 나고 물이 맷허거나 색깔이 변하는 경우는 보온 온도가 맞지 않은 경우이므로 보온 온도를 조정합니다.

보온 온도를 조정하고자 하실 때는 고객센터로 문의 하시면 상세히 안내해 드리겠습니다.



- 1 보온 중 모드 버튼을 1회 누르면 대기 상태에서 모드 버튼을 3회 누릅니다. 표시부가 '보온온도 설정모드'입니다. 선택 버튼으로 보온온도를 조절한 후 확인 버튼을 눌러주세요. 하는 음성과 함께 그림과 같이 표시됩니다. 이때 74 는 현재 보온 온도를 나타냅니다. [모드 버튼을 초기에 누를시 1초 이상 눌러야 진입 가능합니다.]

▶ 메뉴/선택 버튼이 점멸하고 확인, 취소, 모드 버튼이 켜집니다.
[보온 중 온도 버튼을 6회 누르면 보온온도 설정 모드 진입시, 온도 버튼은 꺼집니다.]

온도를 올릴 때



온도를 내릴 때



- 2-1 메뉴/선택 버튼을 눌러 표시부가 74 → 75 → 76 → 77 → 78 → 79 → 80 과 같이 변화하도록 합니다.
▶ 확인 버튼이 점멸하고, 메뉴/선택 모드, 취소 버튼이 켜집니다.
▶ 계속 누르고 있으면 연속으로 변화합니다.
- 3 원하는 온도를 설정한 후 확인 버튼을 누르면 설정된 온도가 '보온온도 설정이 완료되었습니다.' 하는 음성과 함께 자동으로 입력됩니다. [취소 버튼을 누르거나 입력없이 7초가 경과하면 기능이 취소되고 대기상태로 돌아갑니다.]
- 2-2 메뉴/선택 버튼을 눌러 표시부가 74 → 73 → 72 → 71 → 70 → 69 와 같이 변화하도록 합니다.
▶ 확인 버튼이 점멸하고, 메뉴/선택 모드, 취소 버튼이 켜집니다.
▶ 계속 누르고 있으면 연속으로 변화합니다.

※ 제품 출고 시 설정된 기준온도는 설명서와 다를 수 있습니다.

온도조정치

1. 쿨 냄새가 많이 나고 물이 많이 맷히는편이 식는경우 : 보온 온도가 낮은 경우입니다. 보온 온도를 1~2℃정도 높여 줍니다.
2. 밥 색깔이 심하게 누렇게 밥이 마르면서 냄새가 날 경우 : 보온 온도가 높은 경우입니다. 보온 온도를 1~2℃정도 낮춰 줍니다.

맛춤보온 기능 조정방법

보온 시 뚜껑을 열 때 물이 많이 흐를 경우나 밥 가장자리에 밥 퍼짐 현상이 생길 경우에 사용합니다.



- 1 대기상태에서 모드 버튼을 4회 누릅니다. 표시부가 '맛춤보온 설정모드'입니다. 선택 버튼으로 온도를 조절한 후 확인 버튼을 눌러주세요. 하는 음성과 함께 그림과 같이 표시되며 초기값을 나타냅니다. [모드 버튼을 초기에 누를시 1초 이상 눌러야 진입 가능합니다.]
▶ 메뉴/선택 버튼이 점멸하고 모드, 확인, 취소 버튼이 켜집니다.



- 2-1 메뉴/선택 버튼을 눌러 표시부가 그림과 같이 변화하도록 합니다. [음침]
▶ 확인 버튼이 점멸하고, 모드 메뉴/선택, 취소 버튼이 켜집니다.
▶ 계속 누르고있으면 연속으로 변화합니다.
- 3 원하는 값을 설정한 후 확인 버튼을 누르면 설정된 값이 '맛춤보온 설정이 완료되었습니다.' 하는 음성과 함께 자동으로 입력됩니다. [취소 버튼을 누르거나 입력없이 7초가 경과하면 기능이 취소되고 대기상태로 돌아갑니다.]
- 2-2 메뉴/선택 버튼을 눌러 표시부가 그림과 같이 변화하도록 합니다. [맛춤]
▶ 확인 버튼이 점멸하고, 모드 메뉴/선택, 취소 버튼이 켜집니다.
▶ 계속 누르고있으면 연속으로 변화합니다.

1. 뚜껑을 열때 물이 많이 흐를 경우 : 메뉴/선택 버튼을 눌러 설정모드를 높여 줍니다.
2. 밥 가장자리에 밥 퍼짐 현상이 생기는 경우 : 메뉴/선택 버튼을 눌러 설정모드를 낮춰 줍니다.



밥을 맛있게 보온하려면

취침보온 모드 설정방법

장시간 보온을 유지할 시 밥품질(변색, 마름, 냄새등)의 저하예방을 위해 취침시간(PM 10:00 ~ AM 04:00)동안 보온온도를 저온상태로 유지하는 기능으로 필요에 따라 설정해 주십시오.

▶ 설정방법



1. 대기상태에서 모드 버튼을 6회 누르면 취침보온 모드로 진입합니다.
모드 버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
2. 취침보온 설정모드로 들어왔을 때 "취침보온 설정모드입니다. 선택 버튼으로 취침 보온을 선택 또는 해제한 후 확인 버튼을 눌러 주세요"하는 음성이 나옵니다. 이때 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
3. 메뉴/선택 버튼을 누르면 "취침 보온이 선택되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오. 이때 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
4. 취침보온 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.

▶ 설정 상태에서 해제방법



1. 대기상태에서 모드 버튼을 6회 누르면 취침보온 모드로 진입합니다.
모드 버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
2. 취침보온 설정모드로 들어왔을 때 "취침보온 설정모드입니다. 선택 버튼으로 취침 보온을 선택 또는 해제한 후 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 이때 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
3. 메뉴/선택 버튼을 누르면 "취침 보온이 해제되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오. 이때 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
4. 취침보온 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.

- ▶ 본 기능을 설정시 취침시간 동안 보온온도가 저온상태로 유지되오니 취침시간에 보온이 필요하신 분은 설정하지 마십시오.
기온이 높은 여름철에는 밤이 상해서 변색되거나 냄새가 날 수 있습니다. 여름철에는 취침보온 모드 설정을 가급적 하지 마십시오.
- ▶ 본 기능은 제품 출하 시 해제 상태로 되어 있으니 필요에 따라 설정해 주십시오.

보온 시 냄새가 날 때

- ▶ 청소를 자주 해 주십시오. 특히 뚜껑부의 청소상태가 나쁘면 세균이 번식하여 보온시 냄새가 날 수 있습니다.
- ▶ 외관상 깨끗하더라도 곳곳에 세균이 서식하여 보온시 냄새를 발생시킬 수 있으므로 냄새가 많이 날 경우는 물을 내솜의 백미 눈금 2인분 정도에 맞추고 식초를 1큰술 넣은 후 뚜껑을 닫고 자동세척(자동살균세척)을 선택한 후, 압력취사 버튼을 눌러 주십시오. 완료 후 내솜을 반드시 깨끗이 씻어 냅니다. (57쪽 참조)
- ▶ 탕이나 찜 등의 요리를 한 후 깨끗이 씻어내지 않고 보온하면 냄새가 배어들 수 있습니다.



절전 기능 / 에너지아이 기능은 이렇게 하십시오

대기모드 절전기능이란

전원코드를 뽑지 않으면 동작하지 않는 대기상태와 할지라도 약간의 전력이 소모됩니다. 이를 대기전력이라고 하는데 이를 절감하기 위해 밥솥내부의 전기회로를 외부 전원으로부터 차단시켜 전력 소모를 최소화(와트 미만화) 하는 기술입니다.

수동 사용방법

▶ 절전 시작방법

대기 상태에서 취소 버튼을 3초간 누르고 있으면 "절전모드를 시작합니다"하는 음성과 함께 절전기능이 설정됩니다.



▶ 절전 종료방법

방법1) 아무 버튼이나 누르면 '절전모드가 종료되었습니다' 원하는 기능을 선택해 주세요 하는 음성과 함께 절전모드가 해제되고, 대기 상태로 돌아옵니다.

방법2) 두경 결합 손잡이를 열거나 닫으면 '절전모드가 종료되었습니다' 원하는 기능을 선택해 주세요 하는 음성과 함께 절전모드가 해제되고, 대기 상태로 돌아옵니다.



자동 절전기능 사용방법

「자동절전기능 설정모드」에서 대기시간을 '0'이 아닌 값으로 선택하면 대기상태에서 선택된 시간이 경과한 후 자동으로 절전 기능이 시작됩니다. (※ 제품출고시 설정된 값은 1분입니다.)

만약 대기시간이 경과되기 전 푸팅결합 손잡이를 돌리거나 버튼을 누르면 대기시간이 선택된 설정값부터 다시 감소합니다.

▶ 설정방법




1. 대기상태에서 모드 버튼을 7회 누르면 자동절전기능 모드로 진입합니다.
모드 버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
2. 자동절전기능 설정모드로 들어왔을 때 '자동절전기능 설정모드입니다' 선택 버튼으로 대기시간을 선택한 후 확인 버튼을 눌러주세요 하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
3. 메뉴/선택 버튼을 눌러 OFF를 선택하면 절전기능이 해제되어 자동 절전기능을 지원하지 않는 상태로 됩니다. 원하는 시간 설정 후 확인 버튼을 눌러 주십시오. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
4. 자동절전기능 설정모드 진입 후 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소되었습니다." 하는 음성과 함께 기능이 설정되지 않고 취소되어 대기모드로 돌아옵니다.

에너지아이 기능

보온, 예약 중 온도센서가 자동으로 주변의 밝기를 인식하여 밥솥의 에너지 소비를 최소화 하는 기능입니다. 현재 절전모드에 진입하는 밝기(2단계) 보다 더 어두운 곳에서 절전모드에 진입하기를 원하면 1단계를 설정하고, 더 밝은 곳에서 절전모드에 진입하기를 원하면 3단계를 설정하십시오. (제품 출고시 설정 값은 2입니다.)



(에너지아이 선택시)



(에너지아이 해제시)

1. 대기상태에서 모드 버튼을 12회 누르면 에너지아이 기능 설정 모드로 진입합니다.
(모드 버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.)
2. 에너지아이 기능 설정 모드로 들어왔을 때 "에너지아이 설정모드입니다" 선택 버튼으로 에너지아이 설정을 선택 또는 해제 한 후 확인 버튼을 눌러주세요 하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
3. 메뉴/선택 버튼을 누를 때마다 에너지아이 기능이 3단계 → 2단계 → 1단계 → 3단계로 선택되고 OFF가 표시되면 "에너지아이 기능이 해제되었습니다" 하는 음성이 나옵니다. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
4. 원하는 단계를 선택한 후, 확인 버튼을 누르면 "에너지아이 설정이 완료되었습니다" 하는 음성과 함께 저장됩니다.
5. 에너지아이 기능 설정 모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소되었습니다." 하는 음성과 함께 기능이 설정되지 않고 취소되어 대기상태로 돌아옵니다.




화면조명 절전기능 / 버튼 잠금기능 / 취사 잔여시간 표시기능은 이렇게 하십시오

화면조명 절전기능

대기, 취사, 보온, 예약 취사 중 화면의 밝기를 적절히 조절하는 기능입니다.
(화면조명 절전기능 On 상태에서 버튼 조명이 꺼지면 화면이 어두워집니다.)

- ▶ 기능 설정 및 해제 방법
(※ 제품고시 설명서 값은 On 입니다.)

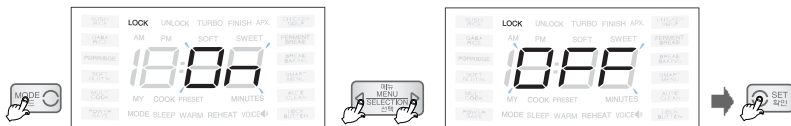


1. 대기상태에서 모드 버튼을 8회 누르면 화면조명 절전기능설정 모드로 진입합니다.
(모드 버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.)
2. 화면조명 절전기능설정모드로 들어왔을 때 "화면 조명 절전기능 설정모드입니다. 선택 버튼으로 화면 조명 절전기능을 선택 또는 해제한 후 확인 버튼을 눌러주세요." 하는 음성이 나옵니다. 이때 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
3. 메뉴/선택 버튼을 누를 때마다 화면조명 절전기능이 선택 또는 해제되고 "화면조명 절전기능이 선택되었습니다. 확인 버튼을 눌러주세요." 또는 "화면조명 절전기능이 해제되었습니다. 확인 버튼을 눌러주세요." 하는 음성이 나옵니다. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
4. 확인 버튼을 누르면 "화면조명 절전기능 설정이 완료되었습니다." 하는 음성과 함께 설정이 저장됩니다.
5. 화면조명 절전기능 설정 모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소되었습니다." 하는 음성과 함께 기능이 설정되지 않고 취소되어 대기상태로 돌아갑니다.

버튼 잠금기능


청소 시나 어린이 접촉에 의한 오동작을 방지하기 위해 버튼 잠금(LOCK)을 설정할 수 있는 기능입니다.

- ▶ 설정방법

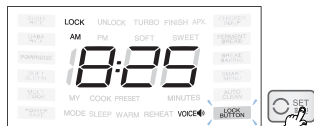

1. 취사, 예약, 보온, 재가열 중이나 대기상태에서 확인 버튼을 3초이상 누르면 버튼 잠금이 설정됩니다.
2. 버튼 잠금이 설정 되었을때 "버튼 잠금이 선택 되었습니다." 하는 음성이 나옵니다. 이때, 화면에 버튼 잠금 표시가 깜빡여집니다.

- ▶ 해제방법

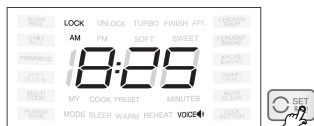

1. 취사, 예약, 보온, 재가열 중이나 대기상태에서 확인 버튼을 3초이상 누르면 버튼 잠금이 해제 됩니다.
2. 버튼 잠금이 해제 되었을때, "버튼 잠금이 해제 되었습니다." 하는 음성이 나옵니다. 이때, 화면에 버튼 잠금 표시가 사라집니다.

- ※ 버튼 잠금이 설정된 상태에서 확인 버튼을 제외한 다른 버튼을 누를 경우, 부저음이 발생합니다.
- ※ 확인 버튼을 3초이상 눌러 버튼 잠금을 해제한 후 원하시는 기능을 설정하실 수 있습니다.
- ※ 버튼 잠금이 설정된 상태에서 전원 OFF 후 재인가시 버튼 잠금기능이 해제 됩니다.


취사 잔여시간 표시 기능

취사 진행 중 주기적으로 나타나는 취사 잔여시간 표시를 선택 또는 해제 할 수 있습니다.
(취사 중 표시되는 잔여시간은 취사 용량 및 진행 상태에 따라 실제 취사 시간과 다를 수 있습니다.)

1. 대기상태에서 모드 버튼을 8회 누르면 취사 잔여시간 표시 모드로 진입합니다.
(모드 버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.)
2. 취사 잔여시간 설정모드로 들어왔을 때 "취사 잔여시간 표시 설정모드입니다. 선택 버튼으로 취사 잔여시간 표시 모드를 선택 또는 해제 한 후 확인 버튼을 눌러주세요." 하는 음성이 나옵니다.
3. 메뉴/선택 버튼을 누를 때마다 취사 잔여 시간 표시기능이 선택 또는 해제되고, "취사 잔여시간 표시 모드가 선택되었습니다. 확인 버튼을 눌러주세요." 또는 "취사 잔여시간 표시 모드가 해제되었습니다. 확인 버튼을 눌러주세요." 하는 음성이 나옵니다. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다. 원하시는 모드를 선택한 후, 확인 버튼을 눌러주세요.
4. 취사 잔여시간 표시 설정 모드 진입 후, 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소 되었습니다." 하는 음성과 함께 기능이 설정되지 않고, 취소되면 대기상태로 돌아갑니다.



※ 취사 잔여시간 표시 기능 선택시
[초기값 설정 상태로 되어 있습니다.]

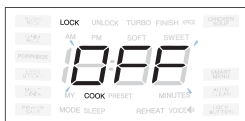

※ 취사 잔여시간 표시 기능 해제시



NFC 사용방법

앱 설치 및 실행

스마트폰의 안드로이드 Play 스토어에서 쿠쿠스마트 밥솥 앱을 다운받아 설치하시면 제품과 스마트폰 간의 기능을 수행할 수 있습니다.

▶ 스마트폰 NFC기능 설정 안내

1. NFC 기능을 사용 할 수 있는 스마트 폰인지 스마트폰의 사용설명서를 참조하여 확인해 주십시오.
2. 스마트폰의 NFC기능은 안드로이드 OS 버전 23.3 이상에서만 지원합니다.
3. NFC기능을 처음 사용하는 고객께서는 아래의 스마트폰NFC기능 설정 방법을 참고하여 설정하기 바랍니다.

▶ 앱 설치 방법

방법 1. 스마트폰을 밥솥NFC에 터치시 구글 스토어 페이지로 이동하여 앱 설치

방법 2. 구글 스토어에서 "쿠쿠" 검색 후 어플 다운받아 설치


NFC기능 설정 방법 (갤럭시S3 기준)

스마트폰 모델에 따라 설정 방법이 약간씩 다를 수 있으니 스마트폰의 사용설명서를 참고해주시요.


① 환경설정



② 무선 및 네트워크에서 추가 설정

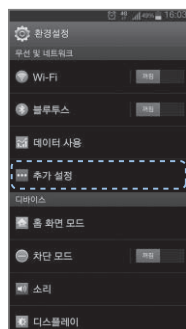

③ NFC 기능 ON

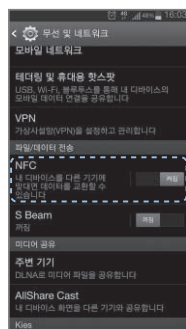

④ 읽기쓰기(P2P)와 Android Beam 모두 ON



올바른 터치 방법




1. 아래 그림과 같이 스마트폰을 바르게 잡고 스마트폰의 안테나를 밥솥의 NFC마크에 2~3초간 터치하여 주십시오.
2. NFC 기능은 스마트폰의 화면에 아래와 같은 그림이 나타날때에만 동작합니다. (스마트 폰의 보호 케이스나 커버 때문에 밥솥과 스마트폰의 거리가 멀어지거나 사이에 장애물이 있을 경우 통신이 잘 되지 않을 수 있습니다)
3. 스마트폰의 화면이 꺼져있거나, 잠금상태일 경우, NFC 기능이 동작하지 않습니다.
4. 스마트폰의 NFC 안테나의 밥솥의 NFC 마크가 잘 맞은 경우에는 NFC 통신이 정상적으로 이루어집니다.
5. NFC통신이 정상적으로 완료되면 해당동작을 완료하였다는 메시지가 옵니다.
6. 스마트폰에 따라 스마트폰의 NFC안테나의 위치가 다릅니다. 스마트폰 사용설명서를 참조하여 NFC안테나의 정확한 위치를 확인해 주십시오.
7. 스마트폰 기종에 따라 NFC통신속도가 다를 수 있습니다.



최초 앱 실행 후 밥솥 모델 선택방법

① 앱을 실행합니다.

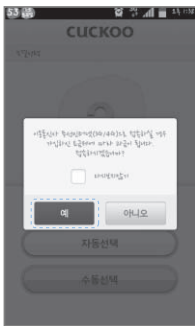


② 원하시는 선택방법을 선택합니다.



③-1 자동 선택시



③-2 수동 선택시

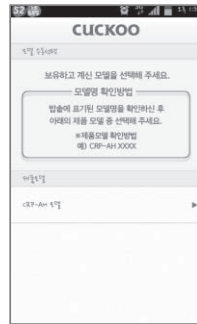


④ 앱이 실행됩니다.



자동요리하기

제품과 스마트 폰 간의 요리기능을 수행 할 수 있습니다.

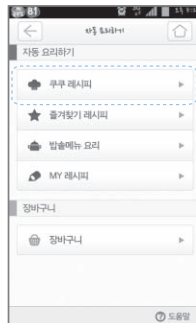

① 쿠키레시피

밥솥에는 없는 새로운 레시피를 스마트폰의 NFC기능을 통해 밥솥의 '스마트 메뉴'로 전송 후 바로 요리 또는 예약할 수 있습니다. 밥솥으로 전송된 쿠키레시피는 밥솥의 '스마트메뉴'에 기억됩니다.
(최초 밥솥을 실행시 스마트 메뉴에는 검은콩밥이 기억되어 있습니다)

② 즐겨찾기 레시피

쿠키 레시피에서 즐겨찾기 버튼을 클릭하면 즐겨찾기 레시피로 등록됩니다.

③ 밥솥메뉴

밥솥에 있는 다양한 메뉴와 설정값을 스마트폰을 이용해 쉽게 설정하고 NFC기능을 통해 편리하게 요리할 수 있습니다.

④ My레시피

밥솥의 메뉴와 설정값을 이용하여 개발한 나만의 레시피를 스마트폰에 등록해 두었다가 등록된 요리를 선택하여 밥솥에 터치하는만으로 간편히 요리 할 수 있습니다.

⑤ 장바구니

쿠키레시피의 장바구니 옆기에 저장된 요리 재료 목록을 보관하고 있습니다.



NFC 사용방법


레시피 선택 방법

방법 1. 요리명 검색

① 검색란을 선택



② 요리명을 입력 후 검색

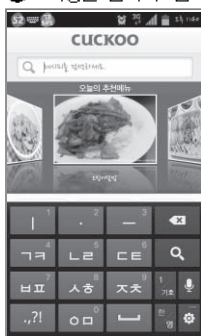

③ 검색 요리 확인



방법 2. 요리 종류별 검색

① 자동요리하기 선택




② 쿠쿠레시피 선택



③ 요리종류별 선택



④ 찜요리 선택

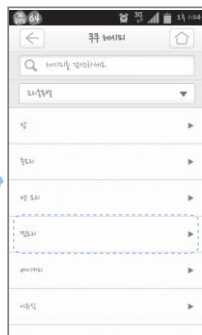

⑤ 약밤 선택





레시피 선택 방법

방법 3. 상황별 검색

① 자동요리하기 선택




② 쿠키레시피 선택



③ 특별한 날 선택



④ 어르신 대접 선택

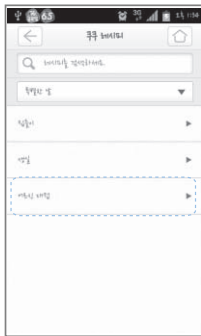

⑤ 떡볶이 선택



레시피 선택 후 요리하기 (동작 예옴으로 떡볶이 요리하기)

1. 떡볶이 선택



2. 레시피 확인 및 요리재료 준비



3. 요리순서 STEP에 따라 재료 손질하기



4. 소개탭의 요리 시작버튼 선택



5. 스마트폰과 제품 접촉하기



6. 요리시작





NFC 사용방법

블로거요리 보기

블로거요리를 보거나 레시피를 직접 등록할 수 있습니다.



① 요리보기

다른 회원들 또는 내가 등록한 레시피를 볼 수 있습니다.

② 요리 등록하기

내가 직접 요리한 레시피를 등록하여 다른 회원들과 공유 할 수 있습니다.



쿠쿠 홈페이지의 아이디로 로그인하십시오.
아이디가 없을 경우,
웹사이트에서 회원가입 후,
로그인 하십시오.

밥솥 설정하기

밥솥에 있는 다양한 기능 설정값을 스마트폰의 NFC기능을 통해 편리하게 설정할 수 있습니다.
시계설정, 언어&음성볼륨 설정, 맞춤밥맛&보온 설정, 절전기능 설정으로 구성되어 있습니다.



① 시계 설정

제품의 시간을 쉽게 설정 할 수 있습니다.

② 언어&음성볼륨 설정

한국어, 영어, 중국어 중 원하시는 음성을 선택 또는 음성볼륨을 조절할 수 있습니다.

③ 맞춤밥맛&보온설정

원하시는 밥맛을 선택하거나, 보온 품질 및 온도를 설정 할 수 있습니다.

④ 절전기능 설정

대기시 전력소모를 최소화 할 수 있습니다.



고장 점검하기

자가진단, 사전점검하기, AS 연락하기 등으로 구성되어 있습니다.



- ① 자가진단하기
스마트폰의 NFC기능을 통해 이상 발생시 밥솥의 현재 상태를 진단 후 이상 원인을 확인할 수 있습니다.
- ② 사전점검하기
밥솥 이상 발생시 A/S연락전에 이상의 원인을 확인할 수 있습니다.
- ③ A/S 연락하기
가까운 AS센터 및 지역별 AS센터를 검색 후 연락할 수 있습니다.

부가 기능


타이머, 식단관리로 구성되어 있습니다.



- ① 타이머
요리중 요리시간 측정이 필요할때 편리하게 사용 할 수 있습니다.
- ② 식단관리
날짜 별 기간 별로 스마트폰의 NFC기능을 통해 요리한 횟수 및 요리별 칼로리 정보를 알 수 있습니다.

밥솥정보

모델변경 및 소모품 정보를 확인할 수 있습니다.

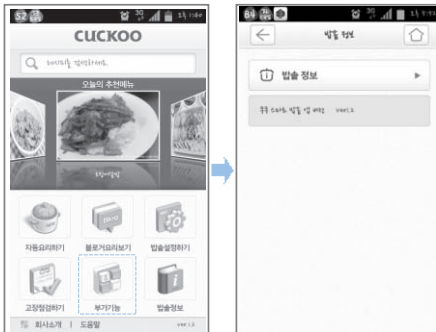

- ① 밥솥정보
모델명 변경 및 소모품 정보 관리로 제품을 더 오래 사용할 수 있습니다.

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증상	확인사항	조치사항
뚜껑 결합 손잡이가 "ㄴ"형(열림) 방향으로 움직이지 않을 때	<ul style="list-style-type: none"> • 취사 또는 요리중에 뚜껑 결합 손잡이를 돌리지 않았습니까? • 증기가 완전히 배출되지 않은 상태에서 뚜껑 결합 손잡이를 돌리지 않았습니까? 	<ul style="list-style-type: none"> • 취사 또는 요리중에는 뚜껑이 열리지 않습니다. 뚜껑을 강제로 열지 마십시오. • 부족한 경우는 취소 버튼을 2초간 눌러 취사시킨 다음 압력추를 젖혀 증기를 완전히 빼낸 후 열어 주십시오. • 압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오.
뚜껑 결합 손잡이가 "ㄴ"형(열림) 방향으로 완전히 돌아갔는데도 뚜껑이 열리지 않을 경우		<ul style="list-style-type: none"> • 압력 때문입니다. • 압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오.
뚜껑 시미로 증기가 누설되거나 "삐"하는 휘파람 소리가 날 때	<ul style="list-style-type: none"> • 패킹에 이물 질밥알 등이 묻어있지 않습니까? • 패킹이 낡지 않았습니까? 	<ul style="list-style-type: none"> • 패킹을 행구나 부드러운 천으로 깨끗이 닦은 후 사용하십시오. • 패킹 주변은 항상 깨끗이 유지시켜 주십시오. • 증기가 누설되면 곧바로 취소 버튼을 2초간 눌러 증기를 빼낸 후 전원플러그를 뽑아 사용을 중지하고 서비스센터로 문의하십시오. • 패킹은 사용 방법 및 횟수에 따라 1년~3년 정도 사용 후 교환하여 주십시오. 낡은 패킹을 계속하여 사용시 증기가 누설되어 압력 취사가 되지 않을 수 있습니다.
취사 또는 요리중 취소 버튼이 눌러지지 않을 때	<ul style="list-style-type: none"> • 내솥의 내부가 뜨겁지 않습니까? • 버튼짐금이 설정되어 있지 않습니까? 	<ul style="list-style-type: none"> • 취사 또는 요리 중 부족이하게 취소할 경우, 내솥 내부 온도가 높으면 안전을 위해 취소 버튼을 2초간 눌러야 취사 또는 요리가 취소됩니다. • 취사 또는 요리가 취소되면 자동증기배출장치로 증기가 배출되면서 내용물이 비산할 수 있으므로 얼굴과 손 등에 화상을 입을 수 있으니 주의하십시오. • 확인 버튼을 3초이상 눌러 버튼짐금 기능을 해제하여 주십시오.
취사나 보온시 이상한 소음이 날 때	<ul style="list-style-type: none"> • 취사시 바람부는 소리(풍)가 나지 않습니까? • 취사 및 보온중 "찌" 하는 소리가 납니까? 	<ul style="list-style-type: none"> • 내부 부품의 열을 식혀주기 위해 송풍모터가 돌아가는 소리입니다. 정상입니다. • 취사 및 보온중 "찌" 하는 소리는 IH 압력밥솥이 동작 될 때 나는 소리입니다. 정상입니다.
현미가 제대로 발아되지 않을때	<ul style="list-style-type: none"> • 정격용량 이상의 현미를 넣고 발아시키지 않았습니까? • 묵은 현미를 사용하지 않았습니까? 	<ul style="list-style-type: none"> • 정격용량의 현미를 넣어주십시오. • 묵은 현미나 오염된 현미를 사용했을 때 발아율이 떨어질 수 있습니다. (60쪽 현미 구입방법 참조)

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증상	확인사항	조치사항
버튼 입력시 "LJ" 표시가 나타날 때	<ul style="list-style-type: none"> 내술이 제품에 들어 있습니까? ZZDV용(전원)에 사용하지 않았습니까? 	<ul style="list-style-type: none"> 내술이 들어 있지 않은 상태에서는 버튼조작이 되지 않습니다. 내술을 넣어 주십시오. 본 제품은 12DV전용 제품입니다. 전원을 바르게 사용하십시오.
압력취사, 예약/자동세척 등의 버튼이 작동되지 않고 "E01" 표시가 나타날 때	<ul style="list-style-type: none"> 뚜껑 결합 손잡이를 "△"(잠금) 방향으로 돌려놓습니까? 잠금 표시가 나타나 있습니까? 	<ul style="list-style-type: none"> 뚜껑 결합손잡이를 완전히 "△"(잠금) 방향으로 돌립니다. 뚜껑 결합 손잡이가 완전히 체결되지 않으면 압력취사, 예약/자동세척 버튼이 작동되지 않습니다.
밥이 심하게 눌을 때	<ul style="list-style-type: none"> 온도감지기, 내술 외면에 밥알이 심하게 눌어 붙어 있거나 이물질이 있지는 있습니까? "쿠쿠 맞춤밥맛" 또는 "맞춤 취사" 기능을 설정하지 않았습니까? 	<ul style="list-style-type: none"> 온도감지기, 내술외면의 이물질을 제거해 주십시오. (4쪽 참조) 필요에 따라 맞춤밥맛 또는 맞춤취사 기능을 해제 또는 설정한 후 취사하여 주십시오. (58~59쪽 참조)
장시간동안 취사가 완료되지 않고 "E03" 표시가 나타날 때	<ul style="list-style-type: none"> ZZDV용(전원)에 사용하지 않았습니까? 	<ul style="list-style-type: none"> 제품에 이상이 생겨(히터단전, 열량 부족 등) 장시간 밥이 완료되지 않을 때 나타나는 표시입니다. 전원을 차단후 서비스센터로 문의하십시오. 물만 넣고 가열할 경우에 "E03" 표시가 나타나는 것은 정상입니다. 본 제품은 12DV 전용 제품입니다. 전원을 바르게 사용하십시오.
예약 취사 시각이 맞지 않을 때	<ul style="list-style-type: none"> 현재 시각이 맞습니까? 오전 오후를 잘못 선택하지 않았습니까? 예약시간을 13시간 이상으로 선택하지 않았습니까? 	<ul style="list-style-type: none"> 현재시각을 맞추지 않으면 예약시각에 취사가 완료되지 않습니다. 현재시각을 맞추십시오. (52쪽 참조) 오전 오후를 확인하십시오. 최대 예약시간은 13시간입니다. (85~86쪽 참조)
취사 직후나 보온 중 밥에서 이상한 냄새가 날 때	<ul style="list-style-type: none"> 닭껍질 갈비찜 등의 요리를 하신 후 청소를 깨끗이 하셨습니까? 	<ul style="list-style-type: none"> 49쪽을 참조하여 뚜껑부의 패킹을 깨끗이 닦아낸 후 사용하여 주십시오.
뚜껑이 닫혀지지 않을 때	<ul style="list-style-type: none"> 뚜껑 결합 손잡이가 (◎) "△"(열림) 방향으로 완전히 돌려졌습니까? 내술에 밥이나 뜨거운 음식물이 들어 있지 있습니까? 내술을 본체에 완전히 붙였습니까? 	<ul style="list-style-type: none"> 뚜껑 결합 손잡이를 "△"(열림) 방향으로 완전히 돌리고 닫아 주십시오. 압력추를 젖힌 다음 뚜껑을 닫습니다. 내술에 부착되어 있는 내술 손잡이를 좌우로 돌려 본체에 완전히 안착시킵니다.
"E_u, 00" 번갈아가면서 표시가 나타날 때	<ul style="list-style-type: none"> 마이컴 전원에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
"E_P, 00" 번갈아가면서 표시가 나타날 때	<ul style="list-style-type: none"> 환경센서에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
"E_uF" 표시가 나타날 때	<ul style="list-style-type: none"> 마이컴 내부 메모리에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
취사 보온/재가열 버튼 입력시 보온 동작 중 "HFF", 취사 동작 중 "HFP" 표시가 나타날 때		<ul style="list-style-type: none"> 전원 또는 제품의 이상 점검 가능 합니다. 지속적으로 표시가 나타날 경우에는 서비스센터로 문의 하십시오.

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증상	확인사항	조치사항
밥이 되지 않을 때	<ul style="list-style-type: none"> • 압력취사 버튼을 눌렀습니까? • 취사중 정전이 되지 않았습니까? 	<ul style="list-style-type: none"> • 원하는 메뉴선택 후 반드시 압력취사 버튼을 1회 눌러 표시부에 'E 2' 표시가 나타나는지 확인하십시오. • 장전보상 기능에 대해서는 52쪽을 참조하십시오.
밥이 설익거나 퍼석할 때 또는 흥밥이 될 때	<ul style="list-style-type: none"> • 계량컵을 사용하셨습니까? • 물 조절은 정확히 하셨습니까? • 쌀을 깨끗이 씻었습니까? • 쌀을 장시간 불린 후 취사하셨습니까? • 쌀을 개봉한지 오래되어 너무 말라있지 않았습니까? 	<ul style="list-style-type: none"> • 54~55쪽을 참조하여 올바르게 사용하십시오. • 물을 반눈금 정도 더 넣고 취사하십시오.
콩(잡곡/현미)이 설익을 때	<ul style="list-style-type: none"> • 콩(잡곡/현미)이 너무 마르지 않았습니까? 	<ul style="list-style-type: none"> • 콩(잡곡/현미)을 불리거나 삶아서 잡곡메뉴에서 취사를 하십시오. 잡곡의 종류에 따라 설익을 수도 있습니다.
밥이 너무 질거나 뽕밥일 때	<ul style="list-style-type: none"> • 메뉴 선택은 맞게 하셨습니까? • 물 조절은 정확히 하셨습니까? • 뜬을 틀이는 상태에서 뚜껑을 열지는 않았습니까? 	<ul style="list-style-type: none"> • 원하는 메뉴를 바르게 선택하십시오. • 물 조절을 정확히 하십시오. (54~55쪽 참조) • 취사 완료음이 울린 후 압력이 완전히 제거된 다음 뚜껑을 열고 밥을 섞어주십시오.
취사 도중 밥물이 넘칠 때	<ul style="list-style-type: none"> • 계량컵을 사용하셨습니까? • 물 조절은 정확히 하셨습니까? • 메뉴 선택을 정확히 하셨습니까? 	<ul style="list-style-type: none"> • 54~55쪽을 참조하여 올바르게 사용하십시오.
보온 중 냄새가 날 때	<ul style="list-style-type: none"> • 뚜껑을 꼭 닫았습니까? • 보온중 전원플러그가 콘센트에서 빠지지 않았습니까? • 12시간 이상 보온하였거나 너무 적은 밥을 보온하지 않았습니까? • 주걱이나 식은밥 혹은 다른 종류의 밥을 넣어서 보온하지 않았습니까? 	<ul style="list-style-type: none"> • 뚜껑을 완전히 닫아주십시오. • 보온 중 전원플러그를 항상 꽂아 주십시오. • 보온시간은 가능한 12시간 이내로 하십시오. • 백이 이외의 메뉴와 식은밥은 보온하지 마십시오.
"E _ _", "E _ P", "E _ L" 표시가 나타날 때	<ul style="list-style-type: none"> • 온도감지기에 이상이 있을 때 나타납니다. 	<ul style="list-style-type: none"> • 전원을 차단 후 서비스센터로 문의하십시오.
"E _ F" 표시가 깜빡일 때	<ul style="list-style-type: none"> • 냉각팬에 이상이 있을 때 나타납니다. 	<ul style="list-style-type: none"> • 전원을 차단 후 서비스센터로 문의하십시오.
보온 중 보온경과시간 표시가 깜빡일 때	<ul style="list-style-type: none"> • 보온 후 24시간이 경과하지 않으셨습니까? 	<ul style="list-style-type: none"> • 보온 24시간 경과 이후부터 보온 경과 시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.
보온중 밥이 많이 식었거나 물이 많이 흐를 때	<ul style="list-style-type: none"> • 보온을 취침보온모드로 설정하지 않으셨습니까? 	<ul style="list-style-type: none"> • 필요에 따라 취침보온모드를 해제 또는 설정한 후 보온하여 주십시오.
"E do" 표시가 나타날 때	<ul style="list-style-type: none"> • 취사 완료 후 전원이 인가된 상태에서 한번도 뚜껑 결합 손잡이를 "↓ 열림" 방향으로 돌리지 않고 보온이 취소된 상태에서 대기상태에서 압력취사 버튼을 누르지 않으셨습니까? 	<ul style="list-style-type: none"> • 뚜껑 결합 손잡이를 "↓ 열림" 방향으로 돌린 뒤 다시 "↓ 잠김" 방향으로 돌려 주십시오.
"E co" 표시가 나타날 때	<ul style="list-style-type: none"> • 분리형 커버가 장착 되어 있습니까? 	<ul style="list-style-type: none"> • 분리형 커버를 장착해 주십시오. (49쪽 참조) • 분리형 커버가 장착된 상태에서 "E co" 표시가 계속 점멸할 경우 서비스센터로 문의하십시오.
보온 중 경고음이 울리거나 보온 중 제거벨이 되지 않을 때	<ul style="list-style-type: none"> • 분리형 커버가 장착되어 있습니까? 	<ul style="list-style-type: none"> • 분리형 커버를 장착해 주십시오. (49쪽 참조)
NFC 기능이 동작하지 않을 때	<ul style="list-style-type: none"> • 사용 중인 스마트폰이 NFC기능을 지원하고 있습니까? 	<ul style="list-style-type: none"> • 표시가 나타나지 않을 경우, 서비스센터로 문의하십시오. • NFC기능을 사용 할 수 있는 스마트폰인지 스마트폰의 사용설명서를 참조하여 확인해 주십시오. • NFC기능은 안드로이드 OS버전 2.3.3이상에만 지원합니다.

MEMO



CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada. will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. P&K USA TRADING CORP covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

WARRANTY PERIOD

MODEL#
CRP-CH10

#LABOR
1YEAR

PARTS
1YEAR

HOW SERVICE IS HANDLED

The East and the Central Districts

Call : 718 888 9144

Address : 5-48 46th Road Long Island City, NY 11101, USA

The West and the Central Districts.

Call : 323 780 8808 Toll Free : 877 481 9828

Address : 1137 E. 1st Street, L.A, CA 90033, USA

Canada (TORONTO)

Call : 416 878 4561 / 905 707 8224

Address : #D8-7398 Yonge Street

Thornhill Ontario Canada L4J 8J2

Canada (VANCOUVER)

Call : 604 540 1004 / 604 523 1004

Address : 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES :

- * To damages problems which result from delivery or improper installation.
- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove warranty Coverage : ► **Retain your Sales Receipt to prove date of purchase**
► **Copy of your Sales Receipt must submitted at the time warranty service is provided.**

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center , Parts Distributor or Sales Dealer:

The East and the Central Districts
Call : 718 888 9144
Address : 5-48 46th Road Long Island City,
NY 11101, USA

The West and the Central Districts.
Call : 323 780 8808
Toll Free : 877 481 9828
Address : 1137 E. 1st Street, L.A,
CA 90033, USA

Canada (Toronto)
Call : 416 878 4561 / 905 707 8224
Address : #D8-7398 Yonge Street
Thornhill Ontario Canada
L4J 8J2

Canada (Vancouver)
Call : 604 415 9858/604 524 8282
Address : 103-4501 North Road
Burnaby BC Canada
V3R 4R7

