

사용설명서 Operating Instructions

CRP-HR08 Fuzzy Series

1.44L(1~8Persons)

CUCKOO
always new

happiness

NO.1 CUCKOO

CUCKOO IH PRESSURE JAR COOKER



love

design

emotion

CUCKOO ELECTRONICS CO., LTD.

CONTENTS

Thank you very much for purchasing “CUCKOO”
Electric Rice cooker/warmer

Read the following instruction manual before use. Save this instruction manual for future reference. This manual will be useful if you have any questions or have problems operating the rice cooker.

CONTENTS

BEFORE USING

Important safeguards	3
Specifications	4
Safety precautions	5~8
Name of each part	9
How to clean	10~12
Function operating part	13

WHEN USING

How to set current time	14
How to set or cancel voice guide function	14
Night voice volume reduction / Woman and man voice setting function ...	15
Before cooking rice	16
For the best taste of rice	17
How to cook	18~19
MY MODE (Cuckoo Customized Taste Function) ...	20~22
How to use “GABA RICE(Brown rice)”	23~24
How to cook the MULTI-COOK and NU RUNG JI	25
How to preset timer for cooking	26~27
How to use simple soft function	27
To keep cooked rice warm and tasty	28~30
How to use power saving function	31
How to lock buttons	31

BEFORE ASKING FOR SERVICE

Check before asking for service	32~34
---------------------------------------	-------

COOKING GUIDE

Cooking Guide	65~73
---------------------	-------

저희 쿠쿠 압력보온밥솥을 애용해 주셔서 대단히
감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오.

사용 중에 모르는 사항이 있을 때나 기능이 제대로
발휘되지 않을 때 많은 도움이 될 것입니다.

목 차

사용하기전에

Important safeguards	3
제품규격	4
안전상의 경고	35~38
각 부분의 이름	39
제품 손질 방법	40~42
기능 조작부의 이름과 역할	43
기능 표시부의 이상점검 기능	43

사용할 때

현재시각의 설정	44
음성안내 기능의 설정과 해제	44
야간 음성볼륨 줄임 기능/남녀음성 설정 기능	45
취사전 준비사항	46
맛있는 밥을 드시려면	47
취사는 이렇게 하십시오	48~49
자동살균세척 기능, 묵은쌀, 검은콩 취사 기능	49
쿠쿠 맞춤밥맛 기능은 이렇게 하십시오	50~52
현미/발아는 이렇게 하십시오	53~54
만능찜 누룽지는 이렇게 하십시오	55
예약 취사는 이렇게 하십시오	56~57
간편불림 기능은 이렇게 하십시오	57
밥을 맛있게 보온하려면	58~60
절전기능은 이렇게 하십시오	61
버튼잠금 기능은 이렇게 하십시오	61

고장 신고 전에

고장신고 전에 확인 하십시오	62~64
-----------------------	-------

요리안내

요리안내	74~83
------------	-------

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure Cooker Body in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children.
This appliance is not intended for use by young children without supervision.
5. Unplug from outlet when not in use and before cleaning.
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury.
Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods.
These foods tend to foam, froth, and sputter, and may block the pressure releasing device.
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced.
See "Operating Instructions."
22. Do not use this pressure cooker to fry in oil.
23. Be sure that handles are assembled and fastened properly before each use.
Cracked, broken or charred handles should be replaced.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use.
Allow the unit to cool down completely first.

HOW TO USE EXTENSION CORD

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- B. Extension cord should be used properly.
- C. Extension cord usage for the rice cooker:
 - (1) The correct rated voltage should be used for the rice cooker.
 - (2) If the appliance is set on the ground, the extension cord should also be set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

SPECIFICATIONS / 제품규격

型号名 /Model Name(모델명)		CRP-HR08 Fuzzy Series
额定电压及电流 /Power Supply(전원)		220V~, 50/60Hz
工作压力 /Power Consumption(소비전력)		1240W, 5.6A
煮饭容量 Cooking Capacity (취사용량)	白米 /Glutinous Rice(백미)	1~8 人份/0.18~1.44L (1~8cups)
	洗滌米 /Rince Free(세척미)	2~8 人份/0.36~1.44L (2~8cups)
	白米快速 /Turbo Glutinous Rice(백미쾌속)	2~6 人份/0.36~1.08L (1~6cups)
	紫菜寿司 /Sushi(김초밥)	
	杂谷 /Mixed Rice(잡곡)	
	糙米/发芽 /GABA(현미/발아)	
	营养饭 /Nutritious Rice(영양밥)	
	陈米 /Dried Rice(묵은쌀)	
电源线长度 /Power Cord Length(전원 코드 길이)		1~1.5 人份/0.18~0.27L (1~1.5cups)
工作压力 /Pressure(사용압력)		1.2m
安全装置 压力 /Pressure safety device/(안전장치 압력)		78.4KPa(0.8kgf/cm ²)
温度保险丝温度 /Micro Temp/(온도퓨즈)		117.6KPa(1.2kgf/cm ²)
重量 /Weight(중량)		169℃
尺寸 /Dimension(치수)	长 /Width(폭)	6.4kg
	宽 /Length(길이)	38.6cm
	高 /Height(높이)	28.7cm
		26.5cm

HOW SERVICE IS HANDLED

USA

The East and the Central Districts
Tel. No. (718) 888-9144
The West and the Central Districts
Tel. No. (213) 687-9828

Canada

TORONTO
Tel. No. 905 707 8224 / 416 878 4561
VANCOUVER
Tel. No. 604 540 1004 / 604 523 1004

WARNINGS FOR SAFETY



- The following must be observed to use the product safely and correctly to prevent accidental and dangerous situations.
- 'Warning' and 'Caution' are different as follows.

Warning

This means that the action it describes may result in death or severe injury.

Caution

This means that the action it describes may result in injury or property damage.



- This sign is intended to remind and alert that something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.



- Indicates a prohibition



- Indicates an instruction



Warning



Do not

Do not cover the automatic steam outlet or pressure weight with your hand or face.

- It can cause burns.
- Especially be careful to keep it out of children's reach.



Please pay careful attention against water and chemicals

- It can cause an electric shock or fire.




Do not use the cooker near hot things such as stove, gas stove or direct ray of light.

- It can cause an electric shock, fire, deformation, malfunction, or discoloration.
- Please check the power cord and plug frequently.



Use a single socket with the rated current above 15A.

- Using several lines in one socket can cause overheating resulting in fire. Please check the power cord and plug frequently.
- Use an extension cord with a rated current above 15A.

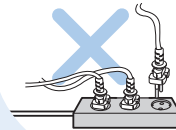

Do not pull out the clean steam vent by force.

- When separate it, the steam control vent can be blocked.

Please make sure you clean and check the assembly condition of the clean steam vent before and after use.

- If you have any problem with assembly and cleaning of the clean steam vent, please call a dealer or service center.
- Keep clean the product before and after use.



Do not alter, reassemble, disassemble or repair.

- It can cause fire, electric shock or injury.
- For repair, contact dealer or the service center.




Do not let the cooker contact any water by sprinkling water on the cooker.

- It can cause an electric shock or fire.
- If it contacts water, please separate power cord and contact dealer and service center.

Do not use damaged power cord, plug or loose socket.

- Please check the power cord and frequently because it can be damage by using circumstance or method. Also, the damaged one can cause an electric shock or fire.
- It can cause an electric shock short circuit or fire.
- If the plug was damaged, contact dealer or a service center.

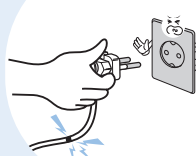



WARNINGS FOR SAFETY



Warning



Do not

Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.

- It can cause deformation or a breakdown.
- It can cause an explosion by pressure.




Don't spray or put any insecticide and chemicals.

- It can cause an electric shock or fire.
- If cockroaches or any insects get inside the cooker, please call a dealer or a service center.



**Do not use pots that are not designed for the cooker.
Do not use abnormal pot and do not use without inner pot.**

- It can cause an electric shock or fire.



Do not put any needle, cleaning pin etc in the ventilator or any gap of the cooker.

- Do not insert cleaning pins to other parts except to the valve hole of the pressure weight.
- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

Do not turn the Lock/Unlock Handle to "Unlock" during cooking.

- The hot steam or any hot content within the cooker can cause burns.
- After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.

Do not use it without the inner pot.

- It can cause electric shock or malfunction.
- Do not pour rice or water without the inner pot.
- If rice or water gets in then do not turn the product over or shake it please contact to dealer or service center.

Do not place heavy things on the power cord.

- It can cause an electric shock or fire.
Please check the power cord and plug frequently.

Do not open the top cover during heating and cooking.

- It can cause burns.
- If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam is released, completely turning the pressure weight over.

Keep the cooker out of children's reach.


- It can cause burns, electric shock or injury.

Remove external substances on plug with a clean cloth.

- It can cause fire. Please check the power cord and plug frequently.


Do not bend, tie or pull the power cord by force.

- It can cause an electric shock or short circuit resulting in fire. Please check the power cord and plug frequently.

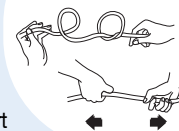

Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.

- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

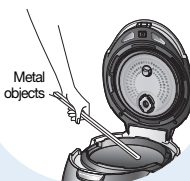

Be careful that both the plug and power cord are not to let animal bite or to be shocked by sharp metal materials.

- Damages by impact can cause an electric shock or fire.
Please check the power cord and plug frequently.



WARNINGS FOR SAFETY




Warning



Remember

Do not use on a rice chest or a shelf.

- Do not press the power code between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- When using on furniture, automatically released steam can cause damage, fire and an electric shock.

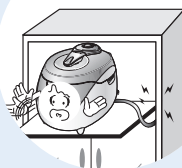

Do not plug or pull the power cord with wet hands.

- It can cause an electric shock.

Clean any dust or external substances off the temperature sensor and inner pot.

- It can cause a system malfunction or fire.



If you use cardiac pacemakers or electrical medical supporting equipment, consult a doctor before using this unit.

- When this unit is working, it can influence any electrical medical equipment.



Caution



Do not

Please contact dealer or service center when strange smell or smoke has occurred.

- First pull out the power cord.

Do not use over the maximum capacity.

- It can cause overflow or breakdown.
- Do not cook over capacity stated for cooking of chicken soup and congee.

Don't use for various purposes for inner pot.

- It can cause deformation of the inner pot
- It can cause to spill the inner coating.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight during and after the cooking.


Don't use the cooker near a magnetic field.

- It can cause burns or breakdown.



Please pull out the plug when not in use.

- It can cause electric shocks or fire.
- Use AC 220V only.

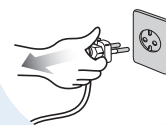

Use product on a flat surface. Do not use on a cushion. Please avoid using it on an unstable location prone to falling down.

- It can cause malfunction or a fire. Please check the power cord and plug frequently.



Do not pull up the cooker by holding the inner pot handle.

- It can cause problems and dangerous situations. There are portable handles on bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.

Do not use the cooker except for original purposes. It can cause danger and accidents.

Please use the cooker for original purposes.

- It can cause the malfunction or smell.



WARNINGS FOR SAFETY



Caution

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.

- The hot steam or any hot content within the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.



Do not place on rough top or tilted top.

- It can cause burns or breakdowns.
- Be careful to install the power cord to pass without disruption.



Do not drop the cooker or impact.


- It can cause malfunction.



Do not

Please call the customer service if the inner pot coating peels off.

- Oven coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.

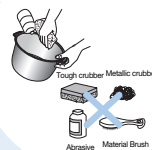

When the exterior of inner pot is titanium ion plated.

- The exterior of titanium inner pot can get darker when used for a long time.
- Use dry kitchen cleaner or sponge to clean the inner pot since rough scrub or metallic ones might cause scratch on the exterior of the plating.
- The friction of the inner pot with sink or other appliances can cause its plating's coming off. (No problem to use it)




Caution

Be cautious when steam is being released

- When the steam is released don't be surprised.
- Please keep the cooker out of reach of children.

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.

- If you inflict impact on power cord, it can cause an electric shock or fire.

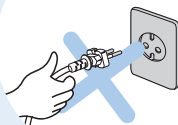

If power fails during rice cooking, automatic vapor emission device may work, leading to dispersion of contents.

- Cook rice with specified amounts of rice and water.
- In particular, water more than specified amount may cause overflowing of contents.
- Cook rice while soft steam cap is mounted.

Do not keep easily spoiled food warm in the product such as red bean rice, mixed food, croquette or gratin. (Except white rice)

Wipe off any excessive water on the cooker after cooking.

- It can cause odor and discoloration.
- Wipe off water that is left behind from dew.

Maintain more than 30cm of distance from the product while using.

- A magnetic field can be released from electronic goods.





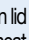
Remember

Please clean the body and other parts after cooking.

- After cooking chicken soup or, multi cook dishes, etc., the smell may be absorbed.
- Clean the oven packing, top heater plate and inner pot every time you cook any of those.
- It can cause alteration or smell.
- Use dry kitchen cleaner or sponge to clean the inner pot, since rough scrub or metallic ones are abrasive to the coating.
- Depending on the using methods or user's circumstances inner pot coating might rise. Please call the customer service for those cases.
- Please, do not pull out the clean steam vent by force.



Even if power plug is unplugged, turn the lid to the  (Lock) location.

- In case My Cauldron is hot or hot cooked rice is left after cooking is completed, close lid and turn lid combining hand grip to  (Lock) direction even after unplugging power plug. Otherwise product deformation or damage may occur by internal pressure.
- Be sure to turn lid combining hand grip to  (Lock) direction during cooking and heat preservation before use.



Please contact dealer or service center when either a button of a product or a product itself is not working properly.



NAME OF EACH PART




Plated inner pot with titanium ion (The outside)

- Feature**
1. By plating the surface with titanium the inner pot is more durable
 2. Durable against corrosion
 3. Exterior is plated with gold titanium

Name of each part

Soft Steam Cap

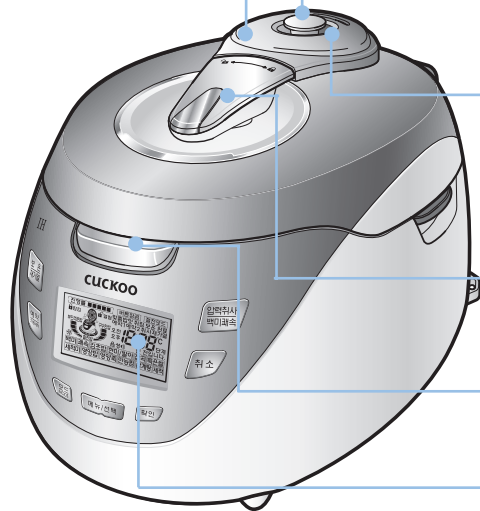

Pressure Weight

Always keep it horizontal it keeps the steam inside of the oven. When the pressure weight is twisted it releases steam.

Automatic Steam Exhaust Outlet (Solenoid valve)

When finished cooking or during warming, steam is automatically released.

Lock/Unlock Handle (Set the handle to lock when cooking or warming the rice)


The handle has to turn to 'Lock' for operation.

Clamp Knob

Turn handle to 'Unlock', and then press Clamp knob to open.

Control Panel

Name of each part

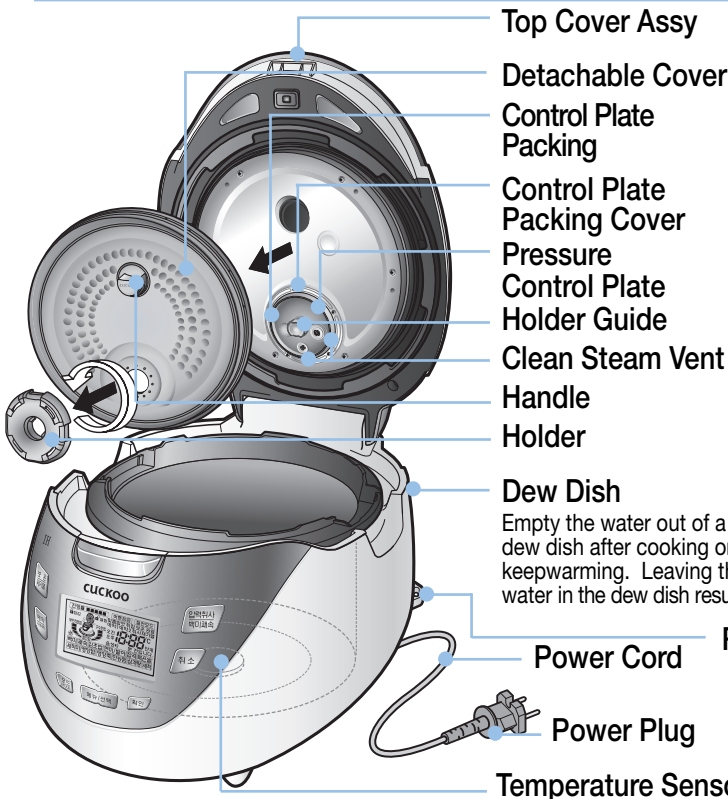

Top Cover Assy

Detachable Cover

Control Plate Packing

Control Plate Packing Cover

Pressure Control Plate Holder Guide

Clean Steam Vent Handle

Holder


Dew Dish

Empty the water out of a dew dish after cooking or keepwarming. Leaving the water in the dew dish results in bad smell.

Power Cord


Power Plug

Temperature Sensor

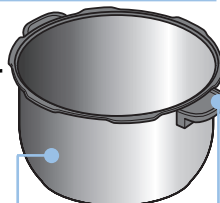

Pot Handle Inner Pot(Oven)


Place the inner pot into the body properly.

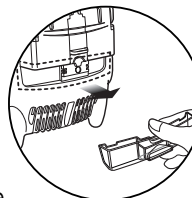

Rice Scoop holder



Accessories




Manual&Cooking Guide



Rice Scoop



Rice Measuring Cup



Steam Plate



Cleaning Pin
(Attached on the bottom of the unit)
(Refer to page40)




HOW TO CLEAN

- Unless you clean the detachable cover, it can cause bad smell (After cooling out, unplugging and cleaning it).
- Body and cover should be cleaned by a dry dish towel. Do not use bentol while using rice cooker, starch can remain. No effect on health.
- Do not put materials like screws into holes of detachable cover. Look up back cover and front cover.


Detachable cover & Pressure packing

After cleaning detachable cover, put it back on the lid


Unless detachable cover is mounted, preset cooking cannot be done. (Alarm may sound while keeping warm.)

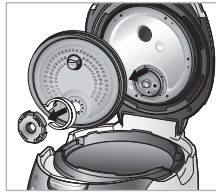


① Turn the holder counterclockwise, and the cover will be easily separated from the cooker and can be washed.

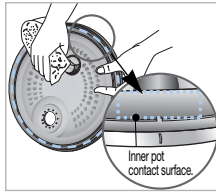


② Wash the cover with cooking purpose neutral detergent and sponge frequently, and wipe off moisture with handkerchief.
※ Please keep clean the edge of rubber packing, then the rice cooker last's longer.

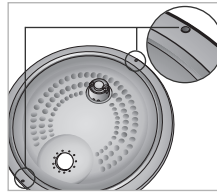

③ If washed without separating pressure packing, it is likely to have water leak as described in the image.

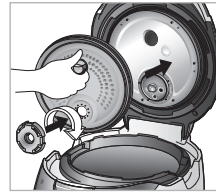


④ When mounting the cover, grab separate cover handle, attach it to hole, and after adjusting holder on top of packing stop tab, fix it by turning it clockwise.

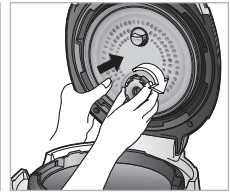


⑤ It is easier to attach the cover holder when the lower part of the detachable cover is pressed.


Please fit a rubber packing into the cover plate completely after washing or replacing the rubber packing.

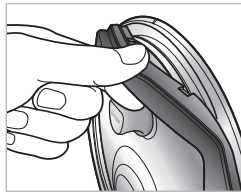

① To separate the rubber packing, please pull it out from the cover plate as shown in the picture.

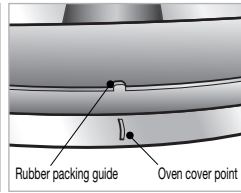


② To put back the rubber packing, please fit it to each of 6 projections and holes as shown in the picture.

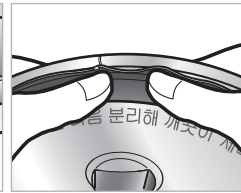

③ After fitting 6 projections to the holes, please press the rubber packing around the corner completely as shown in the picture.



④ Please check that the rubber packing fits into the cover plate completely. If not, steam may be released from the crack between the packing and the plate.

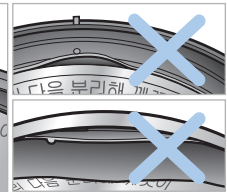

CLEAN STEAM VENT AND SAFETY PACKING




Make sure to clean the clean steam vent after/before use. Do not try to pull out the clean steam vent and safety packing, clean it with care. Make sure the clean steam vent and safety packing are installed completely after/before use. If the steam vent is detached, or not attached completely, please contact customer service.

INNER POT



Wipe the inner, upper, and outer of the inner pot of any external substances. Do not use tough scrubber, metallic scrubber, brush, abrasive material etc.
※ Maintaining a rubber packing cleanly will let the rice cooker last longer.

MAIN UNIT

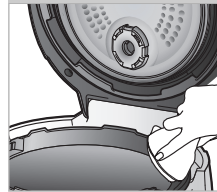

Wipe the main unit with a wet cloth that has been extracted out of all water.

INNER BODY



Make sure to clean the steam control vent before and after use.

CONTROL



In case the cauldron is stained with cooked rice broth or foreign matter, wipe the cauldron with a damp dish cloth. Using a rough scouring pad or brush etc may damage cauldron surface. If the buttons are functioning correctly please contact our customer care service.

How to use handle

1. Handle must be located at "Lock" during Cooking.
The lamp turning on means the top cover is closed perfectly, so you can cook.
 2. After cooking, the handle must be turned from "Lock" to "Unlock", and then push clamp knob to open.
It is hard to open when there is remaining steam in the Inner pot. At the time, twist pressure weight and let the steam out. Do not open by force.
 3. Handle must be turned to the "Lock" position to begin cooking.
- When the lamp is turned on it means the top cover is closed properly and you may begin cooking.
To open and close turn the handle from the lock to the unlock position.




HOW TO CLEAN



If the valve hole of the pressure weight part is clogged, punch it with the cleaning pin

- The valve hole of the pressure weight allowing the escape of steam should be checked regularly to ensure that it is not blocked.
- If you use the valve hole of pressure weight as it is blocked, the hot steam or any hot content within the cooker can cause injury.

※ Do not use a Cleaning Pin for other use except cleaning the valve hole of the pressure weight.

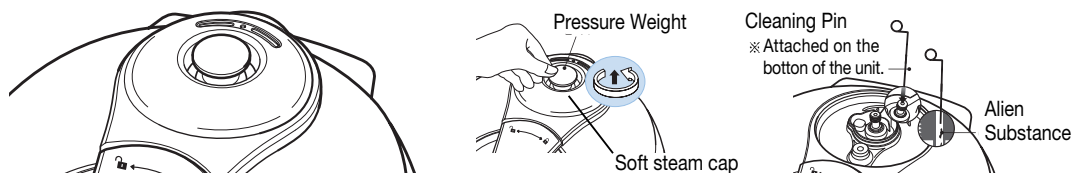


How to disassemble the pressure weight

- ▶ After the Lock/Unlock handle is locked (located on "Lock") turn the pressure weight counter-clockwise while pulling it up, and pull it out.
- ▶ Punch the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.


How to clean the soft steam cap

Do not touch the surface of the soft steam cap right after cooking. You can get burned.

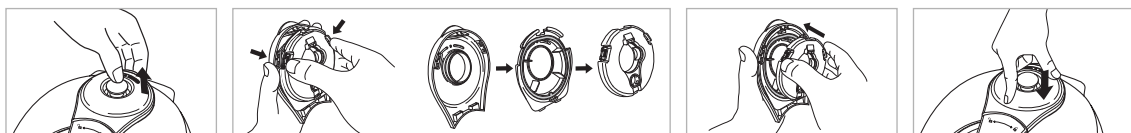

- 1 Detach the soft steam cap like the picture.
- 2 Press the hook in the back, and follow the arrow to detach and clean. Make sure you clean frequently with a sponge or a neutral detergent.
- 3 Assemble the vent so that it fits into the groove perfectly.
- 4 After you attach the soft steam cap to fit into the groove, press 'A' part firmly to assemble the soft steam cap into the product.

How to clean dew dish

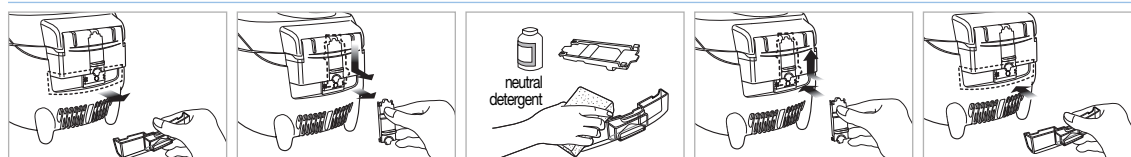

- 1 Separate dew dish.
- 2 Separate the drain ditch cap by pushing it down.
- 3 Clean the drain ditch cap and dew dish with a neutral detergent.
- 4 Clean the drain ditch cap with brush kit.
- 5 Securely put in the dew dish after cleaning.

Cautions when top cover does not close perfectly

Do not try to close the top cover by force. It can cause problems.



1. Check the inner pot correctly put in the main body.
2. To close the top cover, the handle must be located at "Unlock" as shown by the picture on the right.



3. If there are hot things in the inner pot, the top cover would not be closed. At the time twist the pressure weight and let the steam out and then close the top cover.



FUNCTION OPERATING PART / ERROR CODE AND POSSIBLE CAUSE

Function Operating Part

Preset/AUTO CLEAN Button

Use it by presetting the time when you desire specific to eat. (Refer to page 53~54)
When you use automatic steam cleaning function (Refer to page 47)

Mode button

This function is used to customize individual cooking preference, time-setting, voice volume setting, keep warm temperature setting, and power saving movement.

Menu / Selection button

This function is used to select from among glutinous rice, turbo glutinous rice, sushi, GABA, mixed rice, dried rice, rinse free, nutritious rice, nutritious porridge, all-purpose, ginseng chicken soup, steaming and Automatic Sterilization (Steam Cleaning), and to modify preset time.

Keep Warm / Reheat button

Use it for warming or reheating the cooked meal right before eating. (Refer to page 55)

Pressure Cook/Turbo Button

Use it for cooking the rice. (Refer to page 46)


Cancel button

Use it for cancelling selected function or releasing remaining steam in the inner pot. (Refer to page 62)
When using Power saving function (Refer to page 58)

Display

Set button

When you use selected function or button-lock function. (Refer to page 59)

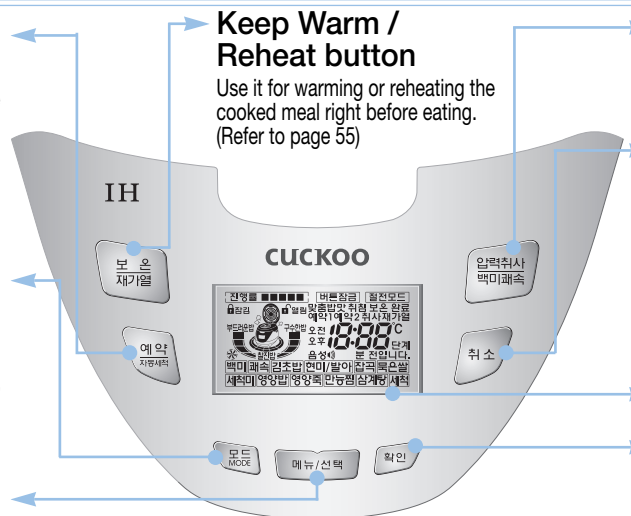

- ※ If no operation is done while power cord is plugged, the system is on standby as shown in the screen in the figure. (The menu on standby screen, time, voice and customized rice taste stage may differ depending on user configuration.)
- ※ If cancel button is pressed during function manipulation, the condition turns to standby condition.
- ※ The button has to be pressed until buzzer sounds. There is a chance that the picture may be different with actual one.



<Standby condition screen>


Error Code and Possible Cause

When the product has any problems or used it inappropriately, you can follow the below marks.

If error persistently shows up even in normal using conditions or after taking measure, inquire with customer service .



When the inner pot is not placed into the unit.



Problem on temperature sensor. ("E2" mark, "E2" mark, "E2" mark blink.)



Problem on fan motor. ("E3" marks blink.)



When pressing the Pressure Cook and Timer button, while the Lock/Unlock handle is on "Unlock"
Turn the Lock/Unlock handle "Lock".




When boiling only water.



When setting preset time longer than 13 hours
Set the preset time within 13 hours. (Refer to page 53~54)



It appears on the display when you press Start button again, or if the cooking has finished and you've never ever turned the handle to 'Unlock'. It can be solved by turning handle to 'Unlock' and then turn to 'Lock'.




Problem on micom power.



Problem on micom memory.



Problem on environment sensor.



This error message shows up when Pressure Cook or keeping warm/reheating button is pressed while detachable cover is not mounted. Mount separate cover. Note: While keeping warm, alarm will sound and keeping warm and reheating do not work.



This code indicates the function of checking for abnormality of power or product.



HOW TO SET CURRENT TIME / HOW TO SET OR CANCEL VOICE GUIDE FUNCTION


How to set current time

ex) 8:25am now

1 Press mode button once.

- ▶ It can be operated by pressing mode button for more than 1sec
- ▶ "Current time mode press yes button" after setting current time with selection button.
- ▶ Menu/Selection button blinks and Mode, Set and Cancel buttons turn ON.
- ▶ Colon mark(:) on the sec. screen is blinking once per second.

<Standby mode>

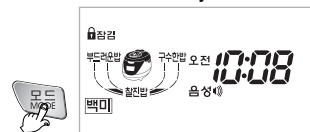

2 Set 8 o'clock and 25 minute as pressing menu/selection button.

- ▶ 1 min up "메뉴/선택" button
- ▶ 1 min down "메뉴/선택" button
- ▶ 10 min up or down "메뉴/선택", "메뉴/선택" keep pressing.
- ▶ Careful of setting am,pm.
- ▶ In case of 12:00 it is 12:00 pm.



3 When finishing to set time you want, press "Set" button.

- ▶ If it is over 7sec without yes button, setting time will be canceled with voice, "it is canceled due to overtime".



■ About Lithium battery

- This product contains lithium battery for improving blackout compensation and time. Lithium battery lasts for 3 years.
- When current time is not displayed on the screen, it means the battery is exhausted. It should be replaced.

■ What is blackout compensation

- This product remembers and maintains previous condition and processes. After finishing blackout, it operates immediately.
- If blackout happens during cooking, the cooking time will be delayed depending on blackout time.
- If the rice became cold because of blackout, warming will be cancelled.

■ How to set current time during keep warming mode

1. Press Cancel button to cancel keep warm and then press Mode button over 1 time to set current time.
2. After setting time, press keep warm button to re-start keep warm.

Voice guide volume control (The function which can control volume and cancel)

To enter this function, press Mode button 2 times. Mode button needs to be pressed for over 1 second at the first time.



'3' sign is displayed when entered volume control mode by pressing Mode button 2 times.

- ▶ Menu/Selection button blinks and Mode, Set and Cancel buttons turn ON.

If set value became '0' by pressing button, voice guide function is off.

Press button to set '5', that is the maximum volume sound.

When finish setting desired volume, press Mode button to store.

- ▶ Set button blinks and Mode, Menu/Selection and Cancel buttons turn ON.
- ▶ Keep the button pressed, and the button will turn to Continuous.
- ▶ Set to desired voice volume, and press Set button.




NIGHT VOICE VOLUME REDUCTION / WOMAN AND MAN VOICE SETTING FUNCTION


Night Voice Volume Reduction

Set the function of night voice volume reduction, the function to reduce the volume of voice during night time(10:00PM-05:59AM) on need-to-do basis. This function works only during night time.

► How to set night voice volume reduction

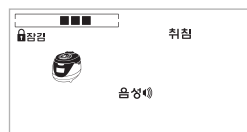

Example) 60% of day time voice volume

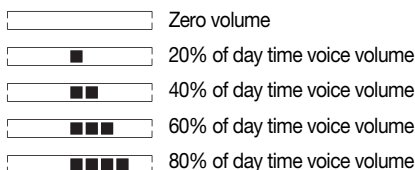

Night voice volumes by the setting of process progress

1. Press mode button 8 times in standby status, and you will enter Night Voice Volume Reduction mode. When pressing mode button initially, press the button for 1 second or longer to enter Night Voice Volume Reduction mode.
2. When you enter Night Voice Volume Reduction mode, a voice comes up saying "You have entered Night Voice Volume Reduction. Select or inactivate Night Voice Volume Reduction mode with 'Select' button and press 'Confirm' button."
3. Press 'Menu'/'Select' button, and as process progress bar changes, voice volume will change. Select desired voice volume, and press 'Confirm' button.
4. Once process progress bar reach full condition through adjustment of 'Menu'/'Select' button, a voice will come saying "The function of Night Voice Volume Reduction is inactivate." Inactivate the function by pressing 'Confirm' button.
5. If 'Inactivate' button is pressed or no button is pressed for 7 seconds after you enter Night Voice Volume Reduction mode, the function will be inactivated along with voice "As set time is elapsed, the function is inactivated", and the system will be back to standby mode.

Woman and Man Voice Setting Function

This function helps you select Auto voice for either a man or woman's voice. With this function, you can set to your desired voice.

► How to set night voice volume reduction



Example) When set to woman voice



Example) When set to man voice

1. Press mode button 9 times in standby status, and you will enter Woman and Man Voice mode. When pressing mode button initially, press the button for 1 second or longer to enter Woman and Man Voice mode.
2. When you enter Woman and Man Voice mode, a voice comes up saying "You have entered Night Woman and Man Voice. Select or inactivate Woman and Man Voice mode with 'Select' button and press 'Confirm' button."
3. After setting Auto (woman and man) voice with 'Menu'/'Select' button, man voice or woman voice, and press 'Confirm' button.
4. If 'Inactivate' button is pressed or no button is pressed for 7 seconds after you enter Night Voice Volume Reduction mode, the function will be inactivated along with voice "As set time is elapsed, the function is inactivated", and the system will be back to standby mode.

BEFORE COOKING RICE



1 Clean the inner pot and wipe the water on the inner pot with dry cloth.

- ▶ Use the soft cloth to wash the inner pot.
- ▶ Tough scrubber can make the coating come off.

2 Measure the amount of rice you want to cook using the measuring cup.

- ▶ Make the rice flat to the top of measuring cup and it is serving for 1 person. (ex: for 3 servings → 3 cups, for 6 servings → 6 cups)

3 Wash the rice with another container until the water becomes clear.

4 Put rinsed rice into the inner pot.

5 According to menu, adjust the water amount.

- ▶ For measuring, place the inner pot on a leveled surface and adjust the amount of water.
- ▶ The marked line of the inner pot indicates water level when putting the rice and water into inner pot together.
- ▶ About water scale
 - Glutinous rice, turbo glutinous rice, mixed rice and nutritious rice : Adjust water level to the water scale for 'glutinous rice, mixed rice and rinse free'. Glutinous rice can be cooked to max 8 servings, turbo glutinous rice, mixed rice and nutritious rice to max 6 servings.
 - Sushi : Adjust water level to the water scale for 'sushi'. Sushi can be cooked to max 6 servings
 - GABA : Adjust water level to the water scale for 'GABA'. GABA can be cooked to max 6 servings
 - Nutritious porridge : Adjust water level to the water scale for 'nutritious porridge'. Nutritious porridge can be cooked to max 1.5 servings
 - Dried rice : Adjust water level to the water scale for 'Dried rice'. Dried rice can be cooked to max 6 servings
 - Rinse free : Adjust water level to the water scale for 'Rinse free'. Dried rice can be cooked to max 8 servings

※ Cook in cereals menu, hard cereals like red-bean can be half-cooked depending on the kind of cereal

※ Please refer to the cooking menu time for the each menu. (Refer to page 46)

6 Put the inner pot into the main body and close the topcover.

Please, check if detachable cover is attached

- ▶ In case detachable cover is not attached, when pressure cook/ reheat button is pressed, "Eco" error could occur and cook/ warm function will not work.


Put the inner pot correctly.

- ▶ If there is any external substance on the temperature sensor or the bottom of the inner pot, wipe it off before putting the pot into the main unit.
- ▶ Top cover will not close if the inner pot is not placed correctly in the main body (Place the inner pot to the corresponding parts of the main body)


7 Connect power plug and turn the handle to "Lock"

- ▶ The lamp turning on means closed perfectly.
- ▶ If you press the cook button without setting the Lock/Unlock handle to "Lock" the cooker will not operate. You will hear "beep beep beep" sound and "E01" is shown in the LCD.
- ※ If you want to select another function while cooking, push cancel button.
- ▶ If "Eco" mark shows up in other instance, turn cover handle to "Open" direction, and turn it toward "Lock". Then the cooker will work normally. (The operation of cover lock sensing device can be checked.)

※ Note: This instruction is not applicable if cover handle is turned toward "Open" direction once or more after cooking was completed in previous cooking.

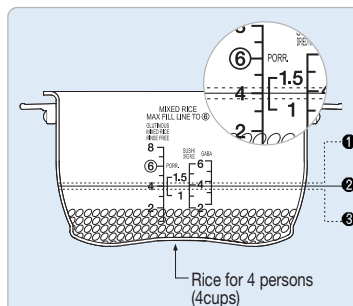

- 1 When you want to cook the old rice or want the soft rice : pour more water than the measured scale
- 2 Glutinous Rice for 4 persons (4 cups) : Set the water to scale 4 of "GLUTINOUS"
- 3 For overcooked rice : pour less water than the measured scale


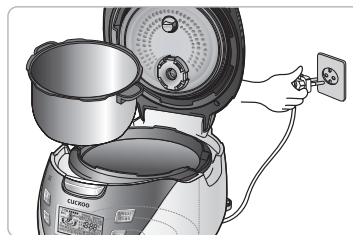




FOR THE BEST TASTE OF RICE

Cook tasty rice with Cuckoo pressure rice cooker

For the best taste of rice, check the following points carefully.
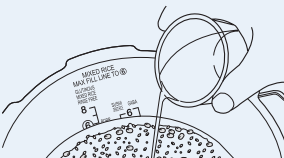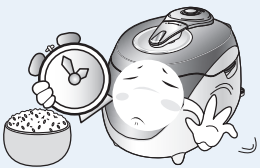
<p>Use the measuring cup!</p> <p>Pour the water until water level marking in the inner pot!</p>	<ul style="list-style-type: none"> • When measuring the rice, Use the measuring cup. (The amount of the rice may vary depending on the quality of the rice.) • Place the inner pot on a flat surface and adjust the water to water level in the inner pot. 	<p>If amount of water and amount of rice is different, rice can be crisp or hard.</p> 
<p>How to store rice</p>	<ul style="list-style-type: none"> • If possible, buy a small amount of rice and keep the rice some place where ventilates well and avoid a direct ray of light. It can prevent evaporation of rice moisture. • If the rice has been unsealed for long, rice can be dry and stale. In this case, you should pour the half of water more. It's tastier. 	<p>If the rice is too dry, rice can be crisp even though it is measured properly.</p>
<p>Shorten the duration of the "Present" time for better cooking.</p>	<ul style="list-style-type: none"> • If possible, do not use the preset time function when rice is too dry and pour the half of water more. 	<ul style="list-style-type: none"> • If you set "Preset" over the 10 hours or "Preset" dried rice, rice can be crisp or half cooked. Even worse condition, rice can be cooked different tastes each level. • If the preset time is longer, the melanoizing effect could be increased.
<p>It's better to set the "warm" time shortly.</p>	<p>It's better to set "warm" less than 12 hours.</p> 	<p>If rice is kept warm for a long period of time, rice color will change, as well as odor.</p>
<p>Keep the product clean.</p>	<ul style="list-style-type: none"> • Clean the product often. (Especially clean the top of the cover for external substance.) 	<p>Wipe the top cover heating part well for any rice or external substance.</p>

HOW TO COOK



1 Choose menu with menu/selection button.

- Select button.
- Each time "Menu" button is pressed, the selection switches in the sequential order, glutinous rice → turbo glutinous rice → sushi → GABA → mixed rice → dried rice → rinse free → nutritious rice → nutritious porridge → Multi cook → chicken soup → Automatic Sterilization(Steam Cleaning)
- If the button is pressed, repeatedly, the menu switches continuously in sequential order.
- In the cases of glutinous rice, sushi, mixed rice, GABA and Dried rice, the menu remains memorized once each cooking is completed, so for continuous use of the same menu, no selection of menu is required.




ex) In case of selecting Sushi,

▶ You can hear a voice, Sushi, when you cook Sushi, automatic steam outlet operates while cooking.

2 Start cooking by pressing Pressure Cook/Turbo button.

- You must turn lid handle to lock before cooking. Then press the pressure Cook/Turbo
- Unless lid handle is not turned to close, you get alarm with "E01", and sound "turn lid handle to lock".

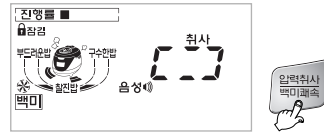

ex) In case of cooking Glutinous,

4 The end of cooking.

- When cooking is completed, warming will start with the voice "cuckoo completed glutinous".
- When cooking ends, stir rice equally and immediately. If you don't stir rice at once and keep it stagnant, rice will go bad and smell bad.
- If the lid handle is not working well, take out the steam completely out of inner pot by turning over pressure weight.
- While cooking, do not press cancel button.

3 Cooking thoroughly.

- The cooktime remaining on the display is shown from cooking thoroughly. The cook time is different relying on menu.
- Careful not to be burned in automatic steam outlet.

ex) In case of 14minutes left,



Cooking time for each menu

Menu	Glutinous	Turbo Glutinous rice	Sushi	GABA	Mixed rice	Dried Rice	Rince free	Nutritious rice	Porridge	Multi cook	Chicken Soup	Automatic Sterilization (Steam Cleaning)
Cooking Capacity	1servings~ 8servings	2servings~ 6servings	2servings~ 6servings	2servings~ 6servings	2servings~ 6servings	2servings~ 6servings	2servings~ 8servings	2servings~ 6servings	1servings~ 1.5servings	See detailed guide to	A chicken (about 600g)	Up to water scale 2
Cooking Time	About 27 min~ About 37 min	About 14min~ About 22 min	About 39 min~ About 49 min	About 52 min~ About 58 min	About 40 min~ About 50 min	About 37 min~ About 43 min	About 32 min~ About 40 min	About 31 min~ About 37 min	About 65 min~ About 74 min	cooking by the menus.	About 71 min	About 20 minutes

※ After cooking chicken soup and multi cook etc, the smell may permeate into the unit, use the Unit after cleaning the rubber packing and lid part according to page 39.



HOW TO COOK

How to use the cooking menu


Glutinous	When you want to have sticky and nutritious white rice.	Sushi	When you want to have a little more sticky and nutritious white rice than Glutinous rice.
GABA	Used to cook germinated brown rice.	Mixed /Brown	This menu is used to cook a variation of mixed rice or brown rice.
Dried Rice	Used to cook dried rice	Rinse free	This menu is used to cook washed rice.
Nutritious Rice	Used to cook nutritious rice.	Porridge	For cooking germinated brown rice.
Multi Cook	For cooking Nutritious Rice.	Chicken Soup	This menu cooks samgyetang automatically.
Automatic Sterilization (Steam Cleaning)	This menu is used to eliminate smell soaked after cooking or warming.		
Turbo function for Glutinous rice	<ul style="list-style-type: none"> Pressing twice "Pressure Cook/Turbo" twice will switch to quick cooking and shorten the cooking time. (It takes about 14 minutes when you cook the Glutinous rice for 2 persons.) Use this turbo cooking function only for cooking rice for less than 6 persons. (The condition of the rice will not be good for more than 6 persons) The turbo cooking function is allowed up to 6 persons. If you soak the rice in water for about 20 minutes before cooking the rice and then cook the rice in turbo cooking course, the rice will taste good. 		

※ After white rice turbo and cooking small servings, discard the water within water gutter.

※ In case of white rice turbo and smaller servings cooking, more water may stay compared with other menu.

※ Please refer to the cooking guide (Refer to page 72~80)

How to do Automatic Sterilization (Steam Cleaning)

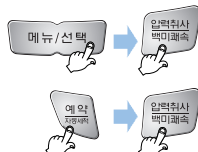

Put water until water scale 2, make sure to close and lock the cover.

Method 1, After choosing automatic cleaning menu by pressing "Menu/Select" button, and then press "Pressure Cook/Turbo" button.

Method 2. After choosing automatic cleaning function by pressing "Preset/AUTO CLEAN" button twice in standby mode, press "Pressure Cook/Turbo" button.

How to cook with Rinse free

- Put desired amount of Rinse free into the cooker body by measuring it with measuring cup, and pour water to meet glutinous water scale. (Rinse free can be cooked to min 2 servings to max 10 servings.)
- Stir evenly with scoop so Rinse free and water may mix properly, lock the cover, and after selecting Rinse free menu with Menu/Selection button, press Pressure Cook/Turbo button.

※ Note : Washed rice is cooked only with water poured with no separate washing, so they may experience the fine scorching phenomenon(melanoizing).

※ Note : Do not store washed rice in a humid place as it is vulnerable to humidity. In summer or rainy seasons, the rice may go bad or be inhabited by beetles, so when purchasing washed rice in the market, buy it by units of small pack.

Dried rice cook function

- If you cook long stored rice or dried rice, they could be half-cooked. If using the old rice menu, you can get better taste .
- The taste of rice will be different depending on storage of rice and water state.

※ you can add the "SOFT" time or "SWEET" time (Refer to page 48).

Melanoizing effect

The cooked rice can be light yellow at the bottom of the oven, because this product is designed to improve pleasant flavor and taste. Especially, melanoizing is more serious at the "Preset cooking" than just "Cooking".

It does not mean malfunction.

※ When mixing other rice with Glutinous, Melanoizing effect could increase more than "Glutinous cook" setting.

MY MODE (Cuckoo Customized Taste Function)



What is "MY MODE"?

- ▶ Cuckoo's patented technology based on variable circuit design. User can select the degree of "softness" and "glutinosity" & tastiness" to meet a user's desire.

MY MODE Function

- ▶ Longer "SOFT" Time : rice becomes soft and glutinous. (selectable in 4 steps)
- ▶ Longer "SWEET" Time : rice becomes tasty (selectable in 4 steps) [amelanizing will occur]
- ▶ Above 2 functions can be selected both or individually.

How to use "MY MODE"

To enter "Customized Rice Taste Setting Mode", select the menu in which Customized Rice Taste is supported such as glutinous rice, mixed rice, glutinous rice, GABA, mixed rice, dried rice, rinse free and press the mode button for 1 second or longer. Then, you are going to enter "Customized Rice Taste Setting Mode" while hearing the voice saying "You've entered Customized Rice Taste Setting Mode. Select swelling and heating stage with Selection button, and press Set button."

1 "MENU" setting screen



Select menu you want with menu/selection button and press the set button.

2 "MY MODE" setting screen



To enter Customized Rice Taste Setting Mode, select desired menu and press Mode button once for 1 second or longer.

- ▶ Menu/Selection button will blink, and Set, Pressure Cook and Cancel buttons will turn ON.

3 Soft time control mode



- ▶ Select desired swelling time by pressing the button.
- ▶ Set button will blink, and Pressure Cook, Cancel and Menu/Selection buttons will turn ON.

3-2 Sweet time control mode



- ▶ Select desired heating extension time by pressing the button, and press Set button.
- ▶ Set button will blink, and Pressure Cook, Cancel and Menu/Selection button will turn ON.

* Note: For 16 customized rice tastes, refer to the graph for 6 rice tastes. (See page 49.)

4 Setting completed screen after



Set up desired customized rice taste, and press Pressure Cook.

- ▶ If you press cancel or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.

How to Use Cuckoo Customized Cooked Rice Taste

You can set the major cooked rice taste of customized cooked rice taste by entering Customized Cooked Rice Taste mode and pressing Mode button. At each press of Mode button, the major cooked rice taste will show up in the sequential order 'Sticky Cooked Rice Taste -> Soft Cooked Rice Taste -> Soothing Cooked Rice Taste -> Soft and Soothing Cooked Rice Taste'.

1 "MENU" setting screen



Select a menu for which customized cooked rice taste is supported by pressing Menu/Select button.

2 "MY MODE" setting screen



Press Mode button once or more for 1 second or longer after selecting desired menu, and you will enter Customized Cooked Rice Taste mode.

3 Soft time control mode



Press Mode button once, and the display will change as in the figure. At this time, Soft Cooked Rice Taste 4th Step will be selected.

3-2 Sweet time control mode



Press Mode button two times, and the display will change as in the figure. At this time, Soothing Cooked Rice Taste 4th Step will be selected.

3-3 Soft and Sweet time control mode



Press Mode button three times, and the display will change as in the figure. At this time, Soft, Soothing Cooked Rice Taste will be selected.

4 Setting completed screen after



Set up desired customized rice taste, and press Pressure Cook.

- ▶ If you press cancel or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.




MY MODE (Cuckoo Customized Taste Function)

The display of my mode



This is a graph the flavors of 16 types of cuckoo custom-made rice

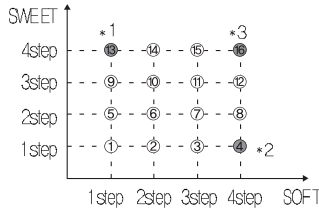

*1. The rice becomes solid and glutinous.

*2. The rice becomes soft and well-raised rice.

*3. The rice becomes soft and glutinous.

※ Note: Rice taste number from 1 to 16 will be displayed on the display window.

The stage mark will show up as in the figure above on the display as much as the time set during setting swelling time and heating maintenance time, and the mark will continue to show up during cooking, reservation, keeping warm and reheating as well.

▶ Cuckoo customized taste function is applied to glutinous, GABA, mixed, dried rice, rinse free.

※ **Set-up time is stored until the next reset. No need to set-up at every cooking.**

During cooking, warming and preset time cooking modes, "soft" and "sweet" time cannot be readjusted.

Cautions

1. 'MY MODE' function may influence scorching or cooking quality. Ensure that cooking time is not changed, by children.
※ Default settings for soft rice and sweet rice is "1step" sticky rice.
2. 'MY MODE' function may elongate cooking time according to set-up time.
3. Scorching of rice may occur by longest "SWEET" Time.

Cuckoo customized cooking function

While cooking you can control the heating temperature (both high and low) depending on, your preference.


Initialization is set up " " get step by step as the case may be.

- High step : for cooking cereals, old rice and soft-boiled rice.

- Low step : for cooking the year's crop of rice.

How to use Cuckoo Customized cooking function

If you press the mode button 5times, customized cooking function is setup. Select heating power by selection button. You can see all means with cuckoo customized cooking function on the display.

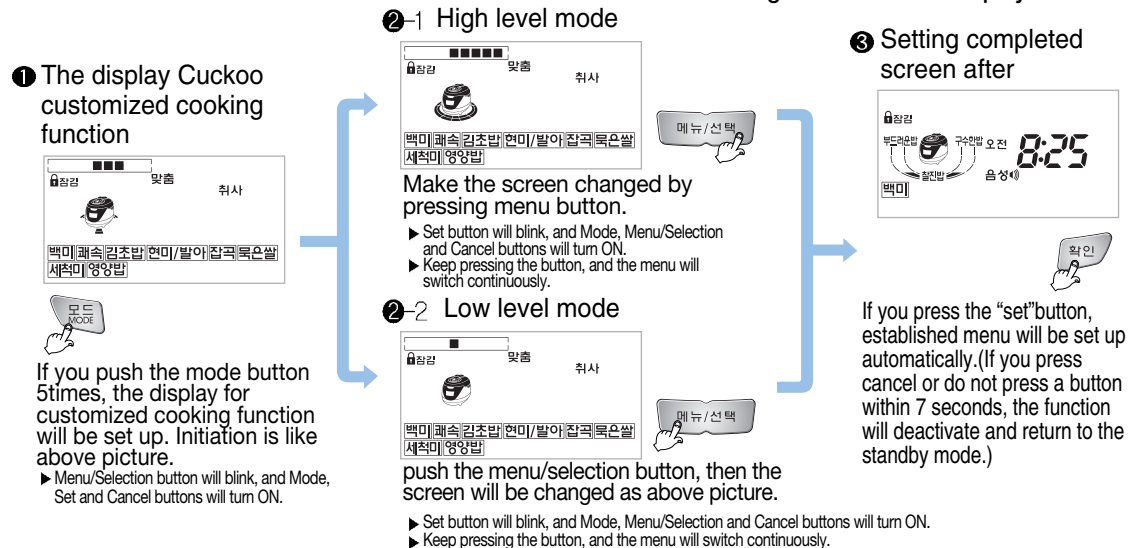

1. 'Cuckoo customized cooking function' applies to Glutinous, Turbo glutinous, Sushi, GABA, Mixed rice, Dried, Rinse free, nutritious rice collectively.
2. Set up the step of customized cooking function to taste. The scorch can occur when cooking in high step.
3. Cook is subject to be set differently depending on the percentage of water content and the condition of rice.




HOW TO USE “GABA (Brown rice)”

What is Germinated Brown rice?

- ▶ Brown rice has richer nutrients than polished rice. However, brown rice is rather tough and harder to be digested. By germination, the enzymes in the brown rice are activated, generating nutrients and become more digestible.

Tips to Buy Quality Brown Rice

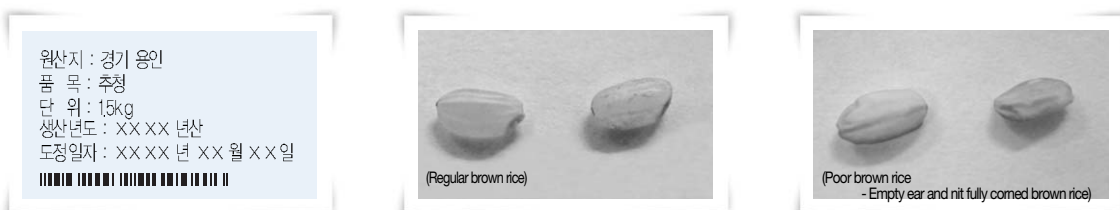


- ① Check the dates of harvest and pounding.
 - ▶ The dates should be within 1 year from harvest, 3 months from pounding.
- ② Inspect rice with your eyes.
 - Check that embryo is alive
 - Rice surface should be light yellow and glazing. Whitely stirred up surface, or darkish colored Brown rice is not suitable for germination
 - Avoid fractured, not fully corned, or empty ear's. Empty ear's may generate odors during germination and bluish- nor corned Brown rice cannot be germinated.

Features of Germinated Brown rice

Germinated Brown rice increases nutrients and enhances taste which is a weak point of brown rice. Germinated Brown rice also improves digestion.

- ▶ Taste will be greatly enhanced.
- ▶ Digestive and rich in nutrients.
 - Diabetic hormone is generated improving digestion.
- ▶ Good as a health food for children or students.
 - Rich with dietary fiber.
- ▶ Germinated brown rice has rich GABA (Gamma Amino Butyric Acid)
 - GABA promotes metabolism in liver and kidneys, suppresses neutral fat, lowers blood pressure, promotes metabolism in brain cells - these effects have been proven by medical science.

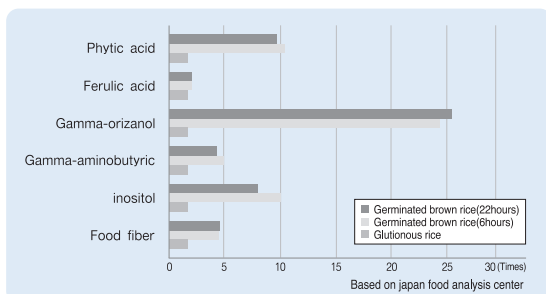

< Comparison of Germinated brown rice's nutrition and Glutinous rice's (6 hours) nutrition. >

- ▶ Phytic acid 10.3Times
- ▶ Ferulic acid 1.4Times
- ▶ Gamma-orizanol 23.9Times
- ▶ Gamma-aminobutyric 5Times
- ▶ Inositol 10Times
- ▶ Food fiber 4.3Times



HOW TO USE “GABA (Brown rice)”


Using “GABA” Menu

- 1 In order to promote germination, soak brown rice for 16 hours in water.

Method of Pre-germination

- ▶ Put washed brown rice in an appropriate container, pour sufficient water to soak the rice.
- ▶ Pre-germination shall not exceed 16 hours. Make sure to wash rice clean with flowing water before using “GABA” menu. Be careful that hard washing may take off embryos which generate the germination.
- ▶ Unique smell may be generated according to the soaking time of pre-germination.
- ▶ When pre-germination has been completed, wash the rice and put in inner pot (Oven). Pour appropriated volume of water, and use “GABA” menu.
- ▶ In summer or hot temperature environment odor may be generated. Reduce germination time and wash clean when cooking.

- 2 Set the Lock/Unlock handle at “Lock”, press “Menu Selection” button to select “GABA”.

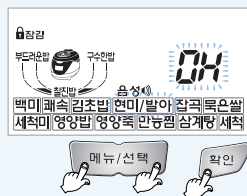

※ First setting time 0H(0 Hours)

- ▶ When the “GABA” is selected, “0H” is indicated in the display.
- ▶ Set button will blink, and Mode, Menu/Selection, Cancel and Pressure Cook buttons will turn ON.

- 3 Press “Set” and “Menu Selection” buttons to set time.


1. Pressing “메뉴/선택” button changes germination time by 2 hours.

2. Pressing “메뉴/선택” button changes germination time by 2 hours.

3. “GABA” time can be set up by 0, 2, 4, 6 hours.

☞ If GABA time is set “0” hours, pressing “Pressure Cook” button will start cooking immediately.
To cook without germination or cooking germinated Brown rice, set the time at “0”.

- 4 Press “Pressure Cook/Turbo” button.

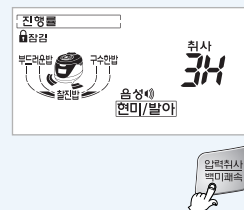

※ 3 more hours for germination

- ▶ If ‘Pressure Cook/Turbo’ button is pressed or ‘Set’ button is pressed after ‘Pressure cook/Turbo’ button is pressed, GABA germination for given time will begin and rice cooking will start right after the germination process.
- ▶ During “GABA” mode, “cook” indicator will show the remaining time and will be displayed in minutes with the “3H” mark going around clockwise.

Precautions for “GABA” Cooking


- 1 If smaller germ is preferred, omit pre-germination process. Select “GABA” menu, set-up appropriate germination time, and start cooking (nutrient ingredients do not vary significantly by the size of germ).
- 2 During hot seasons, longer germination time may generate odor. Reduce germination time.
- 3 GABA cooking is allowed up to 6 persons.
- 4 City water can be used for germination. However, spring water is recommended. Germination may not be properly performed in hot or boiled water even after cooling.
- 5 Germination rate, germ growth may differ by the Brown rice type, condition or period of storing, etc.
 - Germinated brown rice is sprouted brown rice. Germination rate and growth may differ by the Brown rice type. The brown rice should be within 1 year from harvest, and not long since pounded.
- 6 In GABA mode, preset on 4H, 5H, 6H may not be possible. If you want to preset the GABA, set up ‘’.(See the page 53)
- 7 The taste of rice could be different as depending on a kind of brown rice. Use customized taste function or control the amount of water for your taste. (Refer to page 48~49)

HOW TO COOK THE MULTI-COOK



How to use the Multi-cook and preset the time

1 Turn the top handle to "Lock," press menu to select the Multi-cook.

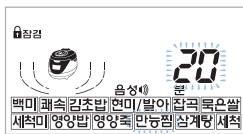

- ▶ Set button will blink, and Menu/Selection, Cancel and Pressure Cooking buttons will turn ON.
- ▶ When selecting Multi-cook, the display indicates cooking time to be 20 minutes.

2 Press "Set", "Menu/Selection" button to set up the time.

It says after setting cooking time with selection button press the cook button.

- ▶ Menu/Selection button will blink, and Cancel and Pressure Cooking buttons will turn ON.

1.



Each time you press "Menu/Selection" button, the time increases 5 minutes. (After 90min, each 10min increase.)
▶ To switch the functions continuously, keep pressing the button.

2.



Each time you press "Menu/Selection" button, the time decreases 5 minutes. (After 90min, each 10min decrease.)
▶ To switch the functions continuously, keep pressing the button.


3. Available setting time is 10 ~ 120 minutes. (Please refer to cooking guide for time setting of each menu.)

4.



If you press the yes button after choosing time you want it says "press cook or tineer button"

3 Press "Pressure Cook" button.

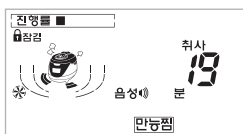

- ▶ Pressure Cook button will blink, and Menu/Selection and Cancel buttons will turn ON. Press the Pressure Cook/Turbo button and the Multi-cook will start. If the Multi-cook starts, the display shows the 'cooking mark' and remaining minutes.

4 Use the preset time of Multi-cook as following instruction.

1. Check the present time.

2. Turn the Lock/Unlock handle to "Lock" and press the "Timer" button.



3. Press the Menu/Selection or Min/Heat to preset time.



4. Press menu selection button to select the Multi-cook.



5. Set up the cooking time for pressing menu selection button, Min/Heat button.



6. Press the "Timer" or "Pressure Cook".





HOW TO PRESET TIMER FOR COOKING

How to preset timer for cooking

How to use timer function

1 Check if the current time and the menu are correct.

- ▶ Refer to page 42 for the time setting.
- ▶ If the current time is not set correctly, the presetting time will also be incorrect.
- ▶ Make sure not to confuse AM and PM.



2 Press the “Preset/AUTO CLEAN” button.


- ▶ If you press 'Preset/AUTO CLEAN' button once, 'Preset1' mode will be activated. If you press the button twice, 'Preset2' mode will be activated.
- ▶ The default time of 'Preset1' is AM 6:30 and 'Preset2' is PM 7:00.
- ▶ If you push timer button, timer screen will be blinked.
- ▶ In GABA mode, preset on “” is possible.

※ If you want to preset “Timer” while keeping warm, cancel keep warm and preset the “Timer”



3 Preset the time.

- ▶ “Set” button will blink, and “Menu/Selection”, “Cancel” and “Pressure Cook” buttons will turn ON.
- ▶ In case of setting up timer while warming 10min increase by pressing “” button
- ▶ Please set up timer after canceling warming 10min decrease when you press “” button

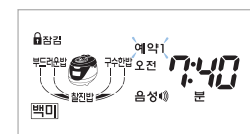


When preset time is set to AM07:40

If you keep pressing, It can be changed continuously.

※ Please be careful not to change from AM to PM.


4 Select menu with “Menu/Selection” button

- ▶ If you select “Timer” menu with selection button, it says “Please, press the “Cook/Turbo” button.
- ▶ “Set button” will blink, and “Menu/Selection”, “Pressure Cook” and “Cancel” buttons will turn ON.
- ▶ In case of menu with “Customized Rice Taste” such as glutinous rice, mixed rice, GABA, old rice, nu rung ji and washed rice, “Mode” button will turn ON.

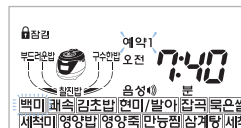

5 Press “Pressure Cook” button.

- ▶ “Pressure Cook” button will blink, and “Menu/Selection” and “Cancel” buttons will be turned ON.
- ▶ It says that preset cook for glutinous is booked
- ▶ Preset cook will be completed at the timer
- ▶ Once cook is completed with preset time, preset time is stored in the memory. Don't need to set up time again.
- ※ If a small amount of rice is cooked, cook could be finished earlier than time you set up.

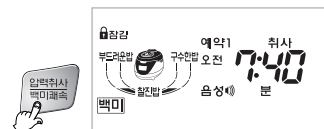



HOW TO PRESET TIMER FOR COOKING

Precautions for preset cooking

1 In case of preset cooking

- ▶ If the rice is old and dry, the result of the cooking may not be good
- ▶ If the rice is not well cooked, increase the amount of water by about half-scale.
- ▶ If the preset time is longer, melanoizing effect could be increased.
- ▶ Washed rice included precipitated starch, scorching may occur in case of preset cook.
To reduce scorching, cook washed rice by rinsing in running water or reduce cooking amount.

2 The change of preset time

- ▶ Press "cancel" button for more than 2 seconds and restart it to change the preset time.

3 In case preset time is shorter than cooking time in the following table, cooking starts immediately

- ▶ If set time is shorter than presettable time, cooking will start immediately.

4 In case the preset time is over 13 hours.

- ▶ "13Ho" will be displayed and the preset time will be changed to 13 hours automatically.
- ex) If cooking is preset to AM07:00 of the following day at PM5:00 of the day, where preset time is 14 hours, "13Ho" will be displayed, and preset time automatically changes to AM06:00. (Preset time is 13 hours)
- ※ If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours because the rice spoils easily during the summer time
- ※ When you want to finish presetting P.M 12:00, preset P.M 12:00
- ※ Use this function when you want to finish cooking between 1 hour to 13 hours based on the preset time
- ※ If you press the set button to check the present time during the preset cooking function, the preset time will be displayed for 2 second.



Possible time setting for each menu

Menu Class	Glutinous	Turbo Glutinous Rice	Sushi	GABA	Mixed Rice	Dried Rice	Rince Free	nutritious rice	Porridge	Multi Cook	Chicken Soup	Automatic Sterilization (Steam Cleaning)
Possible time Setting	From (37minutes + My mode) to 13 hours	From 22minutes to 13 hours	From 49minutes to 13 hours	From (58minutes + My mode) to 13 hours	From (50minutes + My mode) to 13 hours	From (43minutes + My mode) to 13 hours	From (40minutes + My mode) to 13 hours	From 35minutes to 13 hours	From 74minutes to 13 hours	From (setting time + 1minutes) to 13 hours	71minutes to 13 hours	From 20minutes to 13 hours



TO KEEP COOKED RICE WARM AND TASTY

Having a meal

- ▶ If you want to have warm rice, press the “Reheat/keep” warm. Then “Reheat/Keep” warm function will be started and you can eat fresh rice in 9 minutes.

<Keep warming>



34 indicates the time elapsed as warming time.

<Reheating>



The lamp blinks and “0” indicator will show the reheat remaining time displayed in minutes with the mark going around clockwise.

<Finishing reheat>



When the reheat finishes with the beep sound, keep warming function will be operated and show the time elapsed.

<Present warning temperature>



“Intensive reheating” mode is available to avoid discolored, dried, or sour smelling rice. The mode can be set/cancel by pushing “Keep warm/Reheat” button then ‘Set’ button in the ‘Customized reheating’ setting mode. (Please refer page 56.) Please set the mode as needed. (Default option is set to the normal reheating mode.)

※ If you change the present time during warming, see the page 42.

- ▶ The frequent use of the “Reheat” function may cause the cooked rice to be discolored or dried. Use it once or twice per day.
- ▶ If a separate heating appliance or gas burner is used to cook rice, put the cooked rice into the cooker and press the “Keep Warm/Reheat” button to keep the rice warm. At this time, “34” is shown on the display. (Like this, transferring hot rice to a cold cooker may cause the rice to be discolored or develop an odor)
- ▶ After 24 hours of heat preservation, the lamp of heat preservation time lapse blinks, indicating that long time has passed in heat preservation condition.
- ▶ In case the lid combining hand grip is in open status during heat preservation, the cooker does not go for reheating. For reheating, lock the lid combining hand grip to (Locked) position, and then press Keep warm/reheat button.
- ▶ If the lid combining hand grip is turned to open status during reheating, function display will show “E01”. At this time, reheating will be cancelled, and heat preservation will proceed.

Cautions for Keeping Warm

It would be hard to open the lid during warming or finished cooking right after, therefore at this time pull the pressure weight aside once and exhaust the steam perfectly.

Make sure the handle must be located on “Lock” during warming or reheating.

It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm)

Do not keep the scoop inside the pot while warming the rice. When using a wooden scoop it can create serious bacteria and odors.

It would be better to warm the rice for less than 12 hours because of odors and color change.

The cooked rice, which cooked by pressure cooker is more prone to changing color than the rice cooked by general cooker.

During warm mode, the rice can arise and turn white and rise. In this case, mix the rice.

The mixed and brown rice cannot be in such good condition as white rice while in warm function due to their characteristics. Therefore do not keep mixed and brown rice in function for a long period of time.


Do not mix small amount of rice or leftovers with the rice under keeping warm. Doing so may cause an odor. (Use a microwave oven for the cold rice.)

TO KEEP COOKED RICE WARM AND TASTY



Controlling method of warming temperature

If the temperature in the oven is not proper, it smells bad and changes rice color even though it is cleaned frequently and boiled up. Temperature needs to be set.

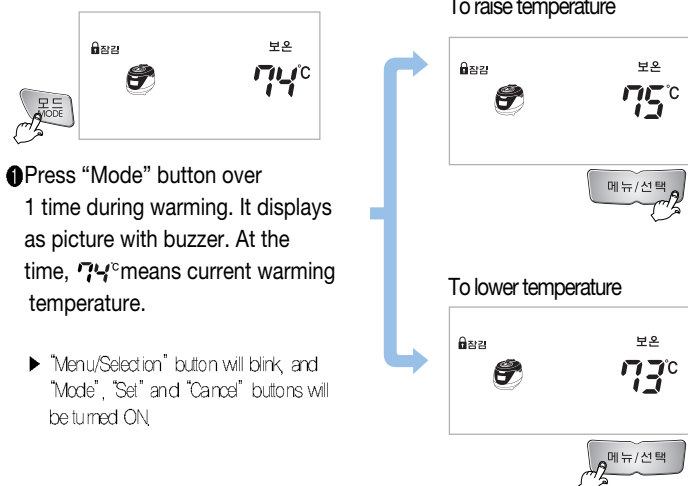

- 1 Press "Mode" button over 1 time during warming. It displays as picture with buzzer. At the time, 74°C means current warming temperature.

▶ "Menu/Selection" button will blink, and "Mode", "Set" and "Cancel" buttons will be turned ON.

※ Note: The reference temperature programmed when the product is shipped may differ from the Instruction.

- 2-1 Press "Hour/up" button to change the temperature as 74°C → 75°C → 76°C → 77°C → 78°C → 79°C → 80°C

▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
▶ To switch the functions continuously, keep pressing the button.

- 3 After setting temperature, press "Mode" select button. Preset temperature will be stored with buzzer sound. (It will be cancelled once press "Cancel" button or after 7 seconds without pressing any button.)

- 2-2 Press "Minute/Down" button to change the temperature as 74°C → 73°C → 72°C → 71°C → 70°C → 69°C


▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
▶ To switch the functions continuously, keep pressing the button.

Change of temperature

1. When you smell bad odors and the rice is too watery : The keep warm temperature is too low. In this case, increase the "Keep Warm" temperature by 1~2°C.
2. When the rice has a yellowish color or is too dry : The keep warm temp is too high. In this case decrease the "Keep Warm" temperature by 1~2°C.

How to operate My Mode function.

Use it while opening the lid when there is too much water or rice becomes too soft.

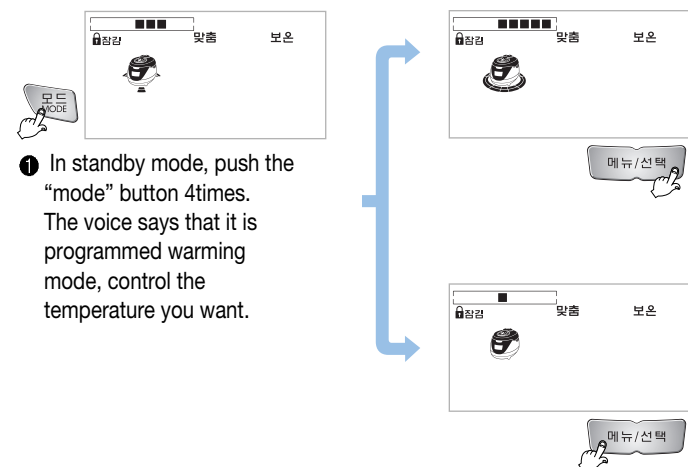

- 1 In standby mode, push the "mode" button 4 times. The voice says that it is programmed warming mode, control the temperature you want.

- 2-1 Press "Menu/choice" button to change as the picture(up)

▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
▶ To switch the functions continuously, keep pressing the button.

- 3 Select the menu you want, then the press the "My Mode" button and set-up time will be automatically entered with a buzzer. (If you press the "Cancel" button or do not press a button within 7 seconds, the function will be cancelled and returned to standby mode.)

- 2-2 Press "Menu/choice" button as the picture(down)

▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
▶ To switch the functions continuously, keep pressing the button.

1. If too much water is spilled out when you open the lid : Press "Menu/Selection" button to raise the setting mode.
2. If the edge of rice is too soft : Press "Menu/Selection" button to reduce the setting mode.



TO KEEP COOKED RICE WARM AND TASTY

How to activate “Sleeping” mode.

- ▶ When keeping rice warm for a long time, set up the temperature low to prevent the following quality of rice: smelly, dry, change of color; from PM10:00 ~ AM 04:00.

▶ How to set up



1. Hold “the mode” button for one second, then press the “mode” button 6times to set up sleeping mode. If sleeping mode is not shown, keep on pressing the “mode”button until it is heard or displayed.
2. When you are in sleeping mode, it says “After selecting or canceling sleeping mode, press the set button.” At this time, Menu/Selection will blink, and the Mode, Set, and Cancel will turn on.
3. Press the “Menu/Selection” button until you hear or see “Sleeping mode”, then Press set. You will see nothing surrounding the rice cooker on the screen.
4. In the Sleep/Warm mode, if you press the Cancel button, the Voice message will state: “Time is over. The function setting has been canceled.” If no button is pressed for more than 7 seconds, you’ll return to the Standby mode.

▶ How to release



1. Hold “the mode” button for one second, then press the “mode” button 6times to set up sleeping mode. If sleeping mode is not shown, keep on pressing the “mode”button until it is heard or displayed.
2. When you are in sleeping mode, it says “After selecting or canceling sleeping mode, press the set button.” At this time, Menu/Selection will blink, and the Mode, Set, and Cancel will turn on.
3. Press the “Menu/Selection” button until you hear “Sleeping mode has been canceled”, then Press set. You will see rings around the rice cooker on the screen.
4. In the Sleep/Warm mode, if you press the Cancel button, the Voice message will state: “Time is over. The function setting has been canceled.” If no button is pressed for more than 7 seconds, you’ll return to the Standby mode.

- ▶ If you need to keep the rice warm during sleeping, do not use this function. This function makes the rice cooler than normal. In summer, the rice can be spoiled and may smell bad because of high temperature. If possible, do not use the “Custom-made warming” mode while sleeping.
- ▶ This function is set up as cancel state.

When odors are rising during the warming mode

- ▶ Clean the lid frequently. It can cause bacteria and odors.
- ▶ Even though exterior looks clean, there might be germs and it can cause odor so please be sure to use automatic sterilization (steam cleaning) menu for cleaning. Clean the inner pot completely after automatic cleaning function is done. (refer to 39)
- ▶ After you cook soups and steamed dishes, clean the inner pot properly to prevent rice from smelling.

HOW TO USE POWER SAVING FUNCTION




What is power saving of “Standby” mode?

- ▶ A little electricity is wasted if power cord is not plugged in. It is called manual way as standby electric power. The power saving of “Standby” mode is technology which minimises electricity consumption.

Manual Method

▶ How to start power saving

Push Cancel button for 3seconds at waiting state saving power function is set up.

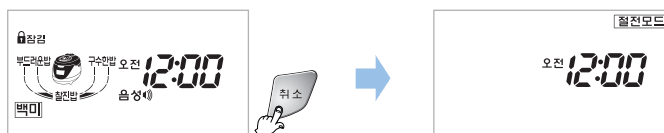

▶ How to end power saving

method 1) Push any button then it will be returned to waiting mode.

method 2) If lid handle is turned to open or close, power saving mode will be canceled and back to waiting state.




Automatic Method

If the standby time is chosen as a number without "0" at the automatic power saving mode, the automatic saving power function will be operated.

If you move lid handle or push any button before passing waiting time, the waiting time which is reduced will go back to the setting.

▶ How to set up

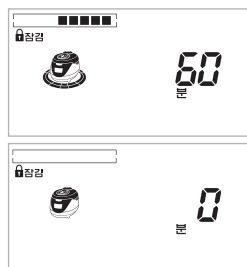

1. If you “Push” mode button 7times at the standby state, automatic power saving mode is set up.
2. When automatic power saving mode is set up, it says that this is automatic power saving mode. Press the "Set" button after selecting waiting time.
3. If you select '0' minute with “Menu/Selection” button. automatic power saving will be canceled. After setting up waiting time you want, press the "Set" button.
4. Without pressing any button within 7seconds or pushing “Cancel” button. Automatic power saving function will be canceled and back to waiting mode



HOW TO LOCK BUTTONS

How to set Lock buttons

- ▶ Lock can be set for touch button to prevent malfunction during cleaning with touch button or by children touch.

▶ Setting Method



1. Button will be locked if "Set" button is pressed for 3 seconds or longer during cooking, presetting, warming, reheating or in standby condition.
2. When button is locked, a voice will sound saying "Button lock is selected." At this time, button lock is displayed on the screen.

▶ Cancelling Method






1. To cancel button lock, press "Set" button for 3 seconds or longer on locked the button.
2. "Lock" sign on the display disappears when button lock is cancelled, a voice will be saying "Button lock is cancelled."

- ※ Note : Any button other than "Set" button is pressed while button lock is set, buzzer will sound.
- ※ Note : Desired function can be set after cancelling button lock by pressing "Set" button for 3 seconds or longer.
- ※ Note : Button lock function is cancelled automatically when the power is off even though the button lock function is already set.

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer.
Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the rice is not cooked.	<ul style="list-style-type: none"> • Pressure “Cook/Turbo” button is pressed? • Is there power cut while in cooking? 	<ul style="list-style-type: none"> • Press the “Pressure Cook” button once. And check “ ” sign on the display. • Re-press the “Pressure Cook/Turbo” button.
When the rice is not well cooked.	<ul style="list-style-type: none"> • Did you use the measuring cup for the rice? • Did you put proper amount of water? • Did you rinse the rice before cooking? • Did you put rice in water for a long time? • Is the rice old or dry? 	<ul style="list-style-type: none"> • Refer to page 44. • Add water about half the notch and then cook.
Bean(other grains) is half cooked.	<ul style="list-style-type: none"> • Is bean (other grains) too dry? 	<ul style="list-style-type: none"> • Soak or steam beans and other grains before cooking in the pressure cooker in order to avoid partially cooked beans or grains. Beans should be soaked for-2-minutes or steamed for-2-minutes prior to cooking, depending on your taste.
Rice is too watery or stiff.	<ul style="list-style-type: none"> • Is the menu selected correctly? • Did you properly measure water? • Did you open the top cover before cooking was finished? 	<ul style="list-style-type: none"> • Select the correct menu. • Properly measure water. • Open the top cover after cooking finished.
When the water overflows.	<ul style="list-style-type: none"> • Did you use the measuring cup? • Did you use proper amount of water? • Is the menu selected correctly? 	<ul style="list-style-type: none"> • Refer to page 44.
When you smell odors while warming.	<ul style="list-style-type: none"> • Did you close the top cover? • Please check it the power cord is plugged. • Did it warm over 12 hours? • Is there any other substance such as rice scoop or cold rice? 	<ul style="list-style-type: none"> • Close the top cover perfectly. • Always keep the power on while warming. • As possible, keep warming time within 12 hours. • Don't warm rice with other substance.
“  ”, “  ” signs show up. “  ” signs show up.	<ul style="list-style-type: none"> • Temperature sensor or fan motor does not work properly. 	<ul style="list-style-type: none"> • Unplug the power cord and call the Service center.
Warming passed time mark blinks during keeping warm	<ul style="list-style-type: none"> • 24 hours has not passed yet after keeping warm 	<ul style="list-style-type: none"> • This function alarms if the rice remained warm for more than 24 hours.
Rice has gotten cold or a lot of water flow during keeping warm	<ul style="list-style-type: none"> • Keeping warm was set in “Sleeping” mode 	<ul style="list-style-type: none"> • Keep warm after cancelling or setting “Sleep Keeping Warm” mode depending on the necessity
If “  ” sign is appears.	<ul style="list-style-type: none"> • It shows on the display when pressing “Start” button again, or when the cooking has finished and you’ve never turned the handle to ‘Unlock’. 	<ul style="list-style-type: none"> • It can be solved by turning handle to ‘Unlock’ and then turn to ‘Lock’.
“  ” sign shows up	<ul style="list-style-type: none"> • Detachable cover is not mounted 	<ul style="list-style-type: none"> • Mount detachable cover. (See page 41) • If “” sign is displayed continuously even though you already installed detachable cover, please contact customer service.
Alarm sounds or reheating does not work while keeping warm	<ul style="list-style-type: none"> • Detachable cover is not mounted 	<ul style="list-style-type: none"> • Mount detachable cover. (See page 41)

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the button cannot operate with “  ”	<ul style="list-style-type: none"> • Is the inner pot inserted? • Check the rated voltage? 	<ul style="list-style-type: none"> • Please insert inner pot. • This product is 220V only.
When the Pressure “Cook/Turbo” Timer button does not operate with “  ”	<ul style="list-style-type: none"> • Did you turn the Lock/Unlock Handle to “Lock” • Is “pressure” lamp on? 	<ul style="list-style-type: none"> • Please turn the “Lock/Unlock” handle to “Lock”.
When the rice is badly sticky.	<ul style="list-style-type: none"> • Is there any rice or any other alien substance on the temperature sensor or the bottom surface of the inner pot? 	<ul style="list-style-type: none"> • Clean all the alien substance on the temperature sensor or the bottom surface of the inner pot.
When “  ” is showed on the LCD	<ul style="list-style-type: none"> • Check the rated Voitage? 	<ul style="list-style-type: none"> • Cut the power and contact customer service. • It is normal to get “” when putting only water. • This is only for 220V.
When the time cannot be preset.	<ul style="list-style-type: none"> • Is the current time correct? • Is AM or PM set properly? • Did you set the reservation time over 13 hours? 	<ul style="list-style-type: none"> • Set the current time. (Refer to page 42) • Check the AM and PM. • Maximum reservation time is 13 hours. (Refer to page 53~54)
When you smell after and before cooking?	<ul style="list-style-type: none"> • Did you clean it after cooking? 	<ul style="list-style-type: none"> • Please clean it after cooking.
When the top cover cannot be closed.	<ul style="list-style-type: none"> • Is the inner pot correctly inserted in the main body? • Is the Lock/Unlock handle on the top cover set to “Lock”? • Is there hot food in the inner pot? 	<ul style="list-style-type: none"> • Please put in the inner pot perfectly. • Please turn the “Lock/Unlock” handle to “Lock”. • Pull the pressure handle to aside once.
When “  ”, “  ” are shown on the LCD by turns.	<ul style="list-style-type: none"> • Micom power is out. 	<ul style="list-style-type: none"> • Please cut the power and contact customer service.
When “  ”, “  ” are shown on the LCD by turns.	<ul style="list-style-type: none"> • The sensor is broken. 	<ul style="list-style-type: none"> • Please cut the power and contact customer service.
“  ” sign is displayed during the cooking, warming/reheating, or preset process is activated.	<ul style="list-style-type: none"> • Is there inner pot in the product? 	<ul style="list-style-type: none"> • Please insert inner pot • If the sign continuously displayed, cut the power and contact customer service.
“  ” or “  ” mark shows up during the product operation		<ul style="list-style-type: none"> • This function checks to see if power or product has abnormality. If the mark shows up continuously, contact customer service.

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When cannot turn to "Unlock".	<ul style="list-style-type: none"> • Did you turn the "Lock/Unlock" handle while cooking? • Did you turn the "Lock/Unlock" handle before exhausting steam perfectly? 	<ul style="list-style-type: none"> • Don't open the top cover while cooking. If you want to open top cover while cooking, press the "Cancel" button more than 2 seconds and exhaust the steam. • Pull the pressure handle to aside once and exhaust the steam perfectly.
When the top cover cannot open although the Lock/Unlock handle is turned to "Unlock".		<ul style="list-style-type: none"> • Because of the pressure. • Pull the pressure handle to aside once and exhaust the steam perfectly.
When the steam exhausted between the top cover.	<ul style="list-style-type: none"> • Is there an external substance on the packing? • Is packing too old? 	<ul style="list-style-type: none"> • Clean the packing with duster. • Keep the packing clean. • If the steam is exhausted through the top cover, please power off and contact the service center and dealer. • Packing life cycle is 12 month, please replace the packing per 1 year.
When the "Cancel" button does not operate while cooking.	<ul style="list-style-type: none"> • Is the inner pot hot? • Is currently the setting to lock mode? 	<ul style="list-style-type: none"> • Keep pressing the "Cancel" button for 2 seconds for safety reason if you want to cancel while cooking. • Be careful of hot steam emission or hot contents spattered from the automatic steam outlet during cancellation. • Please press "Set" button for over 3 seconds to release.
When you hear weird noises during cooking and warming	<ul style="list-style-type: none"> • Is there a wind blowing sound when cooking the rice? • Is there a "Chi" sound when warming the rice? 	<ul style="list-style-type: none"> • This is the sound of the fan motor to cool the internal parts. This is normal. • The "Chi" sound during the warming process is the sound of IH cooker operating. This is normal.
Brown rice is not germinated properly	<ul style="list-style-type: none"> • Does the amount of rice exceed the specified maximum capacity? • Is the brown rice too old? 	<ul style="list-style-type: none"> • Put the specified maximum capacity of brown rice. • Old rice or contaminated rice may not be germinated properly. (Refer to page 50)



COOKING GUIDE

Tasty Rice

:: Boiled Rice



Ingredients

Rice 4 cups

*The "cup" in ingredients means a measuring cup in the rice cooker, 1 cup (180cc) is for one person.

Recipe

- 1 Put clean-washed rice in the inner pot and pour water by water graduation 4.
- 2 Firstly, lock the cover, and select **Glutinous** in the menu, and then push the **Pressure Cook/Turbo** button.
- 3 Mix rice when cooking is finished.

Reference

According to gradation on the inside of inner pot, when cooking with newly harvested rice the amount of water should be less than the gradation, and when cooking with old rice the amount of water should be more than gradation. (Control the amount of water according to preference of each family)

:: Pea Rice



Ingredients

3 cups of rice, 1/2 cup of pea, 1 tablespoonful of sake, 1.5 teaspoonful of salt

*Boil pea before cooking.

Recipe

- 1 As for peas add salt into them, wash them clean and extract water from them.
- 2 Put cleanly washed rice into My Caldron, season them with sake and salt, and pour water up to white rice water graduation 3.
- 3 Place peas on top of them, press MENU button after locking the lid, select **Glutinous**, and press **Pressure Cook/Turbo** button.
- 4 When the cooker comes to Heat Preservation mode, mix the cooked grains properly.

Store peas as follows

If peas and kidney beans etc are stored in the refrigerator, they change in color and decrease in freshness fast. Therefore, immediately after getting the materials from the market, blanch them slightly, place them in the refrigerator, and whenever they are needed, take them out to use them in natural color and freshness

:: Boiled Barley



Ingredients

2 cups of rice, a cup of barley

Recipe

- 1 Prepare boiled barley with a cup of barley.
- 2 Wash rice clean, and after putting it in My Caldron along with boiled barley, pour water up to white rice water graduation 3.
- 3 Lock the lid, press MENU button, and after selecting **Mixed rice**, press **Pressure Cook/Turbo**.
- 4 Once the cooker comes to Heat Preservation mode, mix the cooked grains properly.

Mixed Rice

:: Five-grain Rice



Ingredients

Rice 1.5cup, millet 1/3cup, glutinous rice 1/2cup, red beans 1/3cup, sorghum 1/3cup and salt 1 teaspoon

Recipe

- 1 Wash rice, glutinous rice, millet and sorghum clean and scoop them with a landing net.
- 2 Boil red beans on high heat, and then put only water in which red beans were boiled in another bowl.
- 3 Put rice, glutinous rice, millet and sorghum on a landing net into the inner pot and pour water in which red beans were boiled and water by white rice water graduation 3.
- 4 Put the boiled red beans and then lock the cover. After select **Mixed rice** in the menu, push the **Pressure Cook/Turbo** button.
- 5 Mix rice when cooking is finished.

Reference

Oriental medicine calls red beans as Jeoksodu which holds moisture, removes steam and discharges accumulated pus as well as relieving edema by making thirst and diarrhea stopped and bladder empty.

:: Boiled Fresh Germinated Brown Rice



Ingredients

Brown rice 4 cups

Recipe

- 1 Put washed brown rice into the inner pot, and then put it into the inner pot and pour water by water graduation.
- 2 After locking the cover and choosing **GABA** in the menu, push the button of **Pressure Cook/Turbo** button after setting up the time of germinated brown rice for 3 hours.
- 3 Mix rice when cooking is finished.

Reference

- Control the time of germinated brown rice according to each preference.
- When cooking with germinated brown rice set up germinating time for 0 hour if you want to have 100% boiled brown rice without germination.

:: Boiled Brown Rice with Red Beans



Ingredients

Brown rice 1 cup, rice 2 cups and red beans 1/3 cup

Recipe

- 1 Boil red beans until it become soft, but not to break the shape of red beans and separate it from water.
- 2 Wash brown rice clean and put it in the inner pot. Put the boiled red beans after pouring water by germinated brown rice water "scale 3".
- 3 After locking the cover and choosing **GABA** in the menu, push **Pressure Cook/Turbo** button after setting up the time of germinated brown rice for four hours.
- 4 Mix rice when cooking is finished.



Well-being Boiled Rice

Green Tea Rice Blended with Chicken Chest Flesh



Ingredients

2 cups of brown rice, 3g of green tea leaf, 10g of green tea powder, 4 nuggets of chicken chest flesh, a little bit of olive oil, a little bit of salt, a little bit of pepper, 5g of celery, a little bit of lime, a little bit of rosemary

Recipe

- 1 Wash brown rice clean, put the brown rice into My Caddion along with 10g of green tea powder and 3g of green tea leaf, and pour water up to brown rice water graduation 2.
- 2 Lock the lid, press MENU button, and after selecting GABA and setting Germinated Brown Rice Time to 4 hours, press Pressure Cook/Turbo button.
- 3 Pickle chicken chest flesh in salt and pepper for 1 hour or so, put olive oil in the pan, and after frying the flesh in the pan, slice it thin.
- 4 Prepare lime by slicing it in half moon shape, and prepare shredded celery.
- 5 When the cooker comes to heat preservation mode, mix the cooked grains properly, and after placing germinated brown rice and chicken chest flesh in the vessel, add lime and celery.

10 Long Points of Green Tea

Anticarcinogenic property, anti-aging effect, prevention of lifestyle disease, prevention of obesity and diet, detoxication of heavy meals and nicotine, recovery from fatigue and removal of hangover, treatment of constipation, prevention of caries, prevention of acidification of constitution, inhibition of inflammation and bacterial contagion.

Saessak Bibimbap (rice with sprout and vegetables)



Ingredients

2 cups of brown rice and some sprouts and vegetables
Seasoning red pepper paste: Red pepper paste 1/2 cup, beef (crushed) 40g, sesame oil 1 tablespoon, honey 1 tablespoon and sugar 1 tablespoon

Recipe

- 1 Wash brown rice clean, put it into the inner pot and pour water by germinated brown rice water scale 2.
- 2 After locking the cover and choosing GABA in the menu, push Pressure Cook/Turbo button after setting up the time of germinated brown rice for 4 hours.
- 3 Pour sesame oil in a pot and stir-fry the crushed beef. Stir-fry it a little more after stirring it up with red pepper paste and water 1/8 cup in order to be thickened and putting sugar, honey and sesame oil.
- 4 After stirring up rice when it is changed to heating mode, put the prepared sprouts and vegetables on germinated brown rice.
- 5 Put red pepper paste on the above so that sprouts may not be in disorder.

■ Broccoli sprout: Prevention of cancer

■ Chinese cabbage sprout: Good at stomach and improve constipation

■ Turnip sprout: improve hepatitis and jaundice

■ Cabbage sprout: include selenium preventing aging and cancer

■ Daikon sprout: Lower heat and make the swelling subside

■ Wheat sprout: purify blood

Mushroom Tian



Ingredients

2 cups of brown rice, 20g of brown gravy sauce, a little bit of salt, 2 sheets of sesame leaves, 1/3 pieces of pumpkin, a pack of shimeji mushroom

※ Mushroom may be chosen as preferred in the family.

Recipe

- 1 Wash brown rice clean, put it in My Caddion, and pour water up to germinated brown rice water graduation 2.
- 2 Lock the lid, press MENU button, select GABA, and after setting germinated brown rice time to 3 hours, press Pressure Cook/Turbo button.
- 3 Chop pumpkin small, and fry them slightly after adding salt.
- 4 Mix mushroom with brown gravy sauce slightly.
- 5 When the cooker comes to Heat Preservation mode, mix the cooked grains properly.
- 6 Put germinated brown rice in the mold, add fried pumpkin, and then after putting germinated brown rice again and evening it, take out from the mold.
- 7 Heap up mushroom mixed with brown gravy sauce, and place shredded sesame leaf.

Nutritious Rice

Nutritious Rice



Ingredients

Rice 4 cups, fresh ginseng 4 roots, chestnut 4 units, jujube 4 units, ginkgo nut 12 units and refined rice wine 2 tablespoon
Marinade: Soy sauce 4 tablespoon, chopped scallion 2 tablespoon, crushed garlic 1/2 tablespoon, red pepper powder 1/2 teaspoon, ground sesame mixed with salt 2 teaspoon and sesame oil 1 teaspoon

Recipe

- 1 Cut out the rhizome of fresh ginseng clearly and chop them into slices.
- 2 Peel the skin of chestnuts and cut them into two pieces. After washing jujubes clean and separating their seeds from them, cut them into two pieces.
- 3 Stir-fry ginkgo nuts with some oil and peel their skins, or put ginkgo nuts in boiled water for 2~3 minutes and peel their skins with a spoon.
- 4 After putting clean-washed rice in the inner pot and pouring water by white rice water scale 4, stir it up with two tablespoons of refined rice wine.
- 5 Put fresh ginseng, chestnuts, ginkgo nuts and jujubes prepared in step No.4.
- 6 After locking the cover and choosing Nutritious Rice in the menu, push Pressure Cook/Turbo button.
- 7 Mix rice when cooking is finished, mix marinade prepared according to your preference with rice.

References

When nutritious rice is cooked, there may be differences in melanoidine according to amount or conditions of materials (jujube, fresh ginseng) after cooking is completed. Therefore, control the amount of food according to your preference.

Rice Cooked with Nut



Ingredients

4 cups of rice, 4 nuggets of walnuts, 2 table spoonful of pine nut, 2 table spoonful of almond, 2 table spoonful of cashew nut, 15 grains of ginkgo nut
SEASONING SAUCES: 4 table spoonful of soy sauce, 1/2 teaspoonful of pepper powder, 2 teaspoonful of ground sesame mixed with salt, 2 table spoonful of minced spring onion, 1/2 table spoonful of minced garlic, 1 teaspoonful of sesame oil

Recipe

- 1 As for walnut, macerate it in warm water after removing husks and eliminate inner husk.
- 2 Regarding ginkgo nut, peel it off by adding a little oil and frying it, or by rubbing it with spoon etc while boiling it for 2 to 3 minutes in water.
- 3 Put clearly washed rice into My Caddion, and after pouring water up to white rice water graduation 4, add 1 table spoonful of refined rice wine.
- 4 Put the walnut, ginkgo nut, almond and cashew nut prepared in the above 1, lock the lid, and after selecting Nutritious Rice by pressing Menu button, press Pressure Cook/Turbo button.
- 5 Once cooking is completed, put the prepared seasoning sauce and enjoy the food by mixing together.

Mushroom Bamboo Shoot Cooked Rice



Ingredients

4 cups of rice, 60g of beech mushroom, 40g of winter mushroom, 4 nuggets of button mushroom, 60g of king oyster mushroom
SEASONING SAUCES: 4 table spoonful of soy sauce, 1/2 table spoonful of pepper powder, 2 table spoonful of ground sesame mixed with salt, 2 table spoonful of minced spring onion, 1/2 table spoonful of minced garlic and 1 table spoonful of sesame oil

Recipe

- 1 Tear beech mushroom and winter mushroom slice by slice after washing, and peel off and slice button mushroom.
- 2 Slice king oyster mushroom lengthwise and cut them equally to a size good to each.
- 3 Put clearly washed rice into My Caddion, and after pouring water up to white rice water graduation 4, put 1 table spoonful of refined rice wine.
- 4 Put the mushroom prepared in the above 3, lock the lid, and after selecting Nutritious Rice by pressing Menu button, press Pressure Cook/Turbo button.
- 5 Once cooking is completed, put the prepared seasoning sauce and enjoy the food by mixing together.



COOKING GUIDE

Nutritious Rice

:: Assorted Bibimbap



Ingredients

4 cups of rice, 200g of oyster mushroom, 100g of bamboo shoot, 10 grains of ginkgo nut
SEASONING SAUCE: 4 tablespoons of soy sauce, 1/2 teaspoon of pepper powder, 2 teaspoon of ground sesame mixed with salt, 2 tablespoons of minced spring onion, 1/2 tablespoon of minced garlic and 1 teaspoon of sesame oil

Recipe

- As for oyster mushroom, tear the mushroom to a size good to eat after washing, and regarding bamboo shoot, remove the white parts between the combs by parboiling them slightly, and slice them by highlighting the comb shape.
- As for ginkgo nut, peel them by frying after adding a little bit of oil, or by rubbing with spoon etc while boiling for 2 to 3 minutes in boiling water.
- Put cleanly washed rice into My Caldron, and after pouring water up to white rice water graduation 4, put 1 tablespoon of refined rice wine.
- Put the oyster mushroom, bamboo shoot and ginkgo nut prepared in the above ②, lock the lid, and after selecting **Nutritious Rice** by pressing Menu button, press **Pressure Cook/Turbo** button.
- Once cooking is completed, put the prepared seasoning sauce and enjoy the food by mixing together.

Healthy Porridge

:: Pine Nut Porridge



Ingredients

Rice 1 cup, pine nut 1/2cup and some salt

Recipe

- Wash rice and pine nuts clean.
- Put rice on a landing net and crush pine nuts with an electric mixer.
- Pour water on the rice and the crushed pine nuts by nutrition porridge water "scale 1.5".
- After locking the cover and choosing **Porridge** in the menu, push **Pressure Cook/Turbo** button.
- Mix rice when cooking is finished, and stir it with salt according to your preference.

References

- It is important to cook porridge according to the time. And cooled down porridge or reheated porridge is not tasty.
- It is good to eat it with watery plain kimchi, well-digesting fish boiled in soy sauce and Polack lint.
- White porridge is cooked in the same way as pine nut porridge in the from of putting only rice.
- How to select pine nut made in Korea** : There is gloss and luster, and almost no covers of embryo of pine nut. It has pine nut perfume and pine resin perfume.

:: Abalone Porridge



Ingredients

A cup of rice, 1 tablespoon of sesame oil, 1 piece of abalone, a little bit of salt

Recipe

- Wash rice clean and let them swell.
- Wash the abalone by rubbing it with brush, and after taking out intestines, slice it thin.
- Put rice and abalone into My Caldron, and after adding sesame oil, mix the properly.
- Pour water up to Nutritious Porridge water graduation 1.
- Lock the lid, press MENU button, and after selecting **Porridge**, press **Pressure Cook/Turbo** button.
- When the cooker comes to Heat Preservation mode, put salt to your preference, and stir the cooked grains slightly.

References

- To cook shrimp porridge or oyster porridge, cook the same manner to suit your taste.
- Difference of Natural Abalone and Cultured One**: Mostly natural abalone assumes blackish brown or reddish brown, and cultured one green.

Special Porridge

:: Special Chicken Porridge



Ingredients

Rice 1cup, chicken 100g, chicken soup 600cc, green pepper 1 unit, red pepper 1 unit and some salt
Seasoning : Chopped scallion 1 tablespoon, crushed garlic 1 tablespoon, soy sauce 2 tablespoons, some ground sesame mixed with salt, sesame oil 2 teaspoons and some ground pepper

Recipe

- Wash rice clean and put it in water for more than one hour.
- Boil well-trimmed chicken for a long time. Tear it into pieces and season them with the above materials.
- Separate seeds from red peppers and green peppers and chop them into pieces.
- Remove oil from chicken soup and put it on absorbent gauze.
- Put step No. 1, 2 and 3 into the inner pot and pour the chicken soup.
- Pour water by nutrition porridge water "scale 1.5".
- After locking the cover and choosing **Porridge** in the menu, push **Pressure Cook/Turbo** button.
- Mix rice when cooking is finished and stir it with salt according to your preference.

:: White Porridge



Ingredients

Rice 1 cup

Recipe

- Wash rice clean and put it into the inner pot. And pour water by nutrition porridge water "scale 1".
- After locking the cover and choosing **Porridge** in the menu, push **Pressure Cook/Turbo** button.

Porridge is one of the oldest food developed in our tradition and culture.

It is presumed that people in the New Stone Age with agricultural culture boiled grain with water. It is the origin of porridge.

:: Red Bean Porridge



Ingredients

2/3 cups of rice, 1/3 cups of red bean, 2/3 cups of glutinous rice

Recipe

- Wash rice clean, and soak it in water for 30 minutes or more.
- Boil red bean in strong fire, throw away red bean water, and boil it again slowly until red bean blasts in weak fire by pouring water again.
- Put the boiled red bean with sieve, and filter only red bean water by crushing.
- Boil glutinous rice powder taken out from sieve of No. 2 to 3, and after pasting it with cooled water, make small dumpling in red-bean gruel.
- Put previously soaked rice into My Caldron, and pour red bean water up to Nutritious Porridge water graduation 2.
- Put small dumpling in red bean gruel and red bean, press MENU button, and after selecting **Porridge**, press **Pressure Cook/Turbo** button.

* For chewy taste, red bean grains may be used depending on preference.



Ginseng Chicken Soup

:: Ginseng Chicken Soup



Ingredients

1 chicken(600g), 1 root of susam ginseng, 5 dates, 1 cup of glutinous rice, a little bit of salt, pepper powder and garlic

Recipe

1. Make cuts on the bottom and both sides of prepared chicken stomach, and punch hole.
2. Fill glutinous rice and garlic soaked for 2 hours or more in the stomach of the trimmed chicken. (If glutinous rice is not soaked, it may be under-cooked.)
3. To make the gravy thick depending on preference of taste, put half of the glutinous rice into stomach, and take out the rest half outside.
4. Insert two legs into the cut hole, and fix them.
5. Put the prepared chicken into My Caldron, and after putting in cleanly washed susam ginseng and dates, pour water up to White Rice water graduation 6.
6. Lock the lid, press MENU button, and after selecting [Chicken Soup], press [Pressure Cook/Turbo] button.

References

Pouring too much water may cause soup water to gush out during discharge of pressure after completion of cooking. Take caution to prevent physical injury.

How to Select Soft and Delicious Chicken

Relatively soft and mild in taste and easily digestible and absorbable, chickens are growing in demand. While beef and pork require long maturing time like 15 to 16 days, chicken is most soft and delicious in the morning of the day after it is slaughtered. And thus, most delicious chickens are the ones in the dinner table served sold in the store that slaughters live chicken if possible, or sold after being slaughtered in the morning. As for choosing chicken from among live ones, the ones with cloudy eyes or protruded anus are sick, so choose the ones whose leg muscles are chubby and tight. In case of buying already slaughtered chicken in whole, the ones with clearly visible transparent or light yellow hair holes are fresh. Delicious are the ones of 1 year or less old after birth, and the more the soft cartilages are found when chest bone tip is touched, the younger the chicken is. When buying parts of chicken, choose the one with hard and glossy flesh. If skin is properly attached and fats are properly attached between flesh and skin, cross section should be smooth.

※ Excessive intake of high protein tonic food may cause acidification of body fluid, aging of cells and increase of fatigue. Eat vegetables and fruits always when eating chicken.

Baby Food

:: Sweet Potato & Apple Porridge



※ End of eating baby food (older than 12 months)

Ingredients

Sweet potato 70g, apple 70g, water 2 tablespoon and some honey

Recipe

1. Peel the skins of apple and sweet potato and cut them into thin slices.
2. Place the recipe no.1 and with 1/4 cup of water in the inner pot.
3. After locking the cover and choosing Multi Cook in the menu button, push Pressure Cook/Turbo button after setting up the time of universal steam for 20 minutes.
4. After cooking is completed, mash up it with a rice paddle and mix it with some honey.

References (Notes)

The latter period of eating baby food (9~12 months old) : As the period when a baby can eat soft solid food, please feed the baby three times a day in designated time.

End of eating baby food (older than 12 months) : As the baby is in the middle of transition period, please feed the baby various kinds of food to eat everything he/she is served.

※ Please feed the baby shellfish, shrimp, raw milk, honey, tomato or corn when he/she is older than 12 months because they might cause allergy.

※ Please feed the baby with extra attention because allergic ingredients of baby food or period of eating might be different depending on the baby.

:: Steamed rice and tofu with vegetable



※ End period of baby food (after 10~12 months)

Ingredients

50g of rice, 30g of tofu, 10g of carrot, 10g of young pumpkin, 1/2 egg, 4 table spoons of milk

Recipe

1. Mash tofu after removing water from it, chop carrot and young pumpkin into fine pieces.
2. Mix egg and milk together.
3. Put rice, tofu, carrot, young pumpkin into the inner pot, pour the mixture of milk and egg, then mix it well.
4. Lock the cover, select Multi Cook menu by pressing the menu button, set multipurpose steam time as 10 minutes, and press the Pressure Cook/Turbo button.
5. Mix it well with a spatula after multipurpose steam is completed.

:: Soft rice with tuna and vegetable



※ End period of baby food (after 10~12 months)

Ingredients

50g of rice, 30g of tuna (can), 10g of bell pepper, 10g of carrot, 1/2 cup of water, butter, little bit of laver powder

Recipe

1. Pour out oil from tuna, tear it up into little pieces with chopsticks.
2. Finely chop bell pepper and carrot.
3. Mix rice, tuna, bell pepper, and carrot.
4. Spread butter on the bottom of inner pot, put ingredients of ③, and pour water.
5. Lock the cover, select Multi Cook menu by pressing the menu button, set multipurpose steam time as 15 minutes, and press the Pressure Cook/Turbo button.
6. Mix it well with a spatula after multipurpose steam is completed.



COOKING GUIDE

Multi Cook

:: Steamed Rib



Ingredients

Beef rib (port rib) 900g, sake 2.5 tablespoons, nicely aged soy sauce 4 tablespoons, crushed garlic 1 tablespoon, sesame oil 1 teaspoon, onion juice 2 tablespoons, pear juice 2 tablespoons, sugar 1 tablespoon, chopped scallion 2 tablespoons, ground sesame mixed with salt 1 tablespoon, ground pepper 1 teaspoon, carrot 1/2 unit, chestnut 5 units, ginkgo nut 10 units and ground pine nuts 1 tablespoon

Recipe

- 1 Remove fat and tendons from chopped rib and remove blood by putting it in cold water.
- 2 Remove water by scooping it with a basket and keep the rib smooth by marinating it in sake and pear juice.
- 3 Peel the skins of chestnuts and divide large chestnuts into two pieces. Stir-fry ginkgo nuts with oil and peel the skins of ginkgo nuts. Cut carrots into chestnut-size pieces.
- 4 Mix all the prepared ingredients with seasoning and marinate them for one hour. After that, put them in the inner caldron (it is not necessary to pour additional water since it is cooked with moisture from ribs and marinate)
- 5 After locking the cover and choosing **Multi Cook** in menu button, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 35 minutes.
- 6 After cooking is completed, scatter ground pine nuts on the steamed rib.

:: Steamed Chicken



Ingredients

1 chicken (900g), potato 50g, carrot 50g, sugar 2 tablespoons, chopped scallion 1 teaspoon, crushed garlic 1 teaspoon, nicely aged soy sauce 4 tablespoons, ginger juice 1/2 teaspoon, ground pepper 1/2 teaspoon, ground sesame mixed with salt 1 tablespoon and sesame oil 1.5 tablespoons.

Recipe

- 1 Wash a chicken, clean and remove feathers and internal organs and cut the fat in the tail.
- 2 After cutting the chicken into a suitable eating size, make cuts in the chicken to make it well-seasoned and to roast quickly.
- 3 After putting carrots, potatoes and sliced chicken in a large bowl and mixing them with prepared seasoning, marinate.
- 4 Put enough marinated chicken, potatoes and carrots in the inner caldron.
- 5 After locking the cover and choosing **Multi Cook** in menu button, push **Pressure Cook/Turbo** button after setting up the universal steam times to 45 minutes.

:: Boiled Pork



Ingredients

Pork (shank or pork belly) 400g, ginger 1EA, some garlic, onion 1EA, scallion 1EA and some kimchi

Recipe

- 1 Put two cups of water in the inner caldron and put the steam plate above it.
- 2 Cut pork into 2~3 pieces and put them on the steam plate with 2~3 pieces of ginger cut into thin slices.
- 3 After locking the cover and choosing **Multi Cook** in menu button, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 40 minutes.
- 4 After cooking is completed, put the pork on a plate with onion, garlic, scallion and kimchi.

Multi Cook

:: Five-flavor Pork



Ingredients

400g of pork, 1/3 cup of soy sauce, 2 tablespoons of sugar, a little bit of silk yarn. Five flavors: 4 grains of black pepper, 5cm of cinnamon, 2 pieces of star anise

Recipe

- 1 Bind pork with silk yarn tightly so that it may be cooked properly.
- 2 Put the bound pork in the container, and soak it by adding soy sauce, salt and the five flavors.
- 3 Put the materials of 2 into My Caldron, and pour 3 measuring cups of water.
- 4 Lock the lid, press **MENU** button, and after selecting **Multi Cook** and setting all-purpose steaming time to 40 minutes, press **Pressure Cook/Turbo** button.
- 5 Once the cooking is completed, take out the pork and release silk yarn by cutting it with scissors. Cool down five-flavor pork, and put it on the plate by slicing it to 0.2cm thickness.

:: Hard-boiled Cuttlefish



Ingredients

1 squid fish, 70g of spinach, 80g of carrot, 1 egg, a little bit of salt, a little bit of sesame oil, a little bit of wheat powder. Seasoning Sauces: 1 tablespoonful of red pepper paste, 1 tablespoonful of soy sauce, 1 tablespoonful of sugar, 1 tablespoonful of refined rice wine, 1 refined rice wine, 1/2 teaspoonful of sesame oil, 1/2 teaspoonful of red pepper powder

Recipe

- 1 Divide squid-fish half, remove intestines and after washing clean by peeling it off, make cuts both to length and breadth inside.
- 2 Put a little bit of salt in boiling water, blanch the body of the cut squid-fish, and blanch the eggs as well by trimming them.
- 3 Wash spinach clean by trimming it, blanch it slightly after adding salt, remove water content by rinsing it in cold water, blanch carrot in boiling water by shredding it, and mix both of them with salt and sesame oil.
- 4 Loosen up egg by adding salt in it, and paste it throughout the squid-fish area.
- 5 Wipe water content of the blanched squid-fish, put a little bit of wheat powder inside, and after rolling spinach, carrot and squid-fish eggs fix them with skewer.
- 6 Put the rolled squid-fish, seasoning sauce and half cup water in My Caldron.
- 7 Lock the lid, press **MENU** button, and after selecting **Multi Cook** and setting all-purpose steaming time to 30 minutes, press **Pressure Cook/Turbo** button.

:: Steak



Ingredients

Beef (for steak) 200g, some steak sauce, some salt and some ground pepper

Recipe

- 1 After scattering ground pepper and salt on beef to suit its taste, put the beef in the inner caldron and pour 1/2 cup of water.
- 2 After locking the cover and choosing **Multi Cook** in menu button, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 35 minutes.
- 3 After cooking is completed, pour some steak sauce on the steak.

How to make wine sauce

After minding button mushrooms, garlic and onions, stir-fry the prepared material with salt and ground pepper. After boiling enough red wine, boil it down in ketchup, barbecue sauce, pepper corn and laurel leaves.



Multi Cook

:: Steamed Blue Crab



Ingredients

Blue crab 1EA, beef 150g, tofu 1/4 block, red/green pepper each 1/2EA, yolk 1/2EA and some flour

Recipe

- 1 Wash the blue crab clean and separate its body.
- 2 Crush meat of the separated body into thin slices.
- 3 After crushing beef and tofu into thin slices, mix them with the crushed crab meat.
- 4 After crushing red/green pepper into thin slices, mix them with yolk.
- 5 After scattering flour on the crab skin and filling up step no. 3 in the crab skin, cover it with step no. 4.
- 6 Pour one measuring cup of water in the inner caldron. After locking the cover and choosing **Multi Cook** in menu button, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 30 minutes.

:: Steamed Fish



Ingredients

Snapper 1EA, beef 50g, shiitake 3EA, stone mushroom 2EA, red pepper 1EA, egg 1EA, some scallion, some garlic, some soy sauce, some ground sesame mixed with salt, some cooking oil, some sesame oil, some salt and some ground pepper

Recipe

- 1 Make cuts on the well-trimmed snapper at intervals of 2cm.
- 2 Season crushed beef with soy sauce, scallion, ground sesame mixed with salt, garlic and ground pepper.
- 3 Pour the prepared seasoning on the snapper.
- 4 After pouring two cups of water into the inner pot, place the steam plate on it.
- 5 Put the prepared snapper on the steam plate.
- 6 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 30 minutes.
- 7 After cooking is completed, decorate it with the remaining garnish.

:: Steamed Clam



Ingredients

2 clams, 15g of beef, egg white 1/2EA, egg 1/2EA, 1 teaspoonful of minced Welsh onion, 1/2 teaspoonful of minced garlic, 1/4 teaspoonful of salt, a little bit of pepper grounds

Recipe

- 1 Mince beef neatly.
- 2 Cut cleanly rinsed clam half, and mince it neatly by taking out flesh attached to shell with knife.
- 3 Put minced beef and clam flesh in the container, and mix evenly by seasoning with minced Welsh onion, minced garlic, salt and pepper grounds.
- 4 Since 8 shells can be contained in the container, put seasoned substances lightly to a degree of 1/2EA per shell.
- 5 As the material may grow sticky, apply egg white evenly on top of clam flesh so that the shape may not be deformed even after steaming.
- 6 Pour 2 cups of water into My Caldron, and place steaming plate.
- 7 Put the prepared clam on the steaming plate.
- 8 Lock the lid, press MENU button, and after selecting **Multi Cook** and setting all-purpose steaming time to 35 minutes, press **Pressure Cook/Turbo** button.
- 9 Divide fully boiled egg into white and yolk, and after mincing the white neatly and crushing and putting the yolk on the sieve, put the egg yolk and white on the clam half each.

Multi Cook

:: Multi-Flavor Glutinous Rice



Ingredients

2 cups of glutinous rice, 30g of raisin, 10 chestnuts, 7 dates, 1 tablespoonful of pine nut, 70g black sugar, 1/2 tablespoonful of thick soy, 2 tablespoonful of sesame oil, a little bit of salt, 1/2 tablespoonful of cinnamon powder

Recipe

- 1 Wash glutinous rice clean, and soak it in water sufficiently for 1 hour or longer.
- 2 Prepare chestnuts and dates by cutting them to proper size.
(However, remove the husks and seeds of chestnuts and dates.)
- 3 Add black sugar, sesame oil, cinnamon powder and a little bit of salt into the previously soaked glutinous rice and mix them properly.
- 4 Put all the materials of 3 into My inner pot, and after selecting [White Rice], press **Pressure Cooking/Reheat** button.
- 5 Lock the lid, press MENU, and after selecting **Multi Cook**, press **Pressure Cook/Turbo** button.

:: Tteokbokki (spicy and sweet rice cake)



Ingredients

200g of rice cake bars (soft), 2 pieces of fish cake, 1/4 onion, 1/4 green onion, 40g of carrot
*marinade: 2 tablespoons of red pepper paste, 1 tablespoon of starch syrup, 1 tablespoon of sugar, 1 teaspoon of sesame salt, 1 teaspoon of soy sauce, 1/3 of anchovy water

Recipe

- 1 Wash out the rice cake bars with running water, and cut it into bite-size pieces.
- 2 Cut fish cake into 4 sections, julienne carrot and onion, and slice green onion obliquely.
- 3 Mix the ingredients for marinade and prepare marinade separately.
- 4 Put the ingredients with marinade into the inner pot, and mix it well.
- 5 Lock the cover, select **Multi Cook** menu by pressing the menu button, set multipurpose steam time as 20 minutes, and press the **Pressure Cook/Turbo** button.

:: Boiled egg



Ingredients

8 eggs, 3 cups of water, 1~2 drops of vinegar

Recipe

- 1 Put egg, water, and vinegar into the inner pot.
- 2 Lock the cover, select **Multi Cook** menu by pressing the menu button, set multipurpose steam time as 20 minutes, and press the **Pressure Cook/Turbo** button.



COOKING GUIDE

Multi Cook

:: Steamed Dumpling



Ingredients

Dumplings 15EA

Recipe

- 1 Pour two cups of water into the inner pot.
- 2 Put steam pot on the inner caldron and put dumplings on the steam plate.
- 3 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 25 minutes.

:: Steamed Eggplant



Ingredients

2 pieces of eggplants
Seasoning Sauces: 2 tablespoonful of thick soy, 1 red pepper, 1 green chili, 1/2 tablespoonful of red pepper powder, 1 tablespoonful of vinegar, a little bit of ground sesame mixed with salt, 1/2 pieces of Welsh onion, 4 pieces of garlic, 2 teaspoonful of sugar

Recipe

- 1 Chop eggplant to 4cm length, and after erecting it, make crosswise cuts.
- 2 Slice red peppers and green peppers small, mince Welsh onions and garlic, and make filling by adding thick soy, ground sesame mixed with salt, red pepper powder, sugar and vinegar.
- 3 Pour 2 cups of water into My Caldron, and after adding steaming plate, place sliced eggplant on top of it evenly.
- 4 Lock the lid, press MENU button, and selecting **Multi Cook** and setting all-purpose steaming to 30 minutes press **Pressure Cook/Turbo** button.
- 5 Once cooking is completed, put the filling prepared on the eggplant evenly.

:: Steamed Pumpkin



Ingredients

1/2 pumpkin
Seasoning Sauces: 1 tablespoonful of thick soy, 1 tablespoonful of minced Welsh onion, 1/2 tablespoonful of sesame oil, 1/2 table tablespoonful of red pepper powder, a little bit of shredded red pepper, 1 teaspoonful of sugar, 1 tablespoonful of minced garlic, 1/2 tablespoonful of ground sesame mixed with salt

Recipe

- 1 Slice pumpkin thin.
- 2 Make seasoning sauce by mixing minced Welsh onion, minced garlic, thick soy, shredded red pepper, red pepper powder, sesame oil, ground sesame mixed with salt, and sugar.
- 3 Pour 2 cups of water into My Caldron, put steaming plate in it, and after placing the sliced pumpkin on top of it, scatter seasoning sauce of 2 evenly.
- 4 Lock the lid, press MENU button, and after selecting **Multi Cook** and setting all-purpose steaming time to 30 minutes, press **Pressure Cook/Turbo** button.

Multi Cook

:: Steamed Chestnut



Ingredients

Chestnut 15EA

Recipe

- 1 Pour two cups of water into the inner pot.
- 2 Put steam pot on the inner caldron and put chestnuts on the steam plate (peel partial skin of chestnut to prevent bursting).
- 3 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 30 minutes.
- 4 When cooking is completed, be careful with the hot chestnuts.

:: Sweet Potato



Ingredients

Sweet potato 5EA
*When sweet potato is large (more than 150g), cut it into two pieces.

Recipe

- 1 Pour two cups of water in the inner pot.
- 2 Put steam pot in the inner caldron and put sweet potatoes on the steam plate.
- 3 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 35 minutes.
- 4 When cooking is completed, be careful with the hot sweet potatoes.

Diverse-effect of sweet potato

- Steamed sweet potato for constipation: When you take steamed sweet potato with its skin, it is good for constipation.
- Fresh sweet potato for weak person: Sweet potato includes a lot of vitamin B, mineral and carotene. Therefore, it is food with high nutrition. Especially, when taking ground fresh sweet potato, it is good for your health. Many kinds of enzymes are included in the fluid flown out from sweet potatoes.

:: Potato



Ingredients

Potato (less than 200g) 6EA

Recipe

- 1 Pour 1.5 cups of water into the inner pot.
- 2 Put steam pot on the inner caldron and put potatoes on the steam plate.
- 3 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 45 minutes.
- 4 When cooking is completed, be careful with the hot potatoes.

How to keep potato

When potatoes are kept at normal temperature in the summer, it sprouts right away. Therefore, it is good to keep them in the refrigerator. If there is a great amount, put potatoes in a bag and keep it in a opened carton box. At this time, putting one or two apples together with potatoes will be helpful to prevent sprouting because of the effect of enzymes in apple.



Multi Cook

:: Steamed Bean Curd



Ingredients

1 set of bean curd, a little bit of salt
Seasoning Sauces: 1 tablespoonful of red pepper powder, 1 tablespoonful of minced garlic, a root of Welsh onion, a little bit of sesame oil, a little bit of ground sesame mixed with salt, a little bit of shredded red pepper, 3 tablespoonful of thick soy

Recipe

- 1 Divide bean curd set into two, slice them to 1cm thickness, and by scattering salt, remove water content.
- 2 Shred Welsh onion thin, and prepare seasoning sauce by mixing minced garlic, thick soy, red pepper powder, ground sesame mixed with salt, sesame oil and shredded red pepper.
- 3 Pour 1 1/2 cup of water into My Caldron, place steaming plate, and put the sliced bean curds on top of it evenly.
- 4 Lock the lid, press MENU button, and after selecting **Multi Cook** and setting all-purpose steaming time to 25 minutes, press **Pressure Cook/Turbo** button.
- 5 Once cooking is completed, take out bean curd, and apply seasoning sauce evenly on top of the bean curd.

:: Japchae (stir-fried vegetables, and shredded meat)



Ingredients

Cellophane 50g, paprika (green, red) each 1EA, carrot 70g, onion 70g, some spinach, enoki mushroom 70g, fishcake 70g and cooking oil 1 tablespoon

Recipe

- 1 After cutting paprika, onion, carrot and fish cake into thin slices, wash enoki mushroom clean, and blanch spinach in boiling water. Cut it after removing from water. (paprika and carrot 2~3mm, onion and fish cake: 5mm)
- 2 After soaking cellophane in lukewarm water for 20 minutes, wash it with cold water (When cellophane is soaked for a long time, cellophane may be too soft or agglomerated. According to preference, soak cellophane for 10 minutes~30 minutes.)
- 3 After putting two tablespoons of cooking oil, 1/2 cup of water and cellophane in the inner caldron, put the prepared fish cake, carrot, onion and paprika together.
- 4 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo**, after setting up the time of universal steam to 25 minutes (When cellophane is too soft or when you want more chewy noodle, set up the time of universal steam for 20 minutes)
- 5 After cooking is completed, put spinach blanched in boiled water and mix with soy sauce, sesame oil and sugar according to your preference. Scatter sesame seeds or ground sesame mixed with salt on the seasoned Japchae.

Multi Cook

:: Corn



Ingredients

Corn 4EA

Recipe

- 1 Pour two cups of water into the inner pot.
- 2 Put steam pot in the inner caldron and put corn on the steam plate.
- 3 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 40 minutes.
- 4 When cooking is completed, be careful with the hot corn.

:: Fresh Cream Cake



Ingredients

Flour (weak flour) 1/2cup, egg 2EA, 1/2 tablespoon of butter, 1/2 tablespoon of milk, some vanilla perfume, 1/2cup of sugar and some salt
Whipped cream: 100cc of cream, 1/4cup of sugar
Fruits: Cherry 1EA, strawberry 3EA, 1/4 can of tangerine and kiwi 1EA

Recipe

- 1 Put salt in flour and sieve it.
- 2 Separate the yolk from an egg.
- 3 Put the white of an egg in a vessel and stir it in a fixed direction. When bubbles take place, put sugar by dividing it in several times. Stir up bubbles until they don't flow down when the vessel caves over.
- 4 Continue to stir while putting the yolk in recipe no.3 little by little and put some vanilla perfume.
- 5 When step no.4 becomes cream, mix with flour.
- 6 Mix boiled butter with milk.
- 7 After putting butter on the bottom and the side of the inner caldron, pour cake dough into the inner caldron.
- 8 After locking the cover and choosing **Multi Cook** in the menu, push **Pressure Cook/Turbo** button after setting up the time of universal steam to 40 minutes.
- 9 Cool down the cooled sponge cake.
- 10 After pouring whipped cream in a vessel and making bubbles to be regarded to be thick, put powdered sugar (put sugar in a cutter and grind it).
- 11 Apply cream on the cooled sponge cake.
- 12 Decorate it with different kinds of prepared fruit.

:: Steamed Rice Cake



Ingredients

5 cups of nonglutinous rice, 2 cups of adzuki beans, 1 tablespoonful of salt, 5 tablespoonful of sugar and 3 tablespoonful of water

Recipe

- 1 Put 3 tablespoonful of water into 5 cups of nonglutinous rice, and after mixing properly and sieving them once, mix with 3 tablespoonful of sugar.
- 2 As for adzuki beans, add salt (1 tablespoonful) and sugar (1 tablespoonful) while pounding them roughly by boiling free of water content.
- 3 Put steaming plate after pouring 1.5 cups of water into My Caldron, spread cloth of proper size by cutting it.
- 4 Spread 1 cup of adzuki bean crumbs, put steaming plate evenly, and create layers by adding 1 cup of adzuki bean crumbs again.
- 5 Select **Multi Cook** by pressing Menu button after locking the lid, and after setting All-purpose Steaming Time to 45 minutes, press **Pressure Cook/Turbo** button.



COOKING GUIDE

Multi Cook

:: Steamed egg



Ingredients

3 eggs, 1.5 cups of water or kelp water, 1/2 teaspoon of salted shrimps, pinch of salt, 15g of carrot, 15g of green onion

Recipe

- 1 Place egg and water or kelp water together and mix it well.
- 2 Finely chop carrot and the green part of green onion and mix it with ①.
- 3 Mince salted shrimps with little bit of water to make it soupy, mix it with ②, and season it with salt.
- 4 Lock the cover, select **Multi Cook** by pressing the menu button, set multipurpose steam time as 20 minutes, and press the **Pressure Cook/Turbo** button.

:: Rice cake gratin



Ingredients

100g of rice cake for tteokguk, 2 boiled egg, 2 sweet potato, 80g of mozzarella cheese, 2 slice of cheddar cheese, little bit of olive oil, 1 cup of white sauce, little bit of parsley powder
* White sauce: Flour, 20g of butter, 200g of milk, pinch of salt and white pepper (Melt butter, add flour and stir it, add milk and boil it until it gets thick, and apply salt and white pepper for seasoning)

Recipe

- 1 Wash the sweet potato with peel and cut it in a circular shape.
- 2 Cut the boiled egg with a cutter, steep rice cake in warm water.
- 3 Spread olive oil on the inner part evenly, pile up sweet potato, egg, and rice cake.
- 4 Spread white sauce on ③, put mozzarella cheese on top, cut cheddar cheese slice into 8 pieces and place it on top, and sprinkle parsley powder.
- 5 Lock the cover, select **Multi Cook** menu by pressing the menu button, set multipurpose steam time as 20 minutes, and press the **Pressure Cook/Turbo** button.

:: Shrimp ketchup fried rice



Ingredients

15 medium size shrimps, 1/3 green onion, 30g of onion, 30g of carrot

* Ketchup sauce: 4 tablespoons of ketchup, 1.5 tablespoon of sugar, 1.5 tablespoon of starch powder, 1.5 tablespoon of water, pinch of salt, soy sauce, and pepper powder

Recipe

- 1 Remove head and internal organs of shrimps, leave one joint at tail side and tail, peel off the skin, and wash it out with salt water.
- 2 Slice green onion obliquely, and chop onion in a size that is smaller than shrimps.
- 3 Place shrimp, green onion, and onion with ketchup sauce, and mix it well.
- 4 Lock the cover, select **Multi Cook** menu by pressing the menu button, set multipurpose steam time as 15 minutes, and press the **Pressure Cook/Turbo** button.
- 5 Mix it well with a spatula after multipurpose steam is completed.

Multi Cook

:: Rice pizza



Ingredients

* Dough ingredients: 200g of rice

* Topping ingredients: 4 slices of ham, 4 button mushrooms, 4 tablespoons of canned corn, 1 stick of crabmeat, 80g of mozzarella cheese, 8 tablespoons of pizza sauce

Recipe

- 1 Peel off the skin of button mushroom and cut it in its shape, and tear a crabmeat stick into pieces.
- 2 Cut sliced hams into squares, and remove water from the canned corn.
- 3 Place rice on the bottom of inner pot flatly.
- 4 Spread pizza sauce on the rice flatly using a spoon, and place topping ingredients on the top.
- 5 Place mozzarella cheese on ④, lock the cover, select **Multi Cook** menu by pressing the menu button, set multipurpose steam time as 20 minutes, and press the **Pressure Cook/Turbo** button.

:: Butter chocolate cake



Ingredients

120g of butter, 80g of sugar, 2 eggs, 70g of pancake powder, 50g of chocolate

Recipe

- 1 Leave butter on a room temperature until it gets soft then mix it with sugar on a round bowl.
- 2 Add eggs into ①, mix it with a whisk until it gets soft.
- 3 Pour pancake powder into ② and mix it with spatula.
- 4 Mix chocolate with ③, spread melted butter on the inner pot, pour the mixture and spread it flatly.
- 5 Lock the cover, select **[Multi Cook]** menu by pressing the menu button, set multipurpose steam time as 45 minutes and press **[Pressure Cook/Reheat]** button.

Cooking Guide 로 즐거운 요리를 만들어 보세요

주방문화를 선도하는 쿠쿠는 보다 맛있는 요리로 사랑하는 가족의 행복을
한단계 업그레이드 시켜 행복한 주방과 웃음소리가 귓가에 그득한 식탁을 만들어드리겠습니다.

요리 선택표

요리종류	메뉴선택	요 리 방 법
흰 죽	영양죽	1. 내솥에 준비된 재료를 넣고 용량에 따라 물을 적당한 영양죽 물눈금까지 부어 주십시오. 1인분 : 영양죽 눈금 1 1.5인분 : 영양죽 눈금 1.5 (※참고사항 : 영양죽 취사시의 최대용량은 1.5인분입니 다) 2. 뚜껑을 잠그고 메뉴/선택 버튼으로 「영양죽」을 선택 한 후 압력취사/백미쾌속 버튼을 눌러 주십시오.
팔 죽		
닭 죽		
장 죽		
전 복 죽		
새 우 죽		
굴 죽		
삼 계 탕	삼계탕	1. 내솥에 준비된 재료를 넣고 백미 물눈금 6/7까지 부어 주십시오. 2. 뚜껑을 잠그고 메뉴/선택 버튼으로 「삼계탕」을 선택한 후 압력취사/백미쾌속 버튼을 눌러 주십시오.
도가니탕		
갈 비 찜	만능찜	1. 내솥에 준비된 재료를 넣어 주십시오. 2. 뚜껑을 잠그고 메뉴/선택 버튼으로 「만능찜」을 선택한 후 만능찜 시간을 35분으로 설정한 뒤 압력취사/백미쾌속 버튼을 눌러 주십시오.
닭 찜		
고 구 마	만능찜	1. 내솥에 물을 계량컵으로 1.5~2컵 정도 부어 주십시오. 2. 찜판을 내솥에 넣고 준비한 재료를 찜판위에 올려 놓아 주십시오. 3. 뚜껑을 잠그고 메뉴/선택 버튼으로 「만능찜」을 선택한 후 만능찜 시간을 35분으로 설정한 뒤 압력취사/백미쾌속 버튼을 눌러 주십시오.

※ 요리설명은 쿠쿠홈페이지(www.cuckoo.co.kr)를 참조하세요.

만능찜 요리별 시간표

요리종류	요리시간	요리종류	요리시간
참치야채무른밥	10분	가 지 찜	30분
밥두부야채 찜		호 박 찜	
새우케첩볶음	15분	밤 찜	35분
계 란 찜	20분	약 밥	
떡 그 라 탕		대 합 찜	
떡 볶 이		고 구 마	
밥 피 자		갈 비 찜	
살 은 계 란		닭 찜	
고구마사과죽	25분	수 육	40분
만 두 찜		오 향 장 육	
두 부 찜		생 크림 케익	
잡 채	30분	육 수 수	45분
감오징어조림		버터초콜릿케익	
스 테 이 크		감 자	
꽃 게 찜		시 루 떡	
생 선 찜			





MEMO

MEMO



CUCKOO
always new